


Kohl's Home Textiles

How to Measure

600 – Bedding Products

Table of Contents

Sheets	Slides 3-5
Comforter/Blanket/Quilt/Coverlet/Bedspread/Throw	Slide 6
Comforter Cover (Duvet)	Slide 7
Pillow Covers	Slides 8-9
Bedskirt	Slide 10
Mattress Pad	Slide 11
Mattress Topper	Slide 12
Pillow	Slide 13
Dec Pillows	Slides 14-15

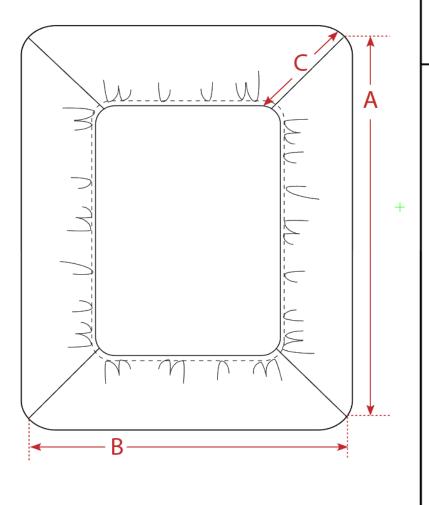


601-02 Sheet - Fitted

02A: Length Measure straight from corner to corner along edge.

02B: Width Measure straight from corner to corner along edge.

02C: Pocket Depth Measure from corner to edge along pocket seam.

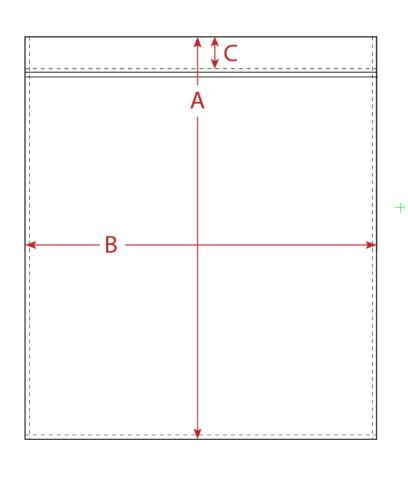



601-04 Sheet - Flat

04A: Length Measure straight from edge to edge at center.

04B: Width Measure straight from edge to edge at center.

04C: Cuff Width Measure straight from top edge to top hem stitch line.

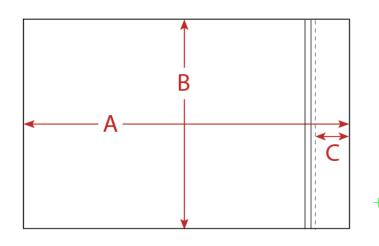

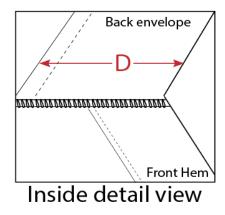


601-06 Sheet - Pillowcase

06A: Length Measure straight from edge to edge at center.

06B: Width Measure straight from edge to edge at center.

06C: Cuff Width Measure straight from top edge to top hem stitch line.

06D. Back Envelope Measure straight from top edge to bottom of envelope hem.

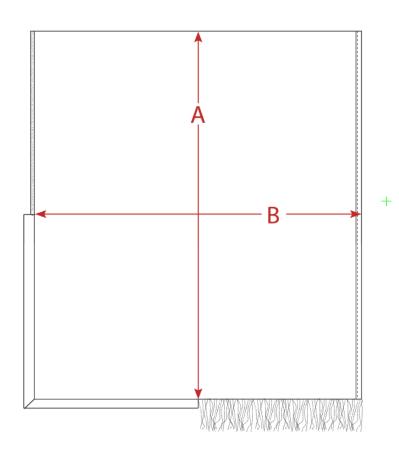

602-02


Comforter/Blanket/Quilt/ Coverlet/Bedspread/Throw

02A: Length

Measure straight from seam or edge to seam or edge at center, excluding any extension in measurement.

02B: Width

Measure straight from seam or edge to seam or edge at center, excluding any extension in measurement.

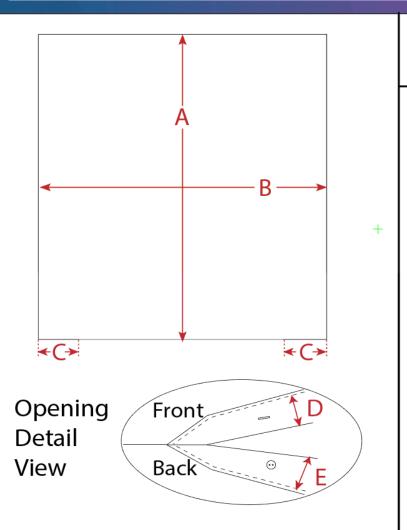

602-04 Comforter Cover (Duvet)


04A: Length
Measure straight from edge to opening
hem at center

04B: Width Measure straight from edge to edge at center.

04C: Opening Placement Measure straight from beginning of opening to nearest corner.

04D: Front Hem Opening Width Measure straight from edge to edge.

04E: Back Hem Opening Width Measure straight from edge to edge.

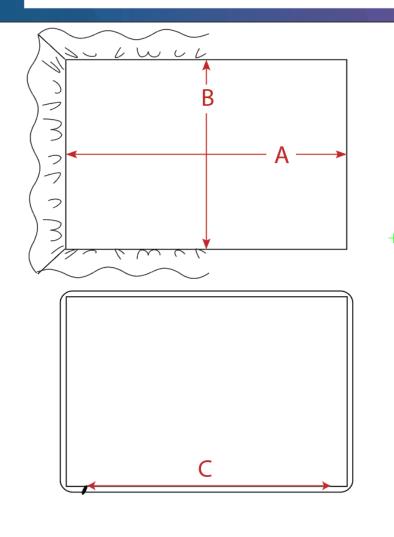

602-06

Pillow Cover - Knife Edge/Flange/Piping

06A: Pocket Length

Measure straight from seam to seam at center.


06B: Pocket Width

Measure straight from seam to seam

at center.

06C: Zipper Opening

Measure from end to end of opening

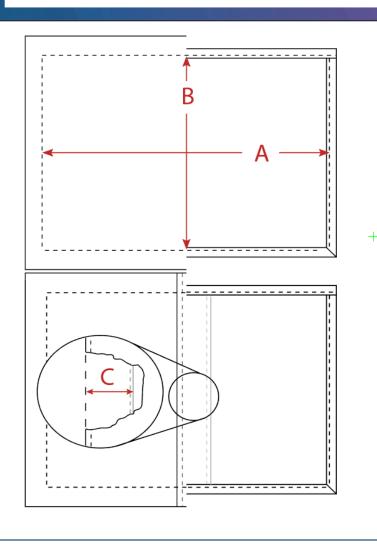


602-08 Pillow Cover - Bound/TS Flange

08A: Pocket Length Measure straight from stitch line to stitch line at center, (** excluding binding in measurement if applicable).

08B: Pocket Width Measure straight from stitch line to stitch line at center, (** excluding binding in measurement if applicable).

** Exclusion of binding on pillow cover measurement is an exception.

08C: Overlap Measure distance of overlap between edges of outer overlap and inner overlap on back.

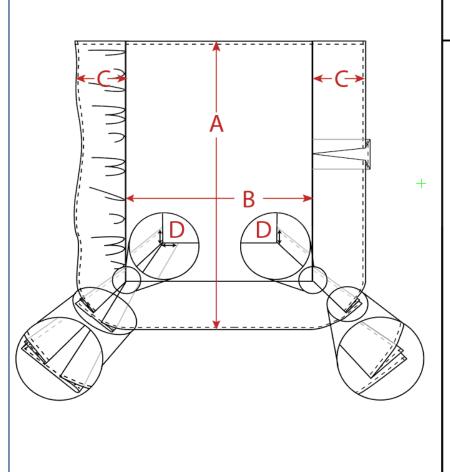


602-10 Bedskirt

10A: Platform Length Measure straight from top hem to seam at center.

10B: Platform Width Measure straight from seam to seam at center.

10C: Skirt Drop Measure straight from joining seam to bottom drop hem.

10D: Corner Wrap Measure straight from corner to hem or fold.

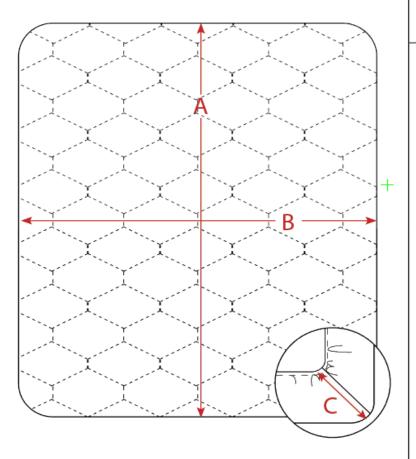


603-02

Mattress Pad

02A: Platform Length Measure straight from seam to seam at center.

02B: Platform Width Measure straight from seam to seam at center.

02C. Pocket Depth Measure from corner to edge along pocket seam.

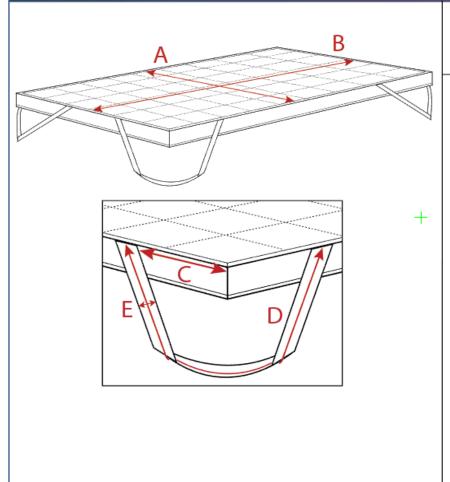

603-04

Mattress Topper


04A: Platform Length Measure straight from edge/seam to edge/seam at center.

04B: Platform Width Measure straight from edge/seam to edge/seam at center.

04C: Band Placement Measure straight from corner to first edge of band.

04D: Band Length Measure from edge/seam to edge/seam, following the curve.


04E: Band Width Measure straight across from edge to edge.

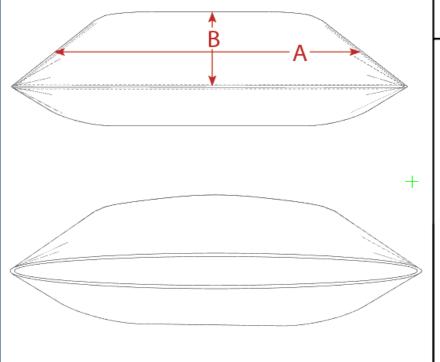

604-02 Pillow

02A: Length Measure straight from seam to seam at center, excluding piping in measurement.

02B: Width Measure straight from seam to seam at center, excluding piping in measurement.

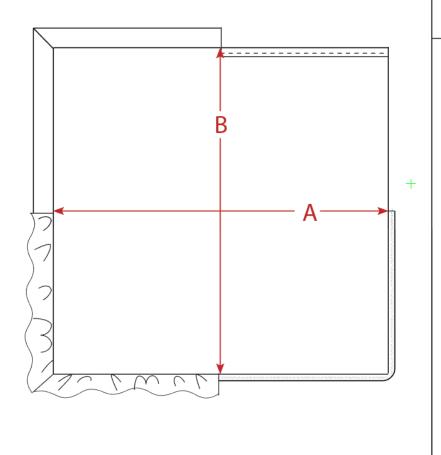


604-04 Dec Pillow/Pillow Form

04A: Length

Measure straight from seam or edge to seam or edge at center, excluding any extension in measurement.

04B: Width

Measure straight from seam or edge to seam or edge at center, excluding any extension in measurement.

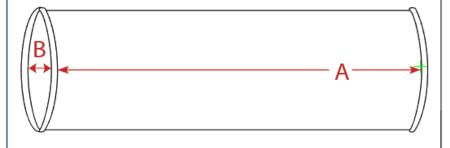

604-06 Dec Pillow Neckroll

06A: Length
Measure straight from seam to seam
at center, excluding piping in
measurement.

06B: Diameter Measure straight from seam to seam through center, excluding piping in measurement.