

HOW TO MEASURE GUIDE

PRIVATE & EXCLUSIVE BRANDS

HOME TEXTILES

All Private and Exclusive brands must follow measurement guidelines unless specified.



HOW TO MEASURE GUIDE

FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

Table of Contents

200 Series - Garment/Accessories

Headband/Wristband Page [4](#)

600 Series - Bedding

Sheets Page [5-6](#)
Comforter/Blanket/Quilt/Coverlet/Throw Page [7](#)
Comforter Cover/Duvet Page [7-8](#)
Pillow Cover Page [8-9](#)
Bedskirt Page [9](#)
Hooded Throw Page [10](#)
Mattress Pad Page [11](#)
Mattress Topper Page [11-12](#)
Pillow Page [13](#)
Dec Pillows Page [13-14](#)
Backrest Page [14-16](#)

700 Series - Bath

Towels Page [17](#)
Bath Wraps Page [18-20](#)
Hair Wrap Page [21-22](#)
Shower Curtain/Liner Page [23](#)

800 Series - Kitchen

Tablelinens Page [24](#)
Towel/Dishcloth Page [25](#)
Oven Mitt/Pot Holder Page [26-27](#)
Apron Page [28-29](#)

900 Series - Home Goods

Rugs & Door Mats Page [30](#)
Contour Rug Page [31](#)
Lid Cover Page [31](#)
Window Panel/Valance Page [32-33](#)
Window Tieback Page [34](#)

Trims

Button Page [35](#)
Buttonhole Page [35](#)
Corner Loop Page [36](#)
Elastic Stretch Ratio Page [36](#)
Flange Page [37](#)
Fringe Page [37](#)
Gather Ratio Page [38](#)
Grommet Page [38](#)
Gusset Page [39](#)
Handle Page [39](#)
Hanger Loop Page [40](#)
Inverted Pleat Page [40](#)
Loop Page [41](#)
Piping Page [41](#)
Pocket Page [42](#)
Scallop Page [42](#)
SPI Page [43](#)
Tassel Page [43](#)
Tie Page [44](#)
Zipper Page [44](#)



HOW TO MEASURE GUIDE


FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

The Kohl's How To Measure Guide is used both internally and externally to correctly demonstrate how Kohl's private label & exclusive brand merchandise is measured. It is necessary to use the correct measuring tools when following the measuring guidelines for all products in order to remain consistent with our specification requests.

The How To Measure Guide contains Point of Measure (POM), along with a description of how to measure and an illustration. The descriptions for each point may not always work for every situation. In these cases, the Vendor Owned Certified Technical Designer (VOCTD) should create a How To Measure specific image to include in the Vendor Tech Pack.


- All measurements are given in the nearest 1/8 of an inch, unless specified.

HEADBAND/WRISTBAND

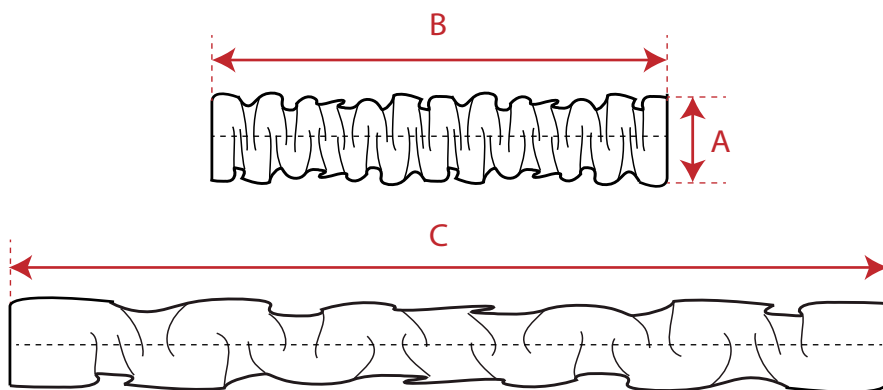


220-02A: Width: Lay flat, measure straight from edge to edge at center.
 220-02B: Length Relaxed: Lay flat, measure straight from edge to edge relaxed at edges.
 220-02C: Length Stretched: Lay flat, measure straight from edge to edge stretched at edges.

FITTED SHEET

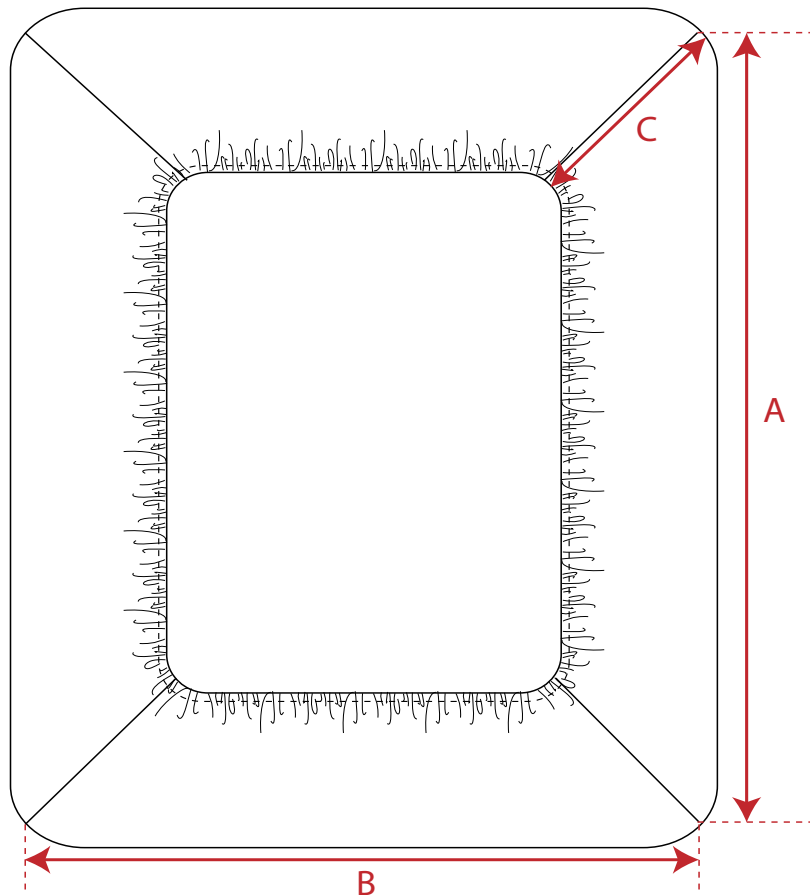


601-02A: Length: Measure straight from corner to corner along edge.
 601-02B: Width: Measure straight from corner to corner along edge.
 601-02C: Pocket Depth: Measure from corner to edge along seam.

FLAT SHEET

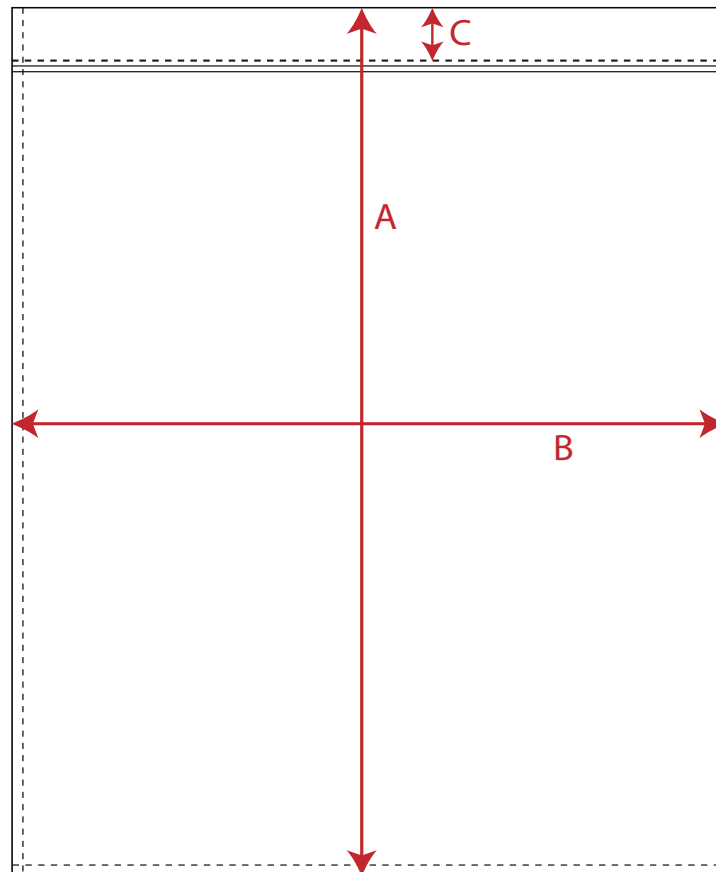

601-04A: Length: Measure straight from edge to edge at center.
 601-04B: Width: Measure straight from edge to edge at center.
 601-04C: Cuff Width: Measure straight from top edge to top hem stitch line.

PILLOWCASE

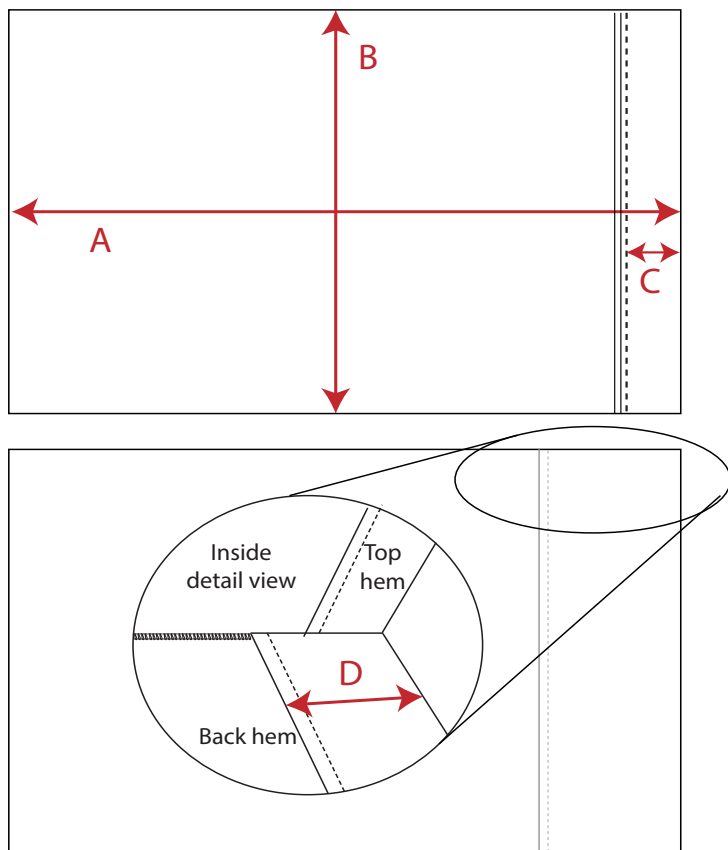


601-06A: Length: Measure straight from edge to edge at center.
 601-06B: Width: Measure straight from edge to edge at center.
 601-06C: Cuff Width: Measure straight from top edge to top hem stitch line.
 601-06D: Back Envelope: Measure straight from top edge to bottom of envelope hem.



HOW TO MEASURE GUIDE

FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES


COMFORTER/BLANKET/QUILT/COVERLET/THROW

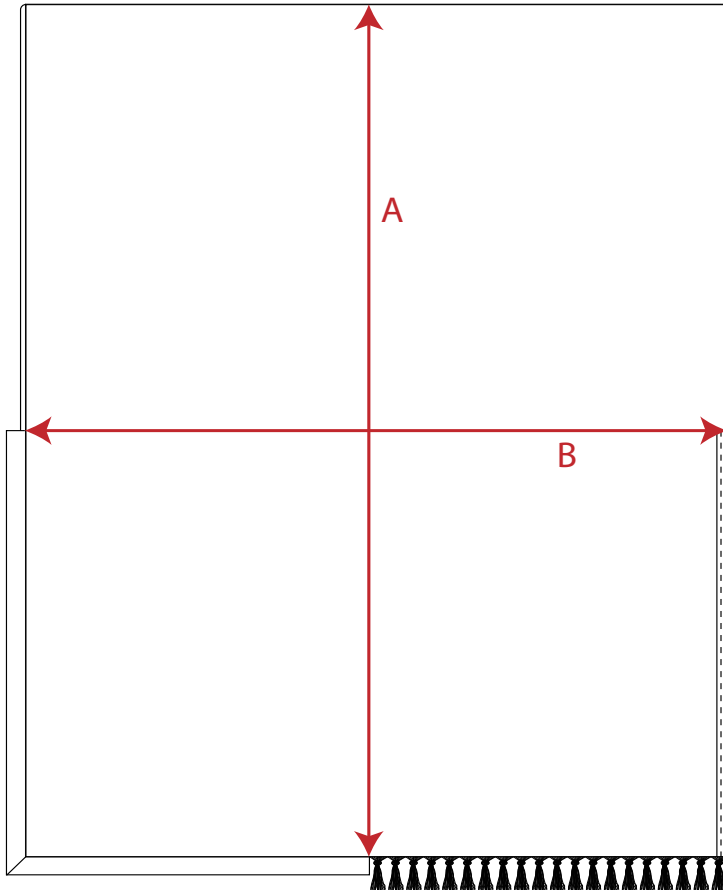

602-02A: Length: Measure straight from seam/edge to seam/edge at center, excluding any extension in measurement.

602-02B: Width: Measure straight from seam/edge to seam/edge at center, excluding any extension in measurement.

COMFORTER COVER

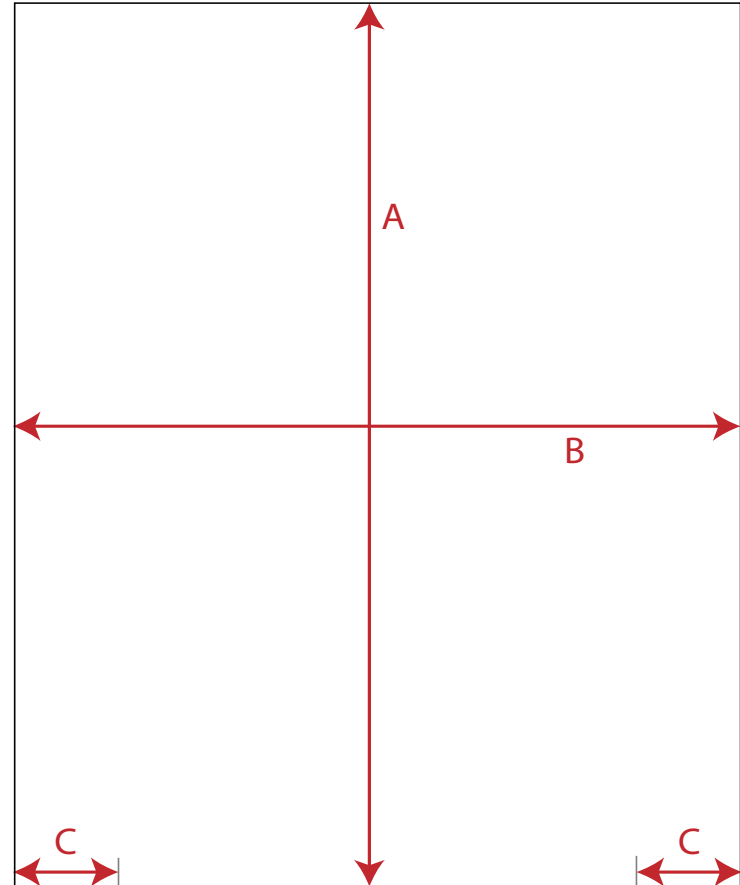


602-04A: Length: Measure straight from edge to opening edge at center, excluding any extension in measurement.

602-04B: Width: Measure straight from edge to edge at center, excluding any extension in measurement.


602-04C: Opening Placement: Measure straight from beginning of opening to nearest corner.

COMFORTER COVER (CONTINUED)

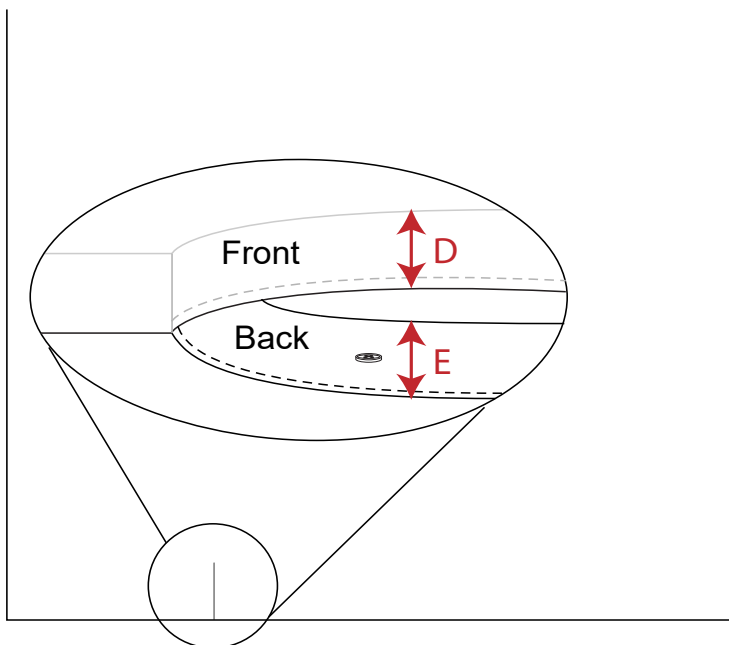


602-04D: Front Hem Opening Width: Measure straight from edge to edge.
602-04E: Back Hem Opening Width: Measure straight from edge to edge.

PILLOW COVER- KNIFE EDGE/FLANGE/PIPING

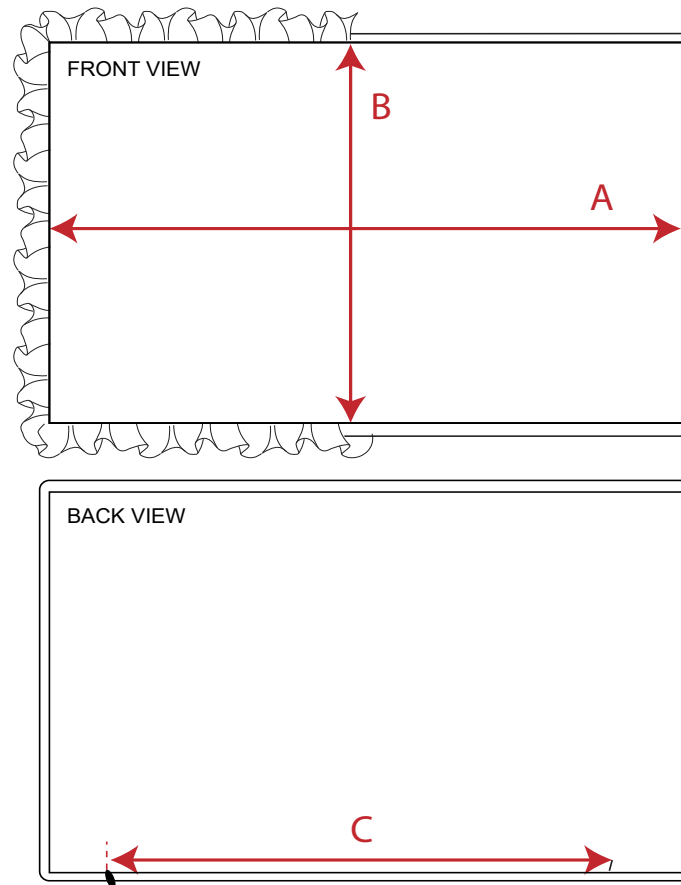

602-06A: Pocket Length: Measure straight from seam to seam at center.
602-06B: Pocket Width: Measure straight from seam to seam at center.
602-06C: Zipper Opening: Measure from end to end of opening.

PILLOW COVER - BOUND/TOPSTITCH FLANGE

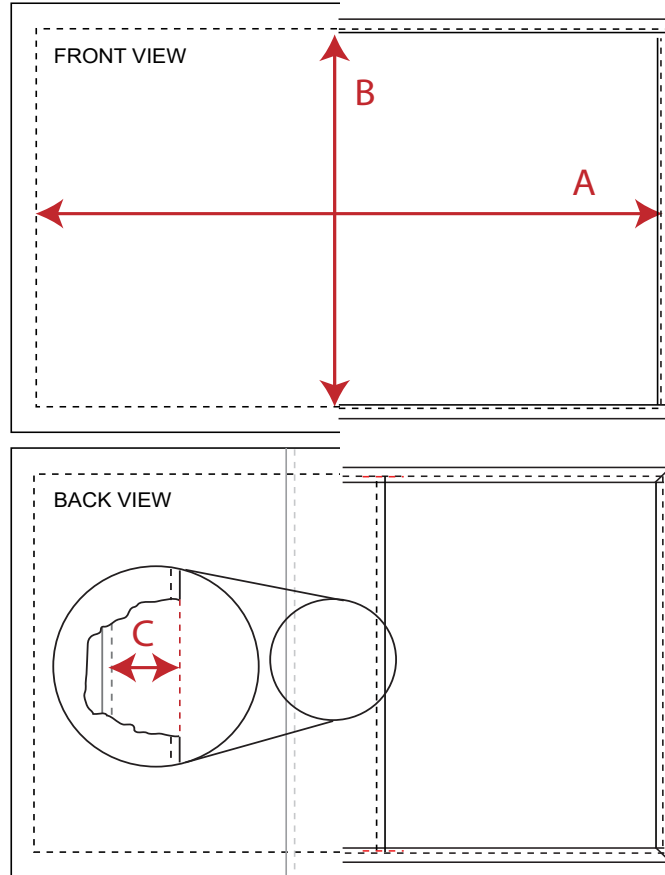


602-08A: Pocket Length: Measure straight from stitch line to stitch line at center **

602-08B: Pocket Width: Measure straight from stitch line to stitch line at center. **

**Exclusion of binding on pillow cover measurement is an exception.

602-08C: Overlap: Measure distance of overlap between edges of outer overlap and inner overlap on back

BEDSKIRT

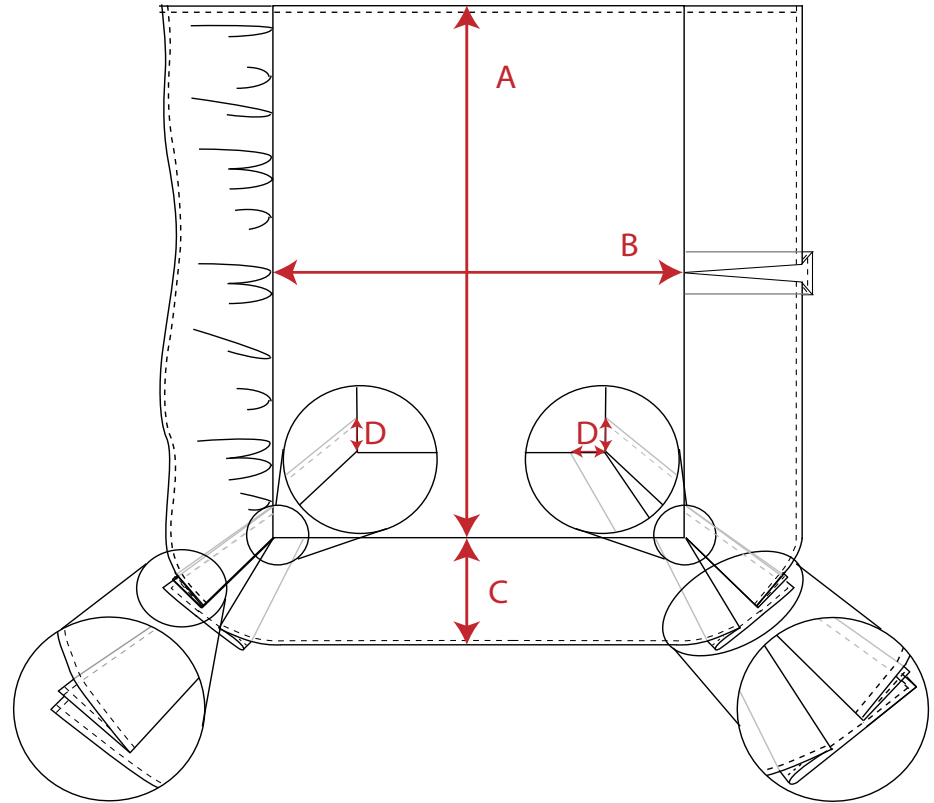


602-10A: Platform Length: Measure straight from top hem to bottom seam at center.

602-10B: Platform Width: Measure straight from seam to seam at center.

602-10C: Skirt Drop: Measure straight from joining seam to drop bottom hem.

602-10D: Corner Wrap: Measure straight from corner to hem or fold.

HOODED THROW

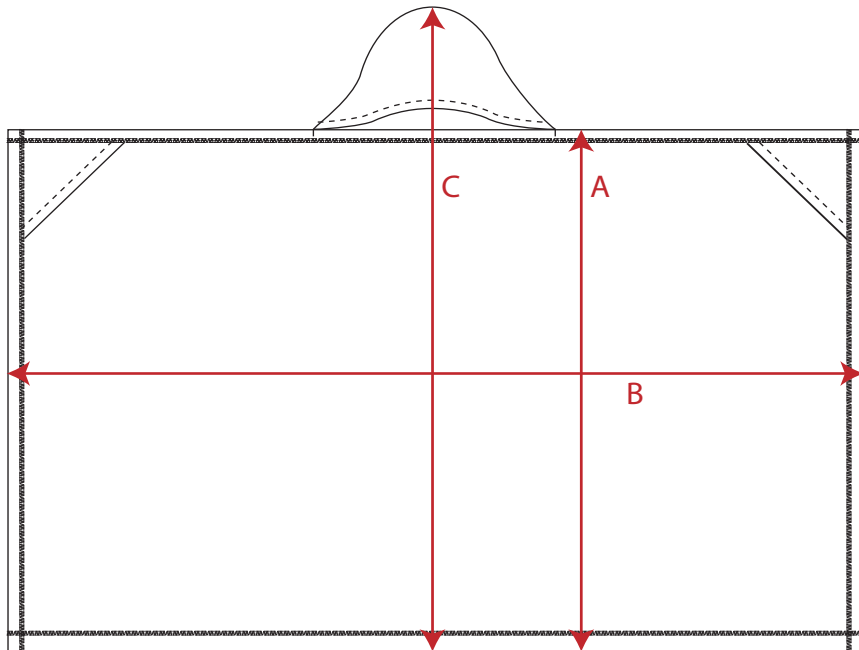


* Safety concern for hoods, work with design/production on sizing.


H602-12A: Width: Measure straight from edge to edge avoiding the hood.
H602-12B: Length: Measure straight from edge to edge at center.
H602-12C: Finished Height: Measure straight from top of hood to bottom edge at center.

HOODED THROW (CONTINUED)

FRONT VIEW

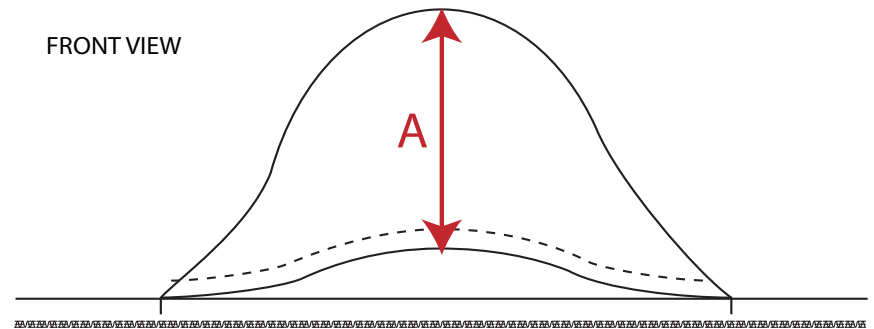

BACK VIEW

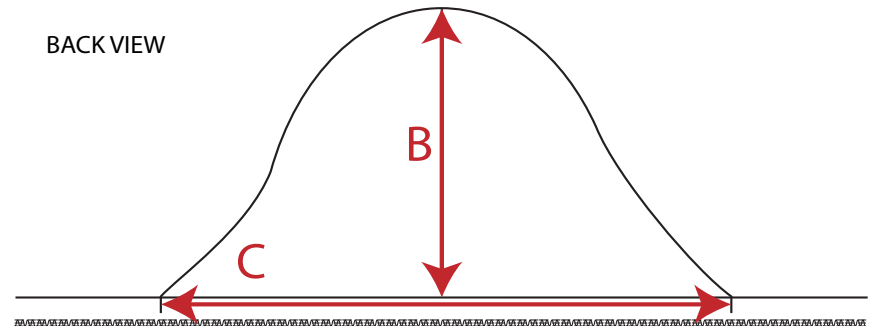

* Safety concern for hoods, work with design/production on sizing.


H602-14A: Front Hood Height: Measure straight from top edge of hood to bottom hem at center.
H602-14B: Back Hood Height: Measure straight from top edge of hood to hood seam at center.
H602-14C: Hood Width: Measure straight across from edge to edge at seam.




HOW TO MEASURE GUIDE

FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

MATTRESS PAD

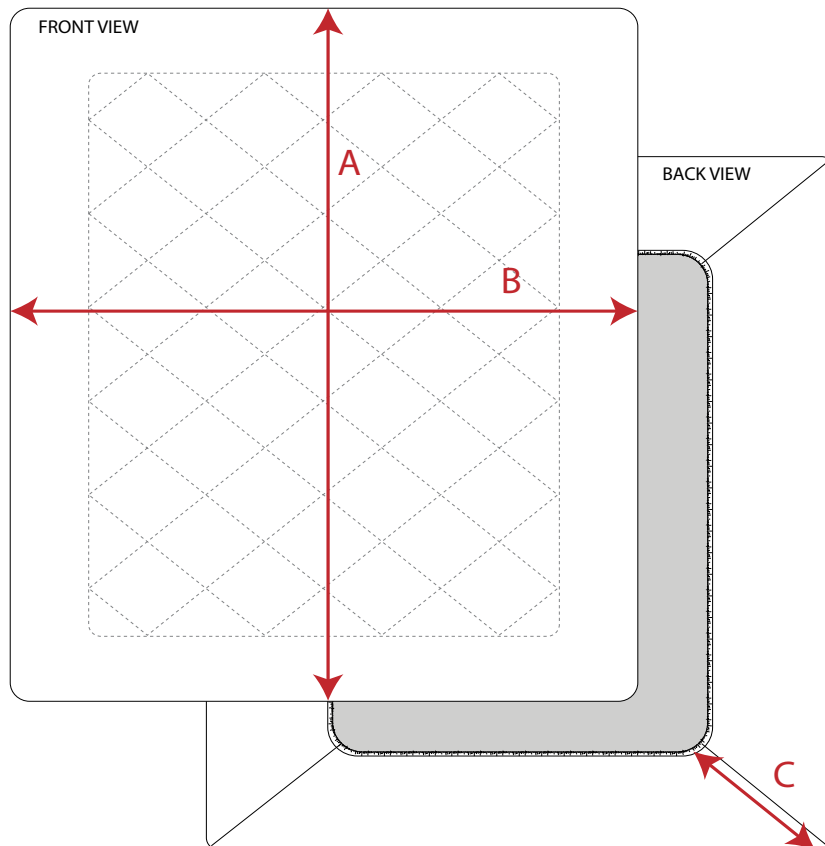


MATTRESS TOPPER

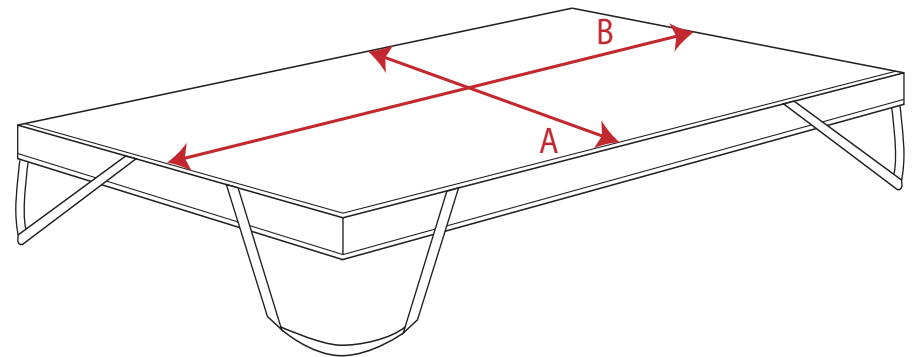

603-02A: Platform Length: Measure straight from seam to seam at center.
 603-02B: Platform Width: Measure straight from seam to seam at center.
 603-02C: Pocket Depth: Measure from corner to edge along pocket seam.

603-04A: Platform Length: Measure straight from edge/seam to edge/seam at center, excluding piping.
 603-04B: Platform Width: Measure straight from edge/seam to edge/seam at center, excluding piping.

MATTRESS TOPPER (CONTINUED)

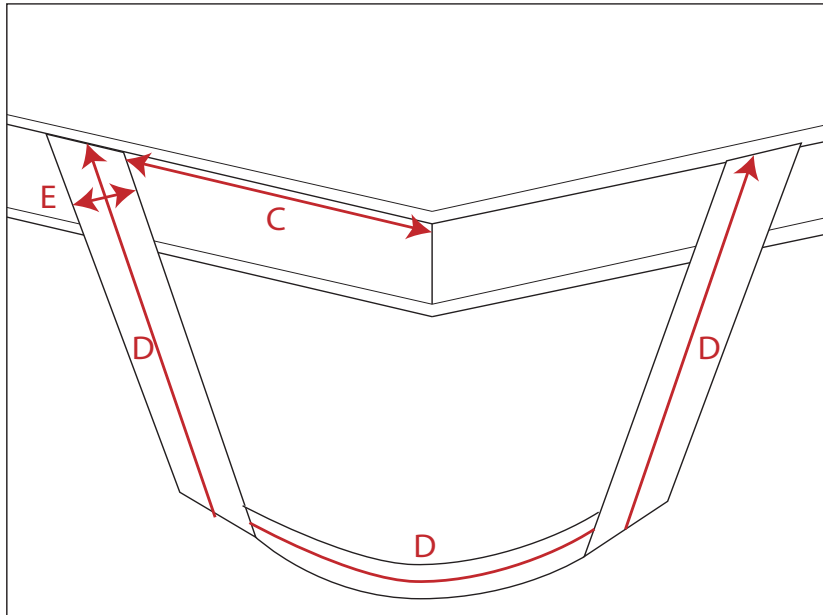


603-04C: Band Placement: Measure straight from corner to first edge of band.

603-04D: Band Length: Measure from seam to seam following the curve.


603-04E: Band Width: Measure straight across from edge to edge.

UTILITY PILLOW

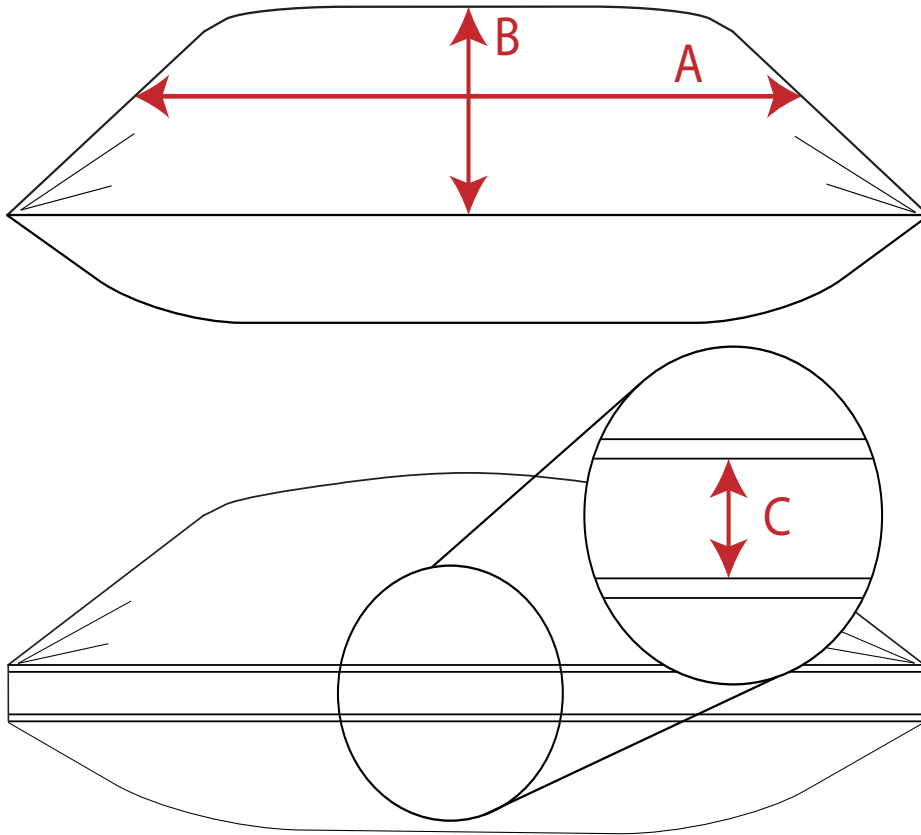


604-02A: Length: Measure straight from seam to seam at center.
 604-02B: Width: Measure straight from seam to seam at center.
 604-02C: Gusset: Measure straight from seam to seam at center.

DEC PILLOW/PILLOW FORM

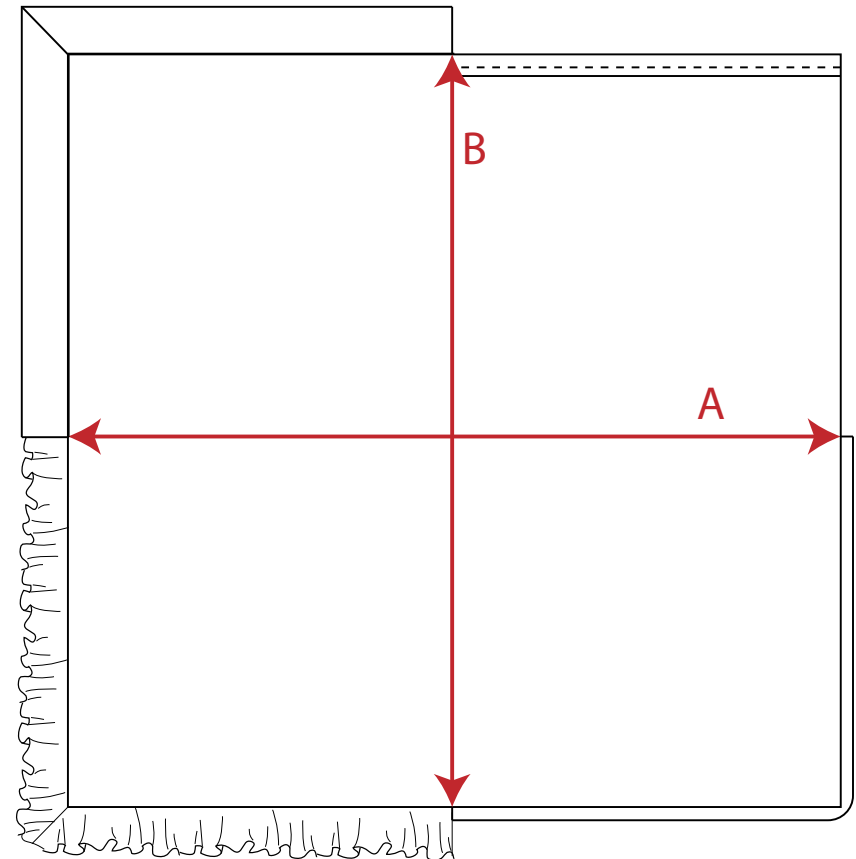


604-04A: Length: Measure straight from seam/edge to seam/edge at center, excluding any extension.
 604-04B: Width: Measure straight from seam/edge to seam/edge at center, excluding any extension.

NECKROLL/BOLSTER

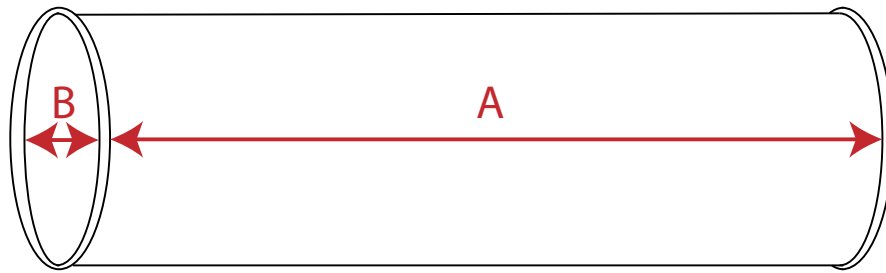


604-06A: Length: Measure straight from seam to seam at center, excluding piping.
604-06B: Diameter: Measure straight from seam to seam at center, excluding piping.

BACKREST

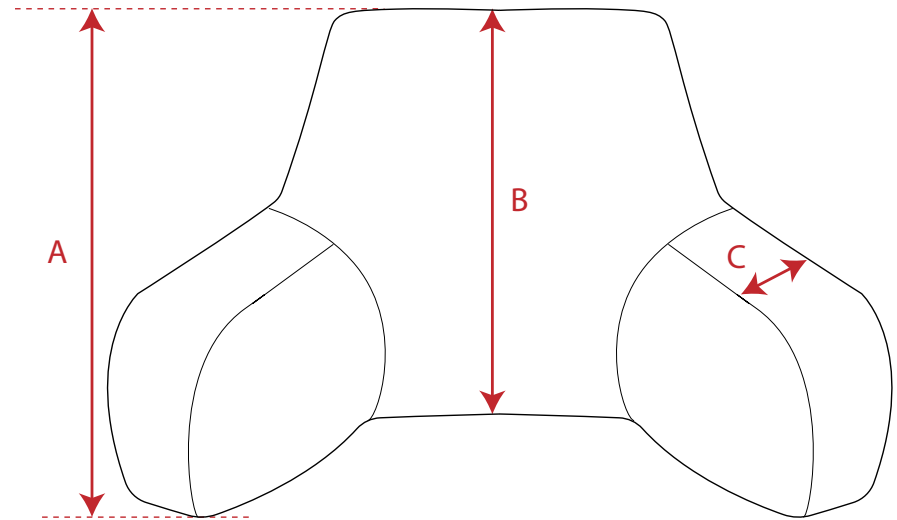


604-08A: Total Height: Measure straight up from floor to top of backrest.
604-08B: Front Height With Curve: Measure straight from bottom seam to top seam with the curve.
604-08C: Top Arm Seam Width: Measure straight from seam to seam.

BACKREST

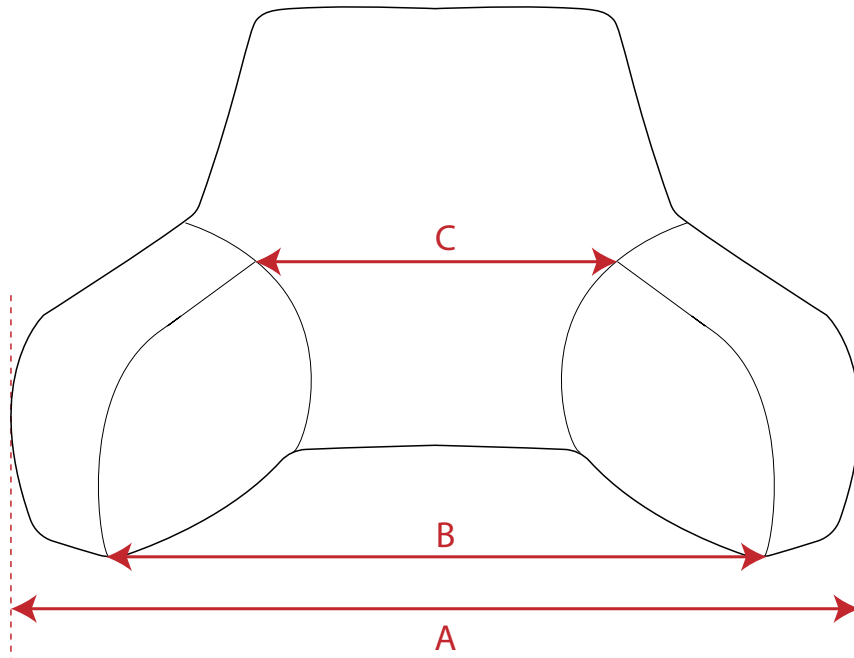


604-10A: Total Width: Measure across from widest part to widest part.
 604-10B: Front Width at Bottom: Measure at floor from front inner arm seam to front inner arm seam.
 604-10C: Front Width at Middle: Measure across middle from front inner arm seam to front inner arm seam.

BACKREST

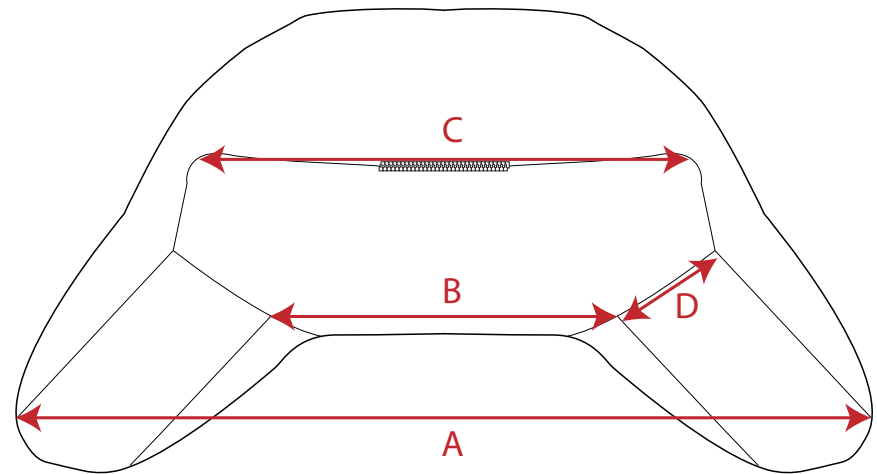


604-12A: Bottom Width at Front: Measure across from outer arm seam to outer arm seam.
 604-12B: Bottom Width at Center: Measure across from inner arm seam to inner arm seam.
 604-12C: Bottom Width at Closure: Measure across closure seam from curve to curve.
 604-12D: Bottom Arm Seam Width: Measure straight from seam to seam.

BACKREST

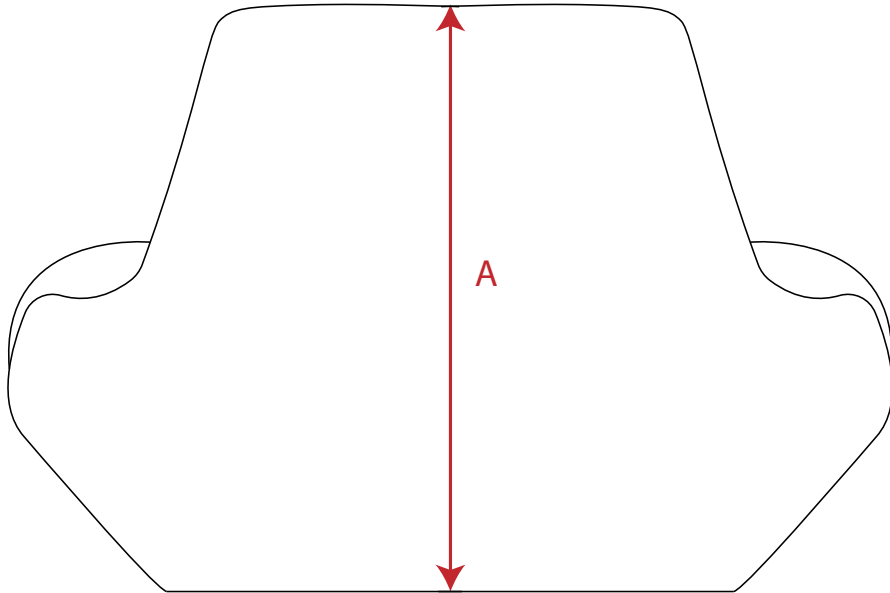

604-14A: Back Height With Curve: Measure straight from bottom seam to top seam with the curve.

BACKREST

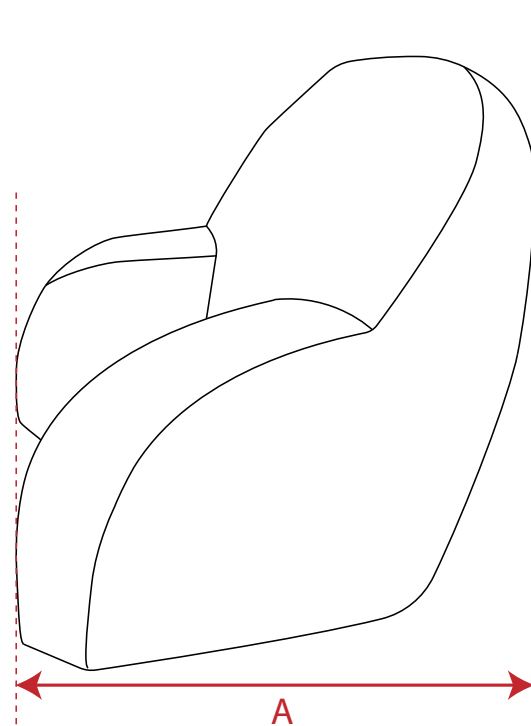


604-16A: Total Depth: Measure from front to back.



HOW TO MEASURE GUIDE

FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

TOWEL

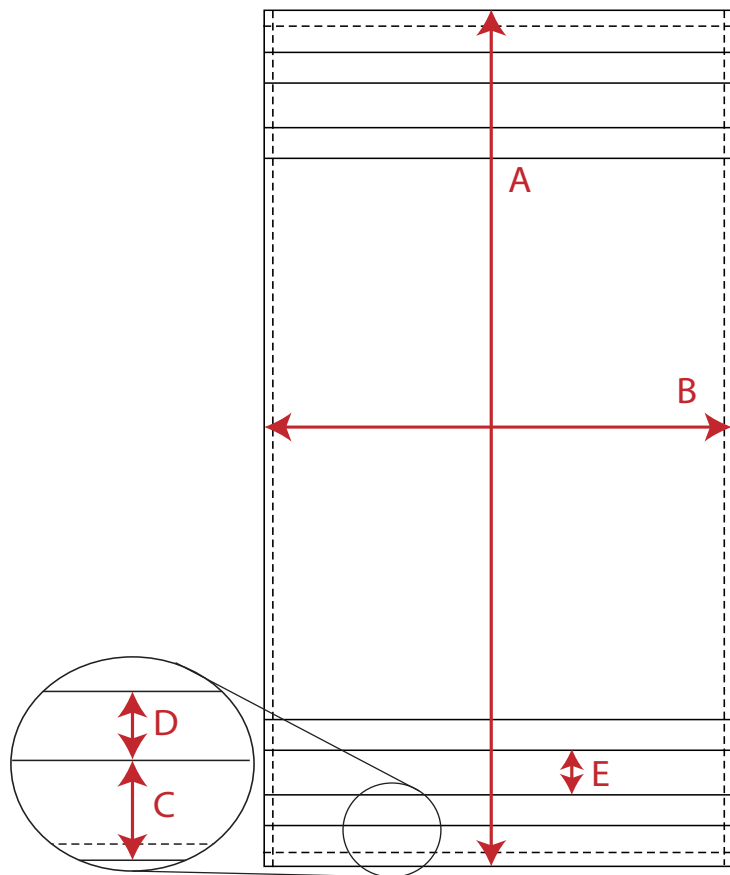

701-02A: Length: Measure straight from edge to edge at center.


701-02B: Width: Measure straight from edge to edge at center.

701-02C: Dobby Placement: Measure straight from towel edge to dobbie start.

701-02D: Dobby Height: Measure straight from bottom of dobbie to top of dobbie.


701-02E: Dobby Spacing: Measure straight from top of dobbie to bottom of next dobbie.

BATH WRAP - ADULT

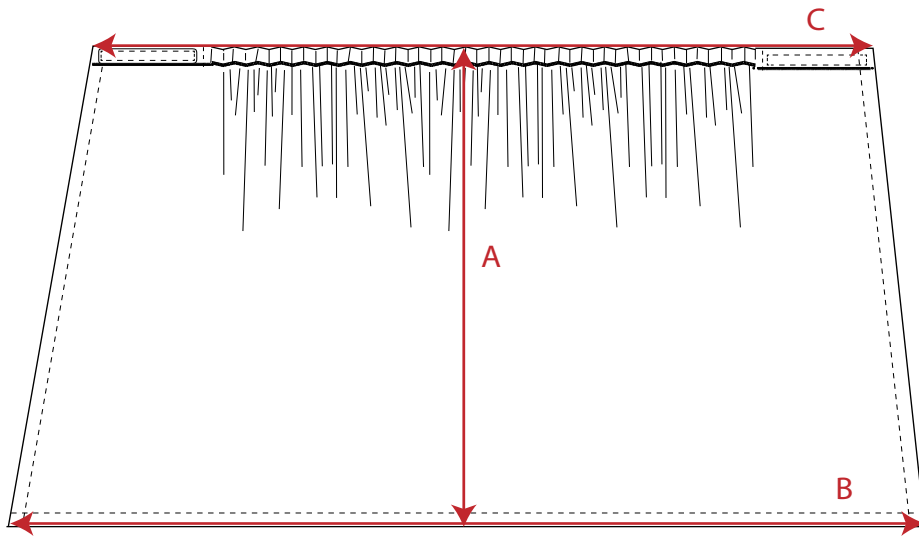


702-02A: Length: Measure straight from edge to edge at center.
 702-02B: Width at Bottom: Measure straight from edge to edge along bottom hem.
 702-02C: Top Width Relaxed: Measure straight from edge to edge relaxed along top hem.

BATH WRAP - ADULT (CONTINUED)

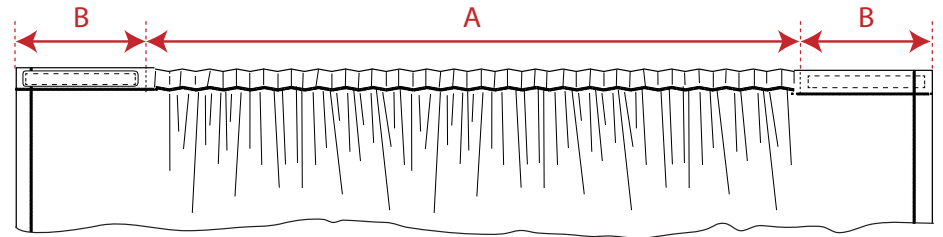

702-03A: Top Casing Relaxed: Measure straight from stitch line to stitch line relaxed along top hem.
 702-03B: Overlap Length: Measure straight from edge to stitch line along top hem.


BATH WRAP - ADULT (CONTINUED)

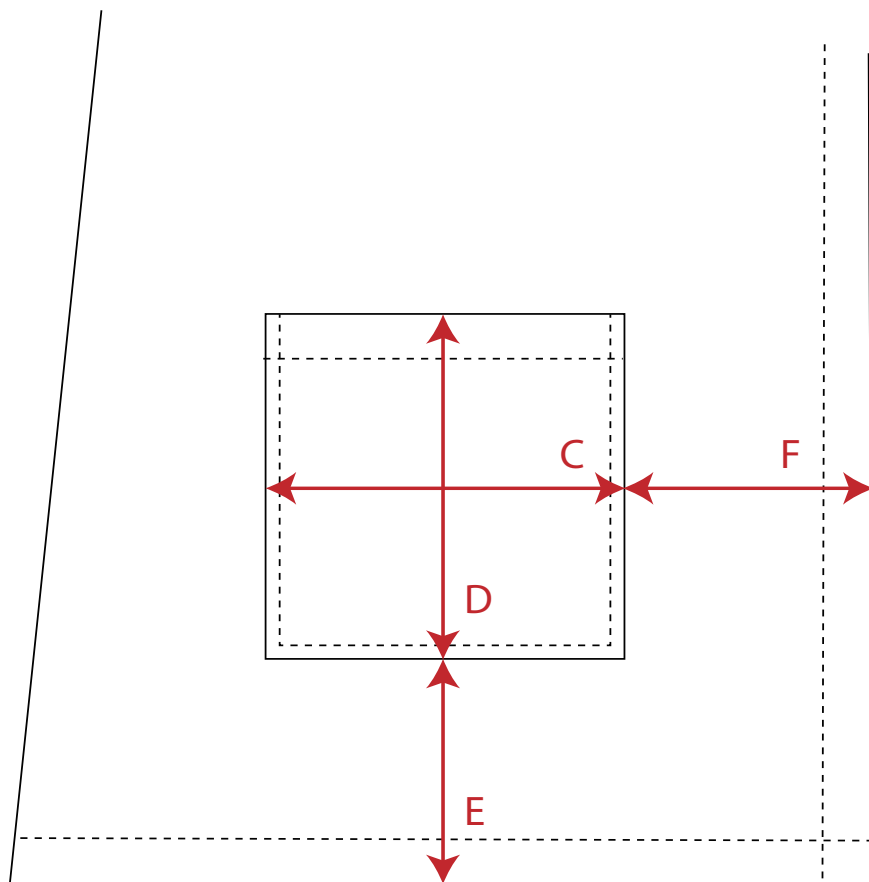

702-03C: Pocket Width: Measure straight from edge to edge at center.
 702-03D: Pocket Length: Measure straight from edge to edge at center.
 702-03E: Pocket Placement Up from Bottom: Measure straight from bottom edge to pocket edge at bottom.
 702-03F: Pocket Placement Over from Center: Measure straight from center hem edge to pocket edge at center.

BATH WRAP - CHILDREN

Back/Inside View

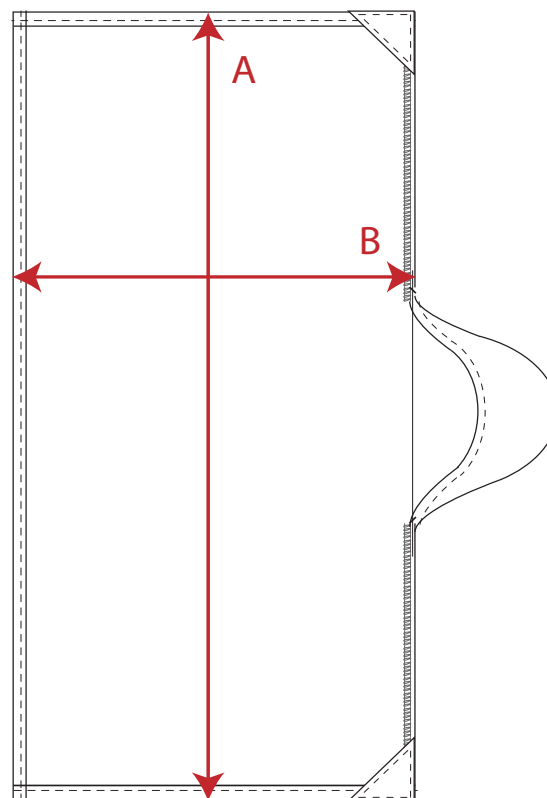


* Safety concern for hoods, work with design/production on sizing.

702-04A: Length: Measure straight from edge to edge at center.
 702-04B: Width: Measure straight from edge to edge just outside of hood attachment.

BATH WRAP - CHILDREN (CONTINUED)

Front/Outside View

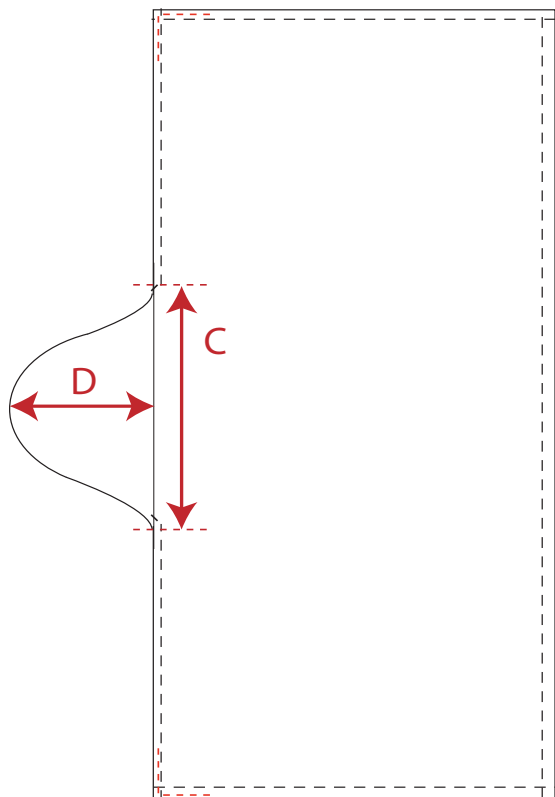


* Safety concern for hoods, work with design/production on sizing.

702-04C: Hood Width: Measure straight from edge to edge along hood/towel seam.

702-04D: Back Hood Height: Measure straight from top of hood edge to back hood attachment seam at longest point.

BATH WRAP - CHILDREN (CONTINUED)

Back/Inside View

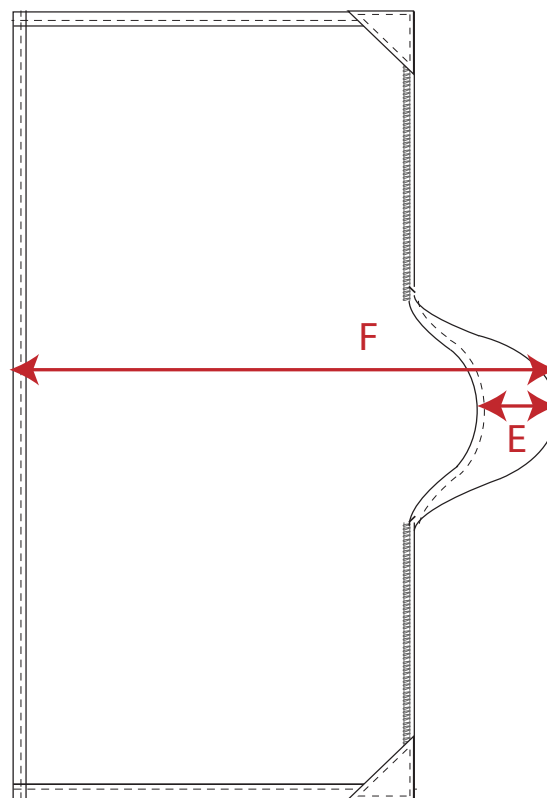


* Safety concern for hoods, work with design/production on sizing.

702-04E: Front Hood Height: Measure straight from top of hood edge to front hem at longest point.


702-04F: Finished Wrap Height: Measure straight from top of hood edge to bottom of wrap.

HAIR WRAP

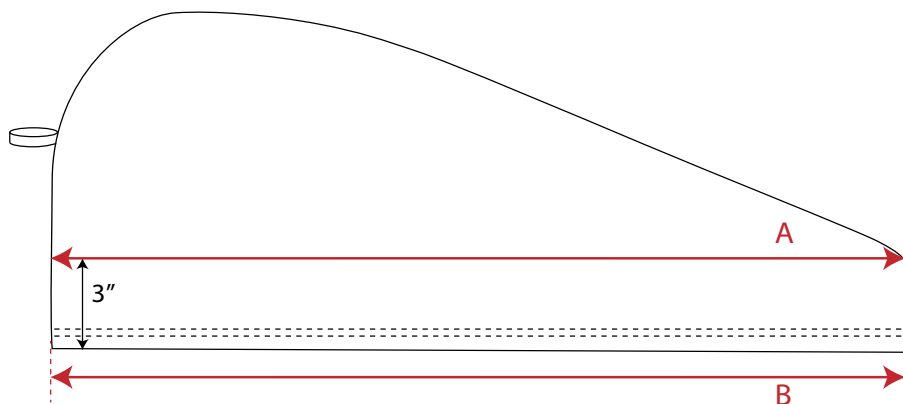


702-06A: Length: At 3" up from bottom edge, measure straight from seam to seam at longest point.
702-06B: Length at bottom edge: Measure straight from seam to seam at bottom edge.

HAIR WRAP (CONTINUED)

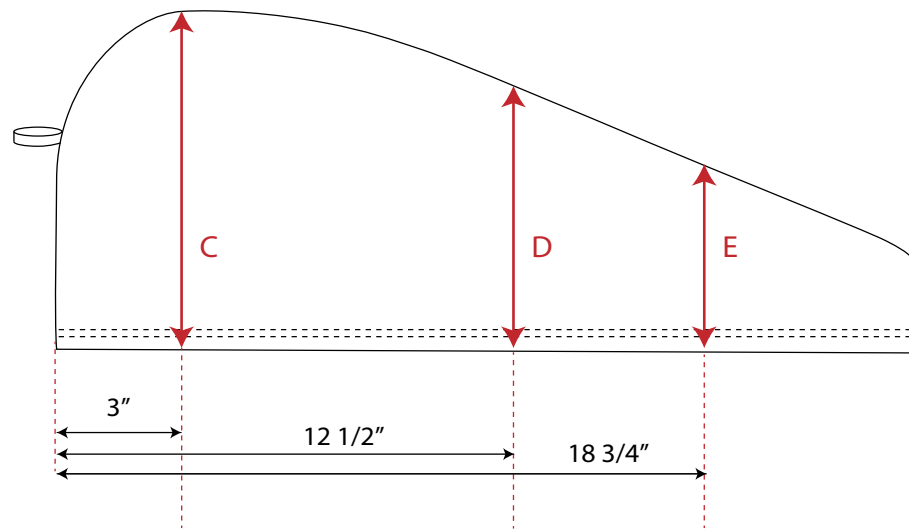

702-06C: Width at 3": At 3" from side seam with elastic, measure from top seam to bottom edge.
702-06D: Width at 12 1/2": At 12 1/2" from side seam with elastic, measure from top seam to bottom edge.
702-06E: Width at 18 3/4": At 18 3/4" from side seam with elastic, measure from top seam to bottom edge.

HAIR WRAP (CONTINUED)

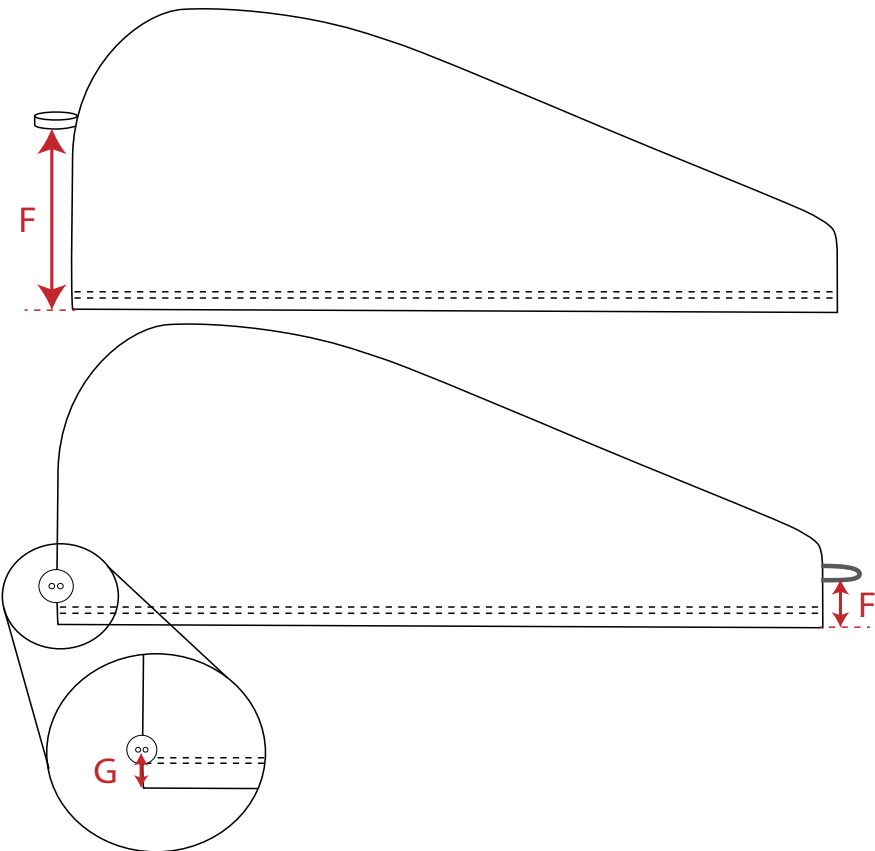

702-06F: Elastic Loop Placement: Measure from elastic insertion to bottom edge.


702-06G: Button Placement: Measure from button placement to bottom edge.



HOW TO MEASURE GUIDE

FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

SHOWER CURTAIN & LINER

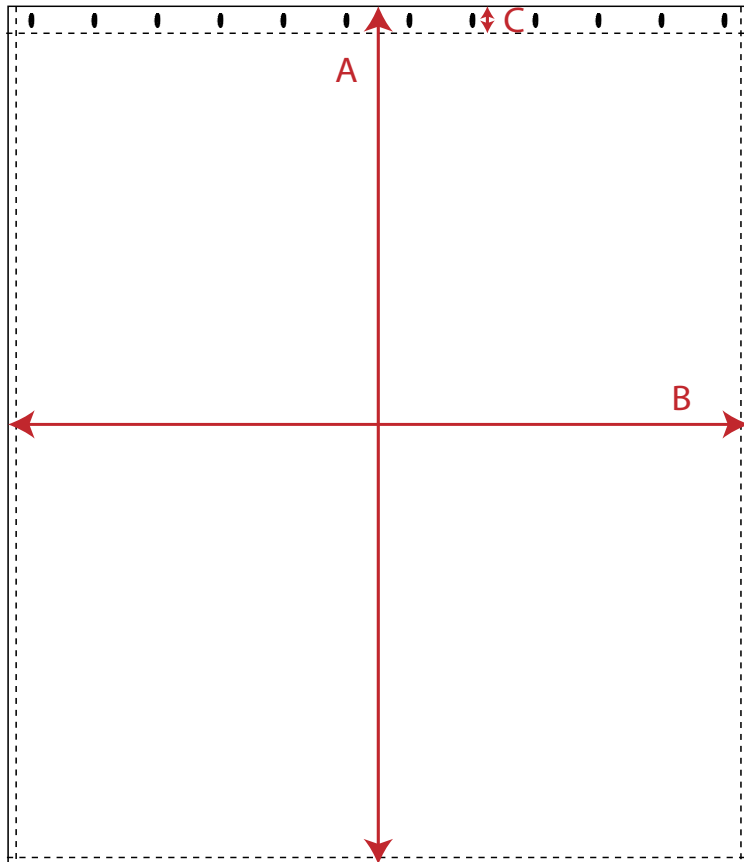


703-02A: Length: Measure straight from edge to edge at center.

703-02B: Width: Measure straight from edge to edge at center.


703-02C: Header Width: Measure straight from top edge to header stitch line or heat sealed line.

TABLELINENS

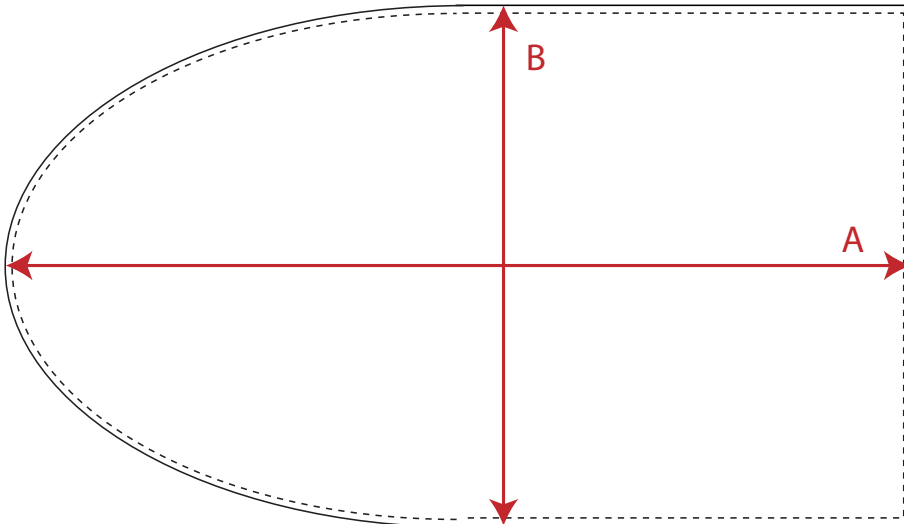


801-02A: Length: Measure straight from edge to edge at center.
801-02B: Width: Measure straight from edge to edge at center.

TABLELINENS

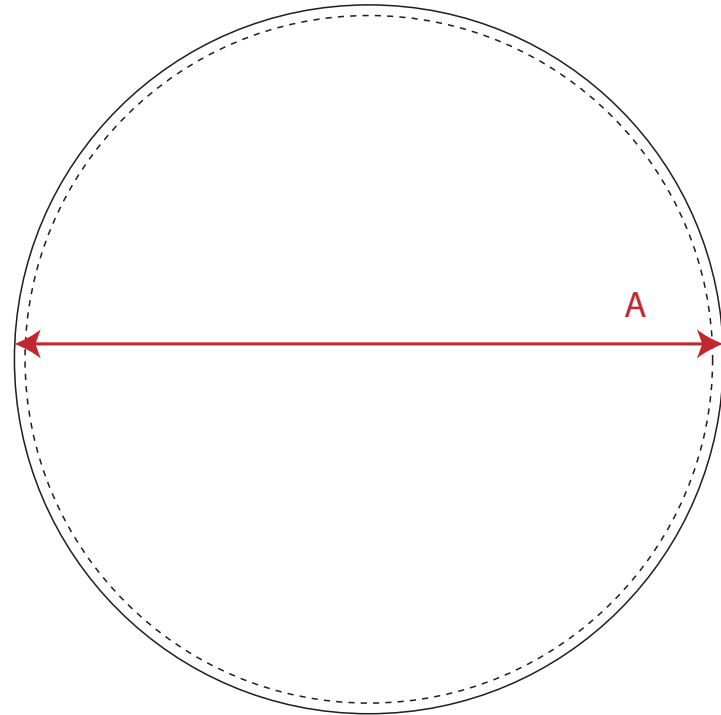


801-04A: Diameter: Measure straight from edge to edge at center.

TOWEL/DISHCLOTH

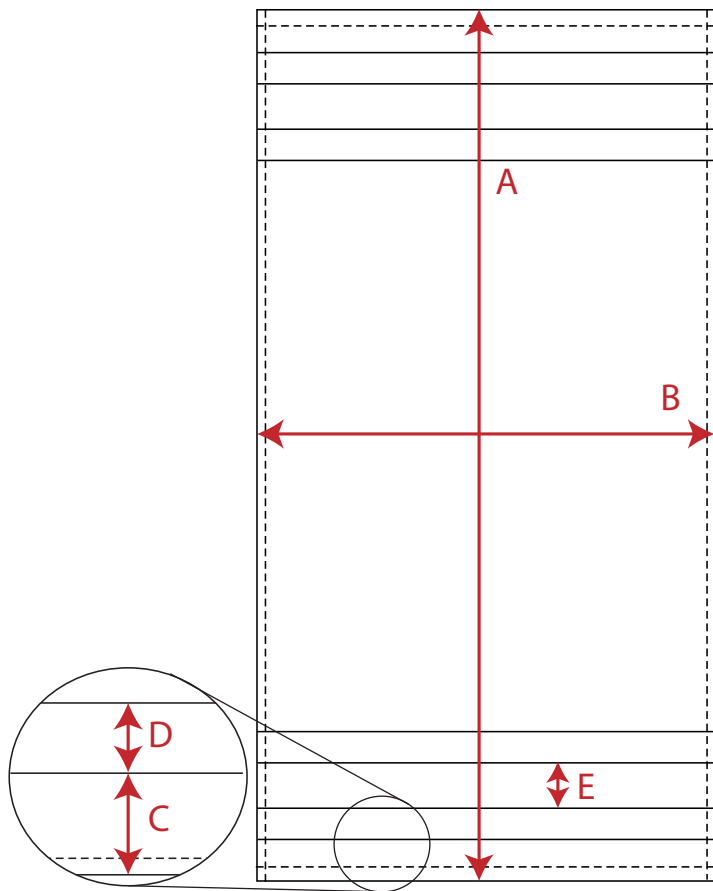


802-02A: Length: Measure straight from edge to edge at center.
 802-02B: Width: Measure straight from edge to edge at center.
 802-02C: Dobby Placement: Measure straight from towel edge to dobby start.
 802-02D: Dobby Height: Measure straight from bottom of dobby to top of dobby.
 802-02E: Dobby Spacing: Measure straight from top of dobby to bottom of next dobby.

TIE TOP TOWEL

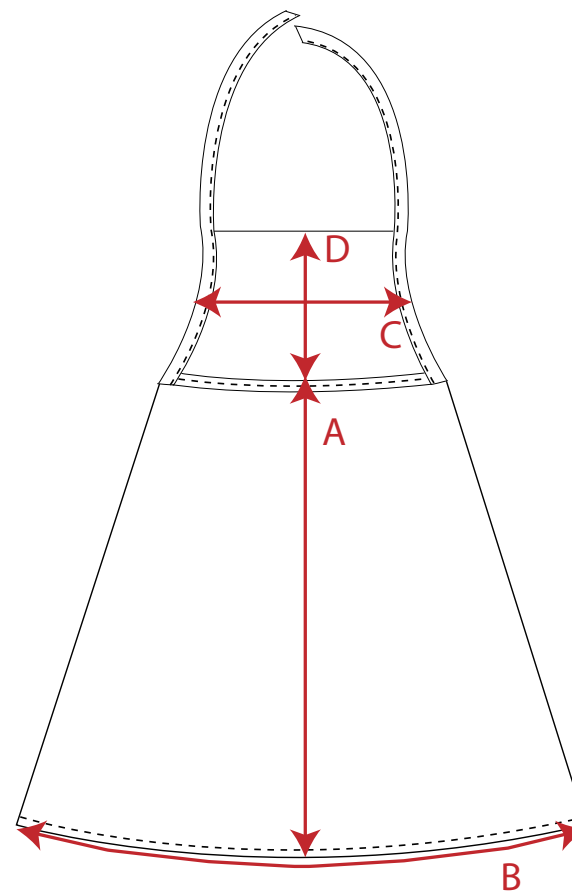


802-04A: Length: Measure straight from seam to bottom edge.
 802-04B: Width: Measure from side edge to side edge at bottom hem.
 802-04C: Design Top Width: Measure from side edge to side edge.
 802-04D: Design Top Length: Measure from top edge to seam.

OVEN MITT

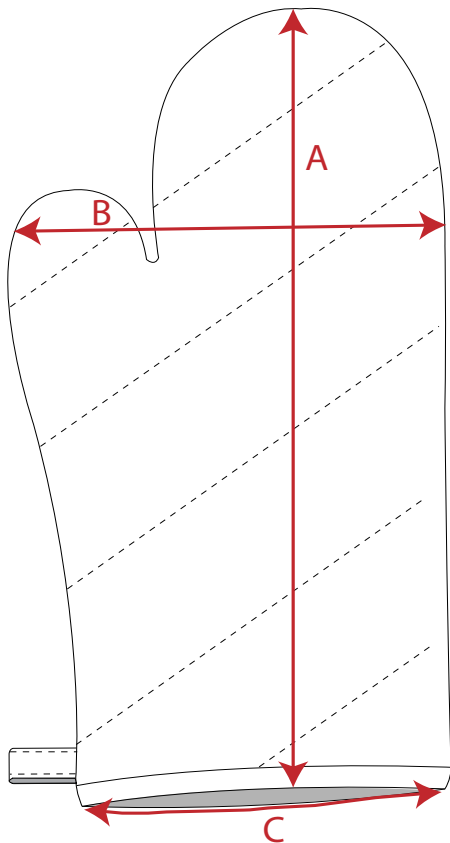


803-06A: Length: Measure flat from edge to edge at longest point.
803-06B: Width: Measure flat from edge to edge at widest point.
803-06C: Opening: Measure flat from edge to edge at opening.

OVEN MITT GRABBER

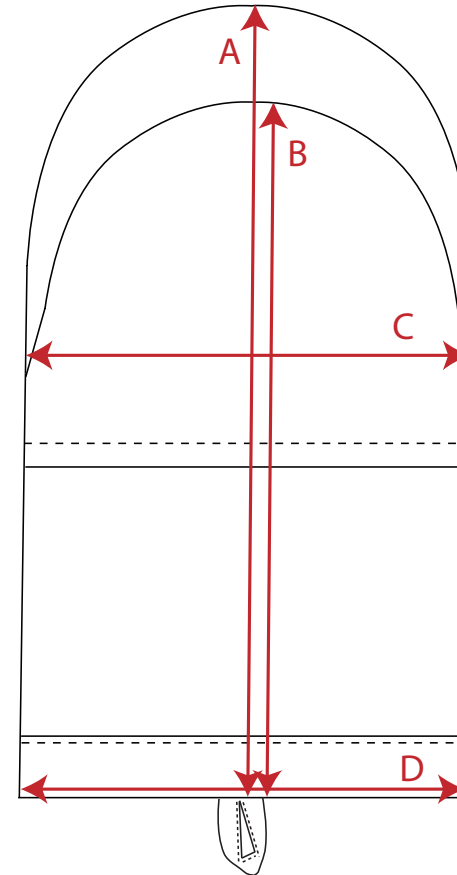

803-07A: Length: Measure flat from edge to edge at longest point.
803-07B: Grabber Length: Measure flat from grabber edge to edge at center.
803-07C: Width: Measure flat from edge to edge at center.
803-07D: Opening: Measure flat from edge to edge at opening.

POT HOLDER

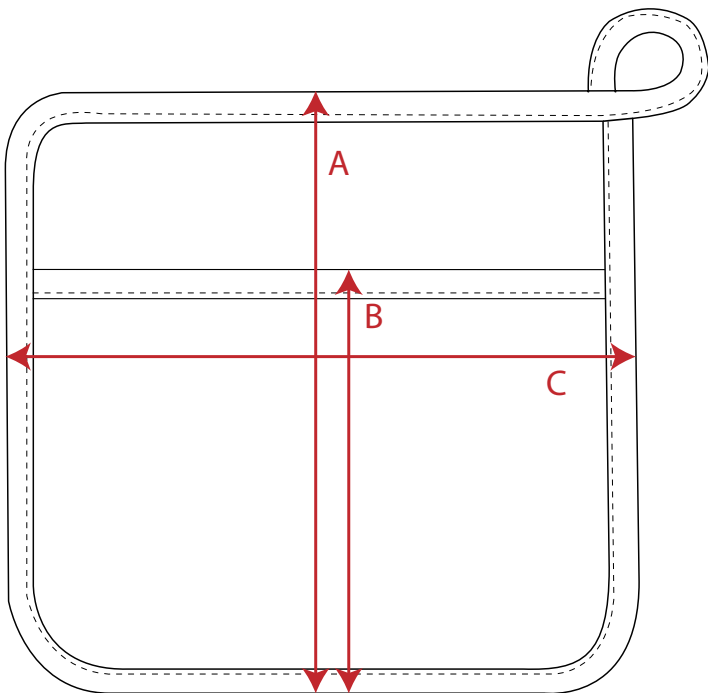


803-08A: Length: Measure straight from edge to edge at center, including binding in measurement.

803-08B: Pocket Length: Measure straight from edge to edge at center, including binding in measurement.

803-08C: Width: Measure straight from edge to edge at center, including binding in measurement.

APRON

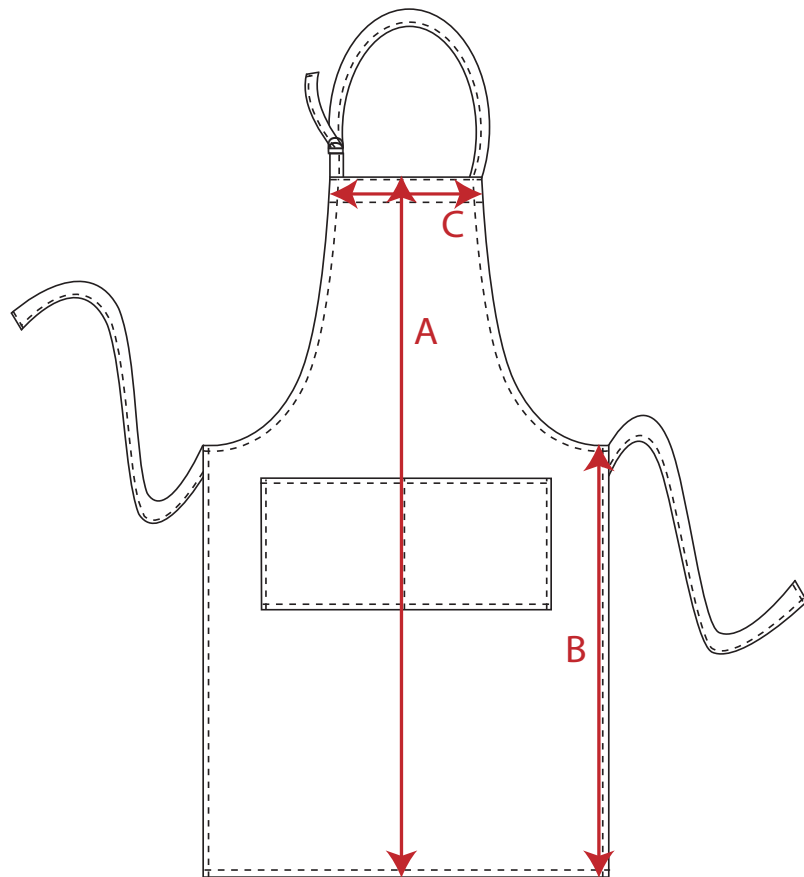


808-02A: Length at Center Front: Measure straight from edge to edge at center.

808-02B: Length at Side Seam: Measure straight from edge to edge at side.

808-02C: Width at Top: Measure straight from edge to edge at top.

APRON (CONTINUED)

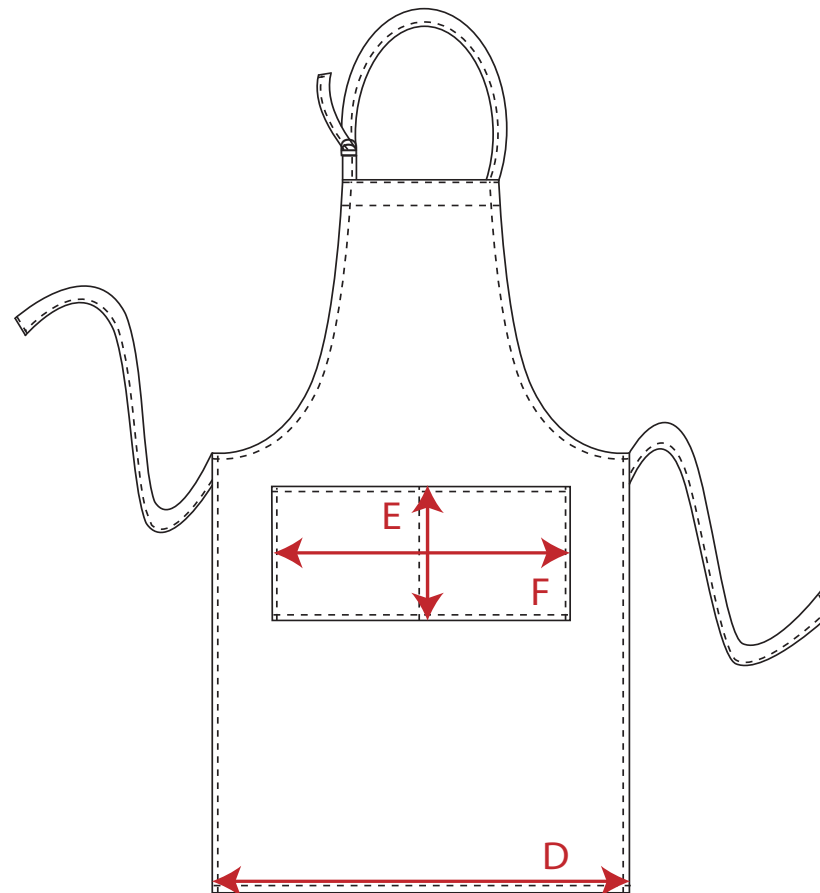


808-02D: Width at Bottom: Measure straight from edge to edge at bottom.

808-02E: Pocket Height: Measure straight from pocket top edge to pocket bottom edge at center.



808-02F: Pocket Width: Measure straight from side pocket edge to side pocket edge at center.

APRON (CONTINUED)

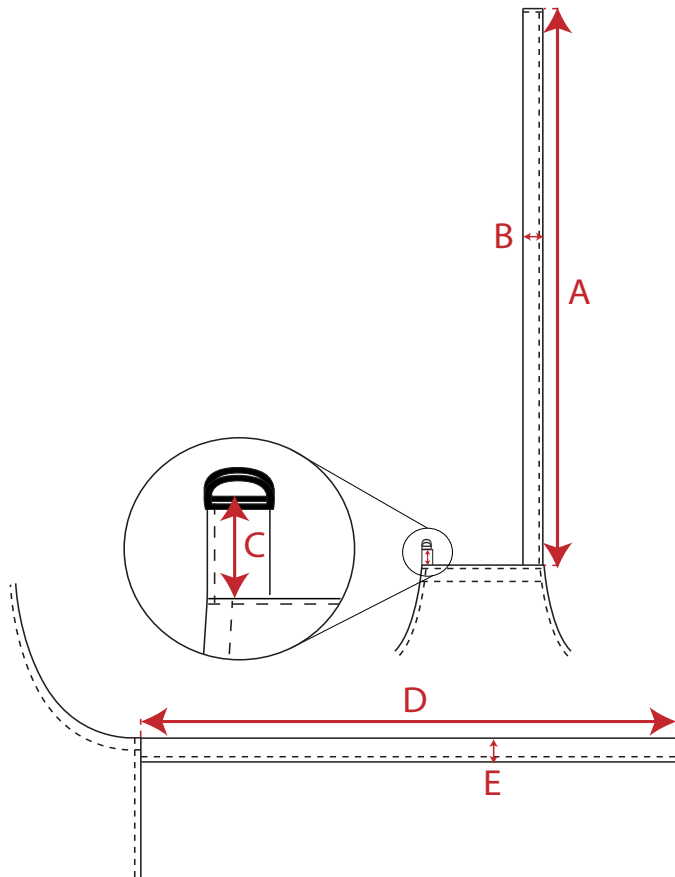


- 808-04A: Neck Strap Length: Measure straight from end to seam.
 808-04B: Neck Strap Width: Measure straight from edge to edge.
 808-04C: Tab Length: Measure straight from edge to seam.
 808-04D: Waist Tie Length: Measure straight from end to seam.
 808-04E: Waist Tie Width: Measure straight from edge to edge.

RUGS

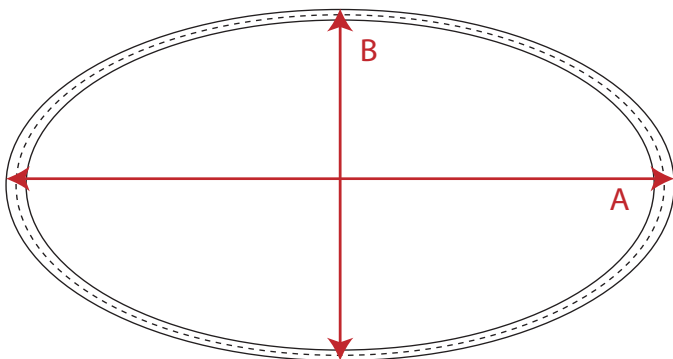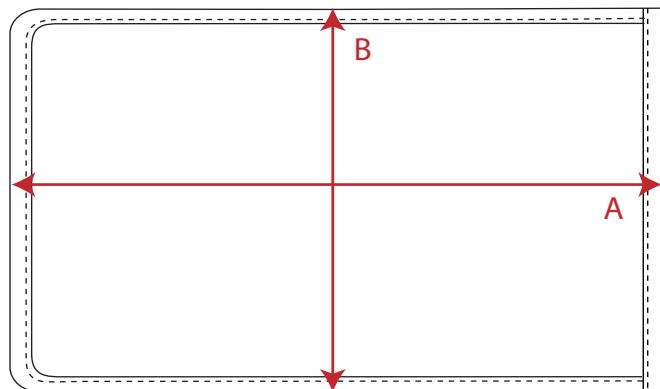


901-02A: Length: On back, measure straight from edge to edge at center.
901-02B: Width: On back, measure straight from edge to edge at center.

RUGS

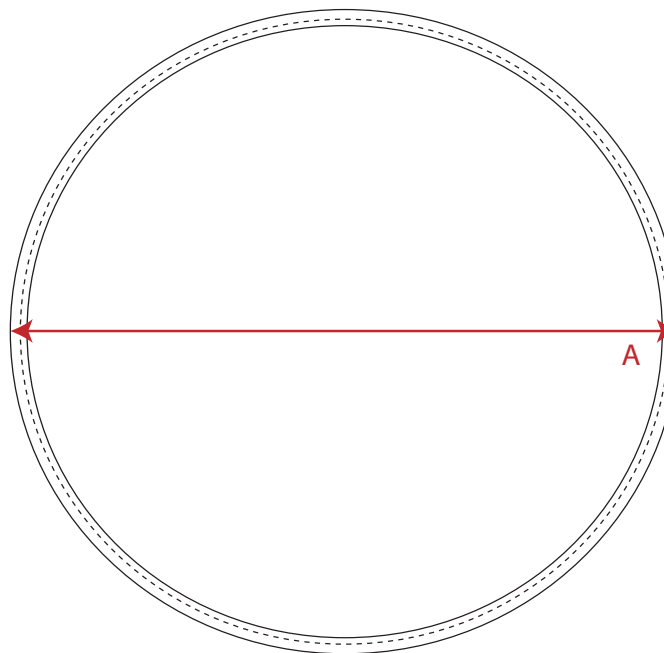

901-04A: Diameter: On back, measure straight from edge to edge at center.


CONTOUR RUG

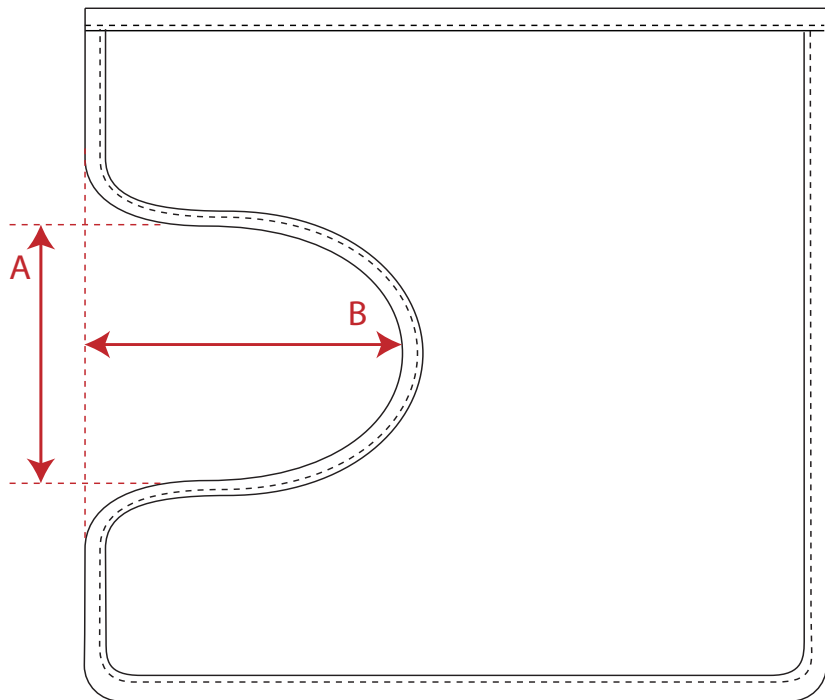

901-06A: Contour Opening Width: On back, measure straight from edge to edge across opening.

901-06B: Contour Opening Depth: On back, measure straight from top of rug (dotted line) to edge of binding at curve.

LID COVER

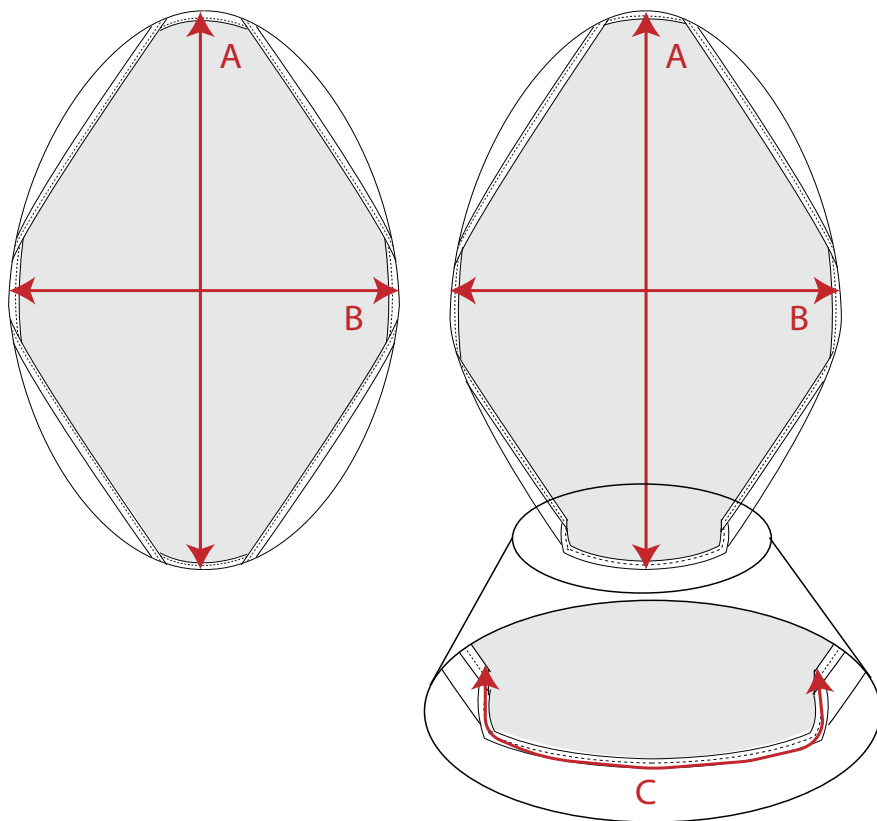

901-08A: Lid Cover Length: On back, stretch lid to maximum resistance, measure straight from edge to edge at center.

901-08B: Lid Cover Width: On back, stretch lid to maximum resistance, measure straight from edge to edge at center.


901-08C: Lid Cover Back Opening: On back, measure straight at back opening from edge to edge.



HOW TO MEASURE GUIDE


FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

PANEL/VALANCE

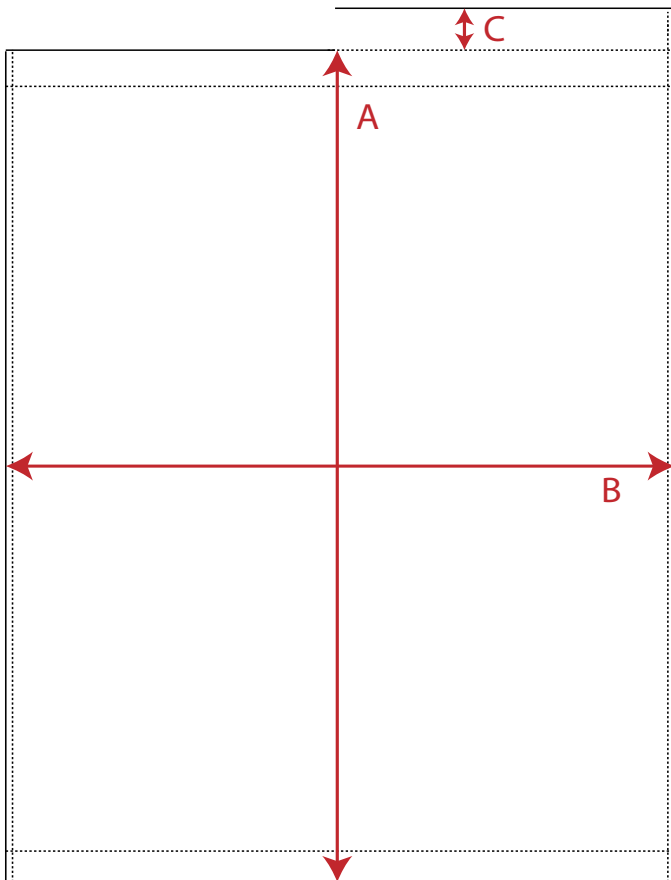

905-02A: Length w/ Rod Pocket: Measure straight from top edge or rod pocket stitch line to bottom edge at center.
905-02B: Width: Measure straight from edge to edge at center.
905-02C: Header Height: Measure straight from top edge to rod pocket stitch line.

PANEL/VALANCE (CONTINUED)

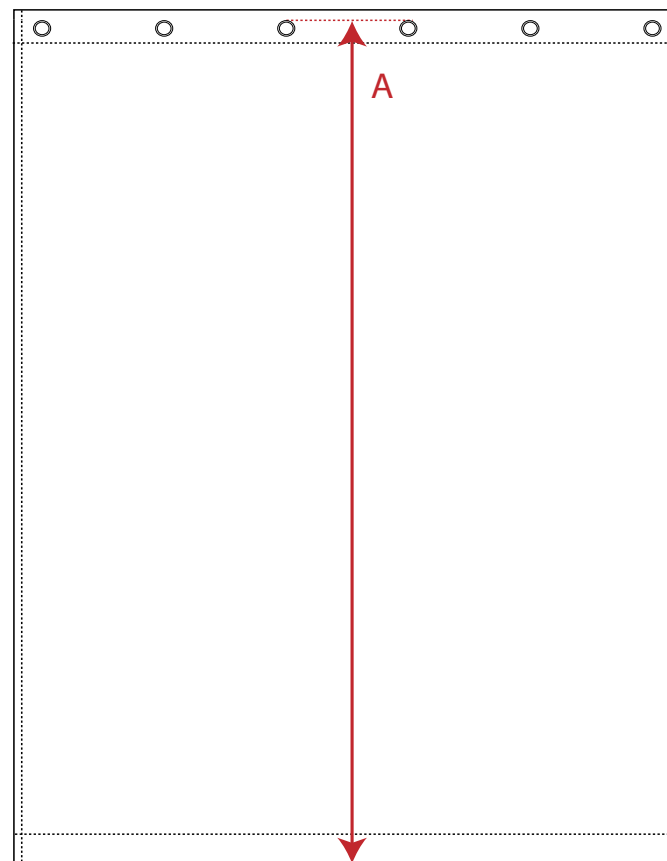


905-04A: Length w Grommet: Measure straight from inside top of grommet to bottom edge at center.



HOW TO MEASURE GUIDE


FOR PRIVATE & EXCLUSIVE BRANDS / HOME TEXTILES

PANEL/VALANCE (CONTINUED)

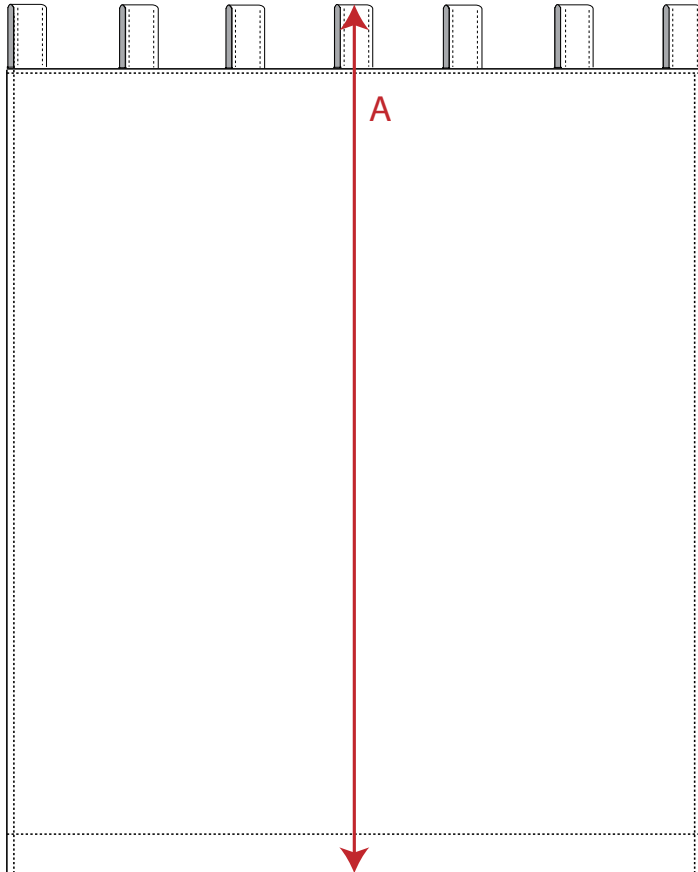

905-06A: Length with Tab: Measure straight from edge to edge including tab in measurement.



PANEL/VALANCE (CONTINUED)

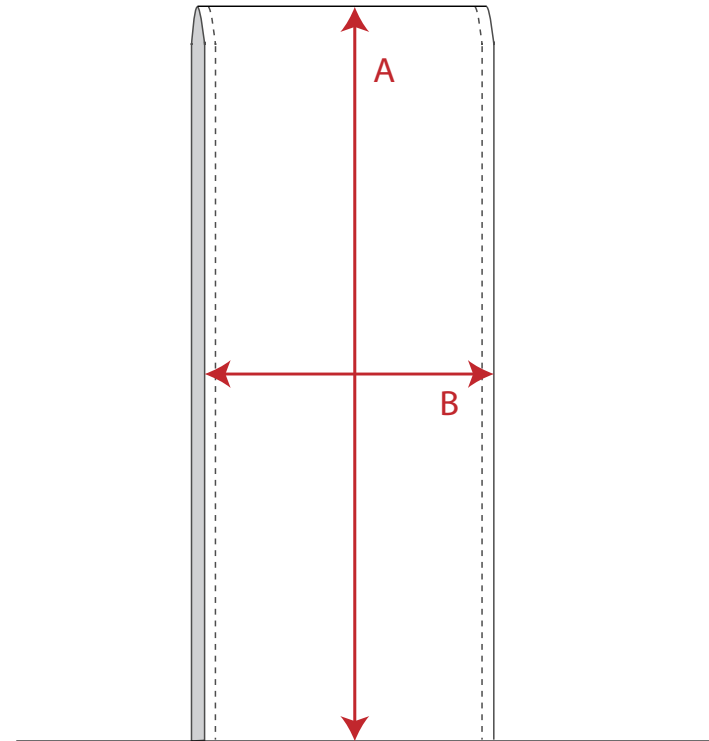

905-08A: Tab Length: Measure straight from top of tab to bottom of tab at center.

905-08B: Tab Width: Measure straight from edge to edge at center.

TIEBACK

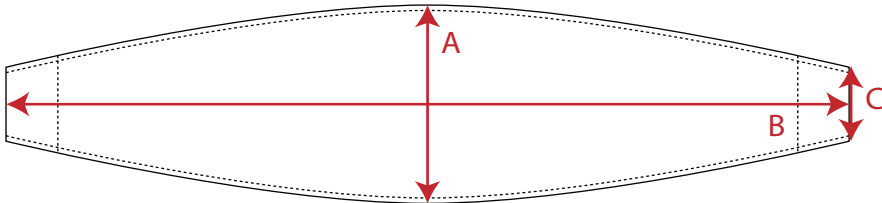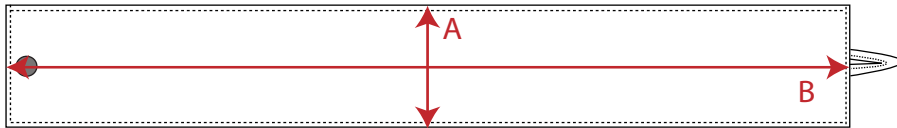


905-10A: Length: Measure straight from edge to edge at center, excluding loop.

905-10B: Width: Measure straight from edge to edge at center.


905-10C: Width at Side: Measure straight from edge to edge at side. (only applicable if design varies in width)

BUTTON

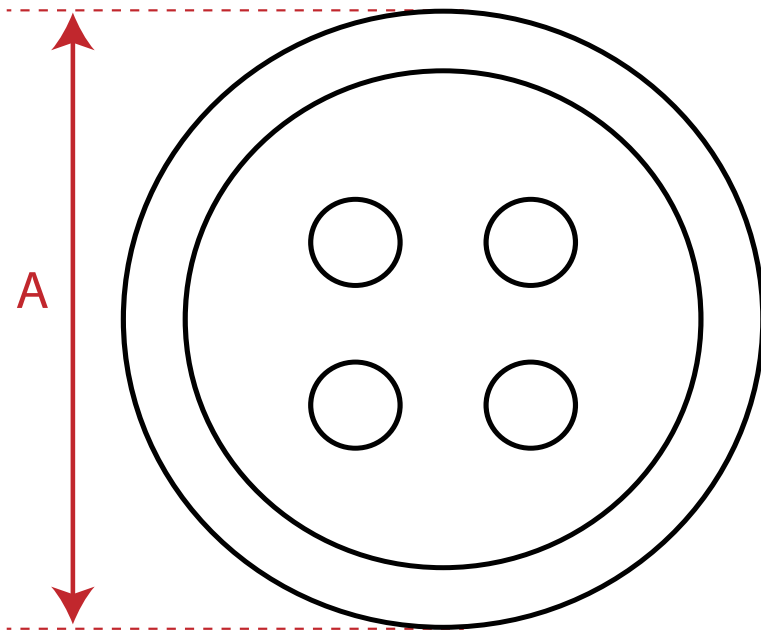

005A: Button: Measure from outer edge to outer edge.


BUTTONHOLE

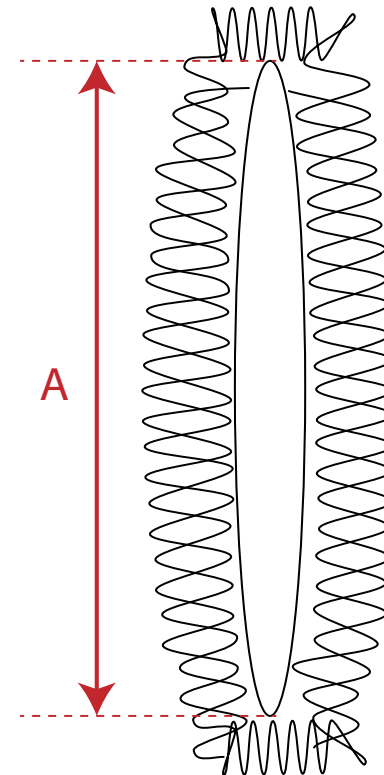

010A: Buttonhole: Measure from inside to inside of bartacks. (Open part of the buttonhole.)


** Opening should be a minimum 1/8" longer than the diameter of the button.

CORNER LOOP

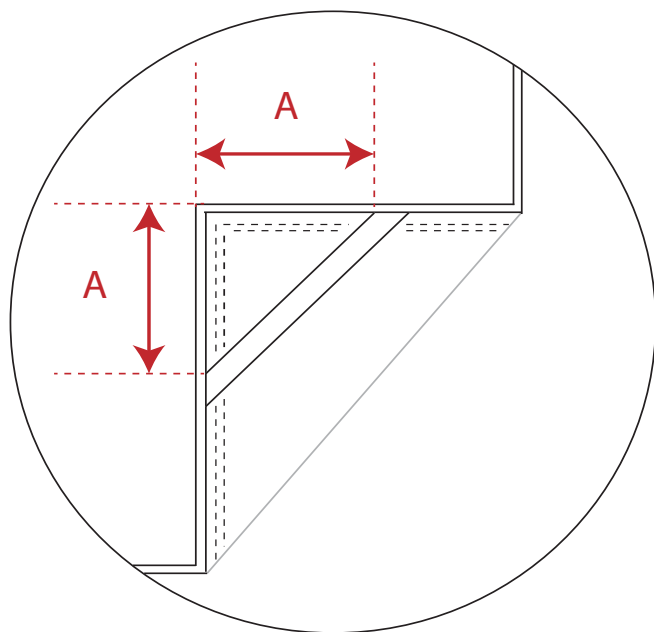


015A: Corner Loop Placement: Measure from outer edge to start of loop placement.

ELASTIC STRETCH RATIO

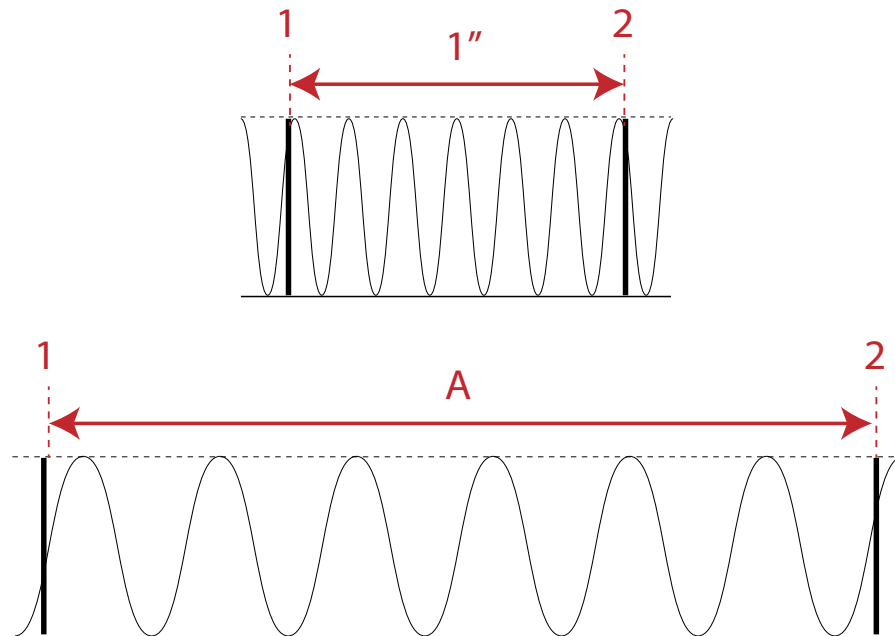

020A: Elastic Stretch Ratio: Lay elastic flat. Do not stretch. Mark points 1 and 2 on relaxed elastic at 1" apart.
Stretch elastic to maximum resistance. Measure from point 1 to point 2.
Stretch Ratio: Relaxed 1" to stretched elastic A = Stretch Ratio 1:A.


FLANGE

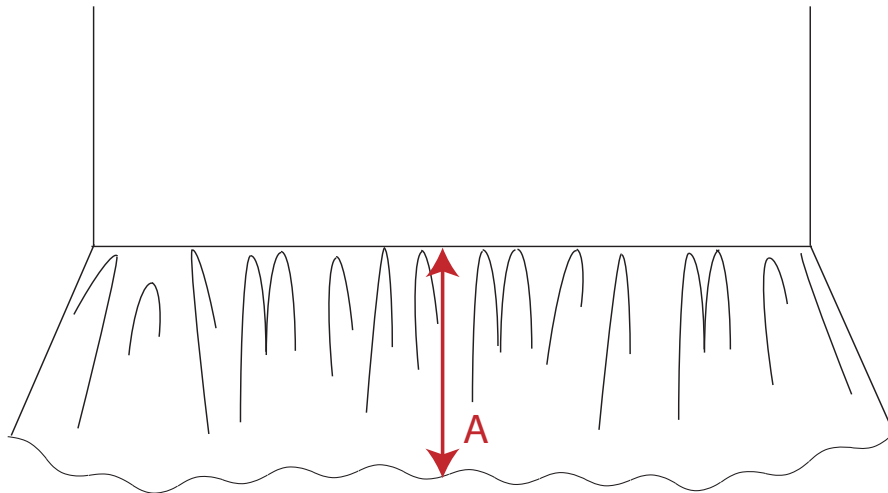

025A: Flange Length: Measure straight from product edge to end of flange.

** Exclude flange in product measurements.


FRINGE

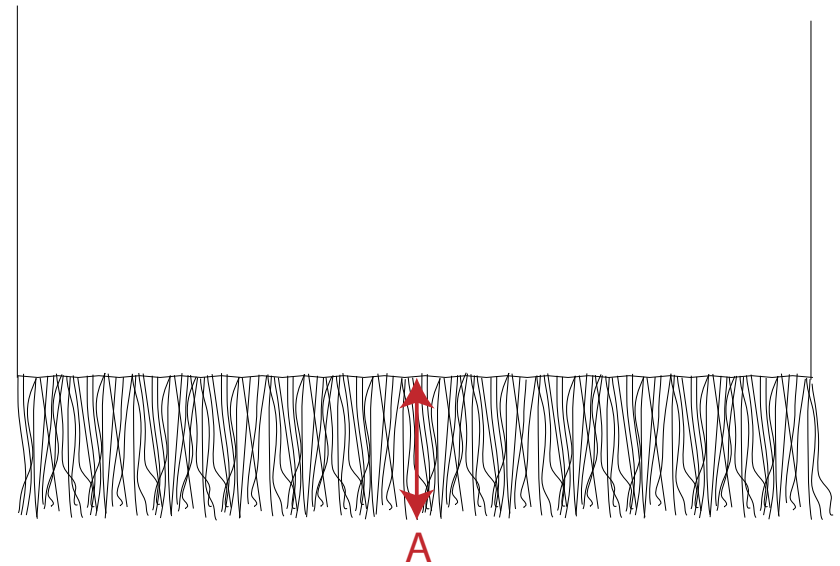


030A: Fringe Length: Measure straight from product edge to end of fringe.

** Exclude fringe in product measurements.

GATHER RATIO

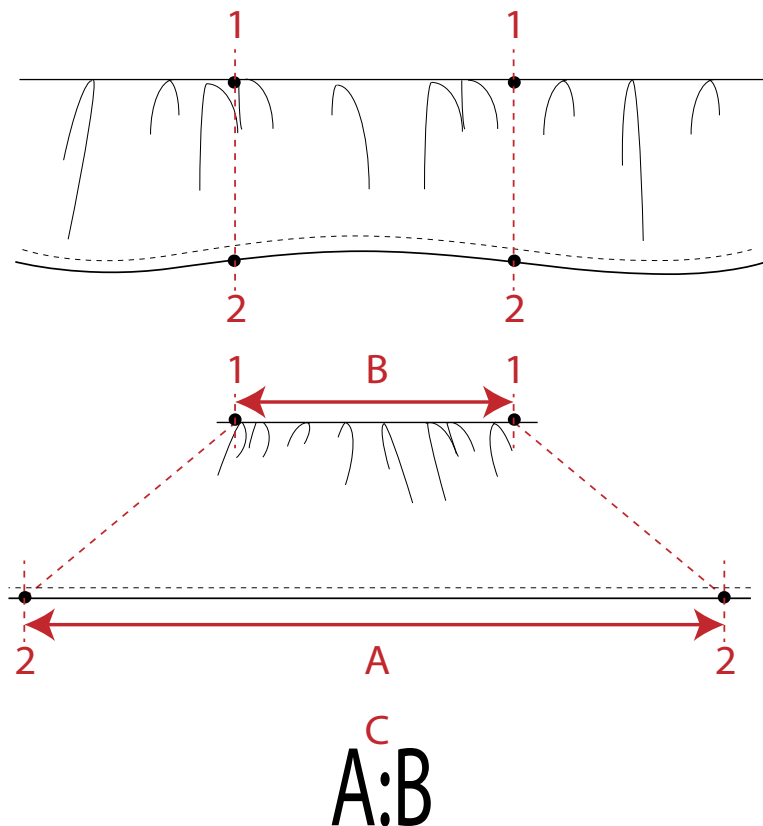


GROMMET

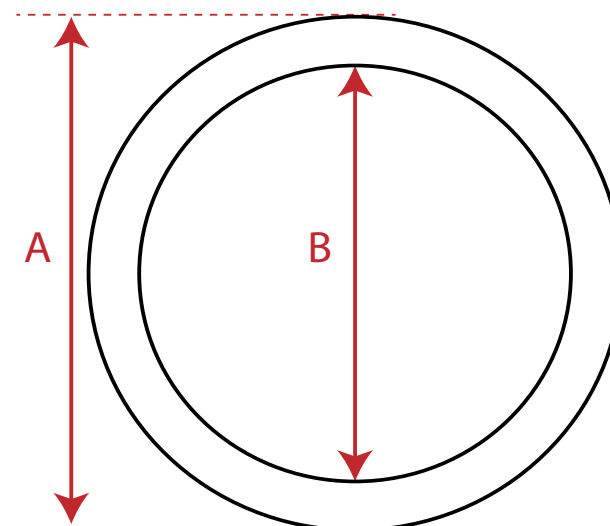

032A: Gather Ratio: Mark points 1, then mark points 2 across from points 1 with gather relaxed in a flat position.
 A. Fully extended fabric Measure from point 2 to point 2.
 B: Measure gathered fabric from point 1 to point 1.
 C. Gather Ratio: Extended fabric A to Gathered fabric B = Ratio of A:B


033A: Outer Grommet: Measure straight from outer edge to outer edge at center.
 033B: Inner Grommet: Measure straight from inner edge to inner edge at center.

GUSSET

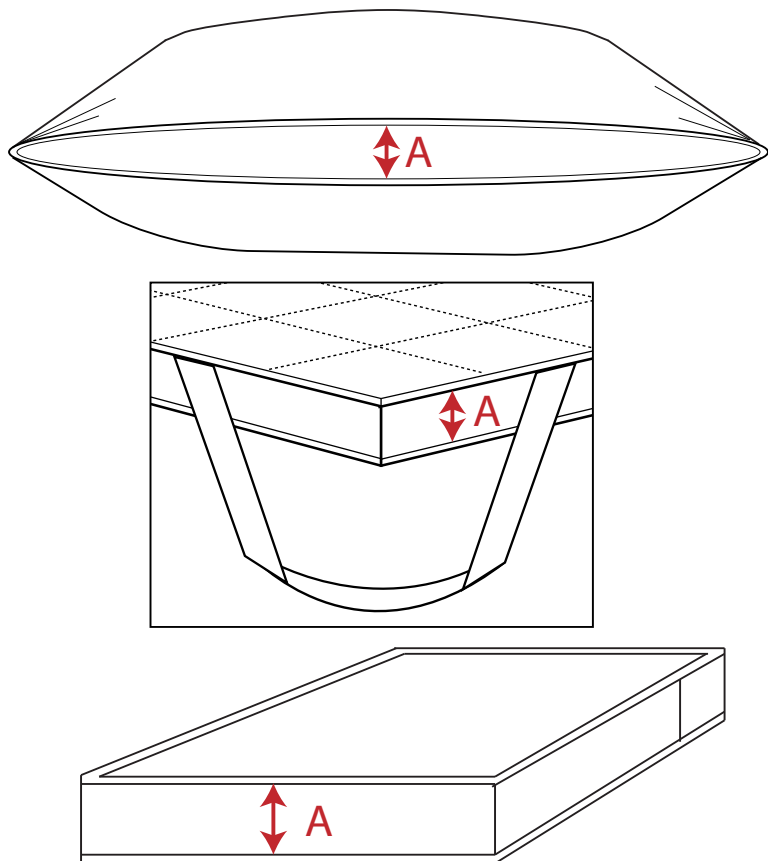


035A: Gusset: Measure straight from seam to seam.

HANDLE

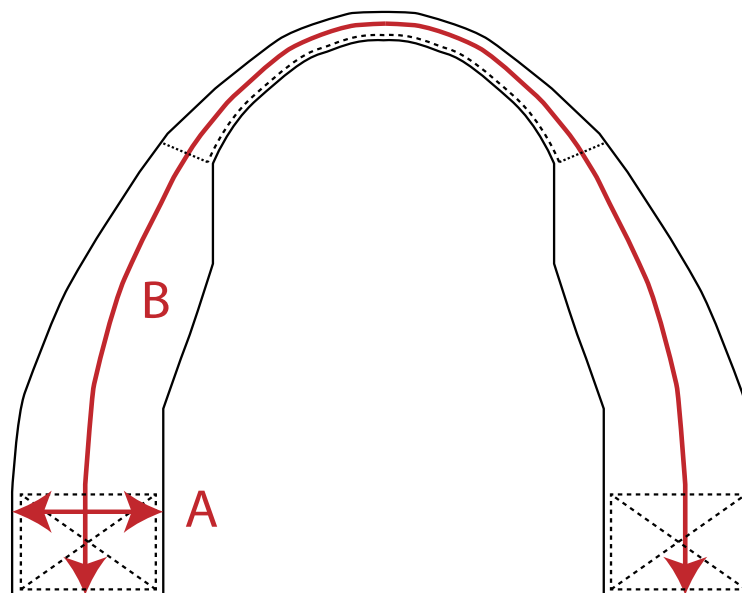


037A: Handle Width: Measure straight from edge to edge.
037B: Handle Length: Measure from edge to edge.

HANGER LOOP

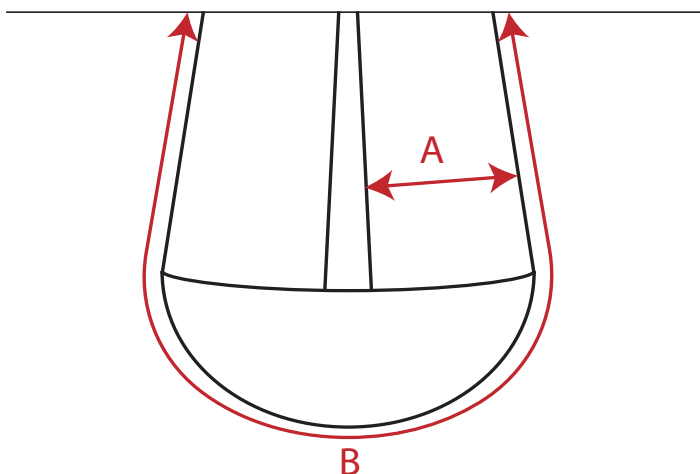


038A: Hanger Loop Width: Measure straight from edge to edge.
038B: Hanger Loop Length: Measure with curve from seam to seam.

INVERTED PLEAT

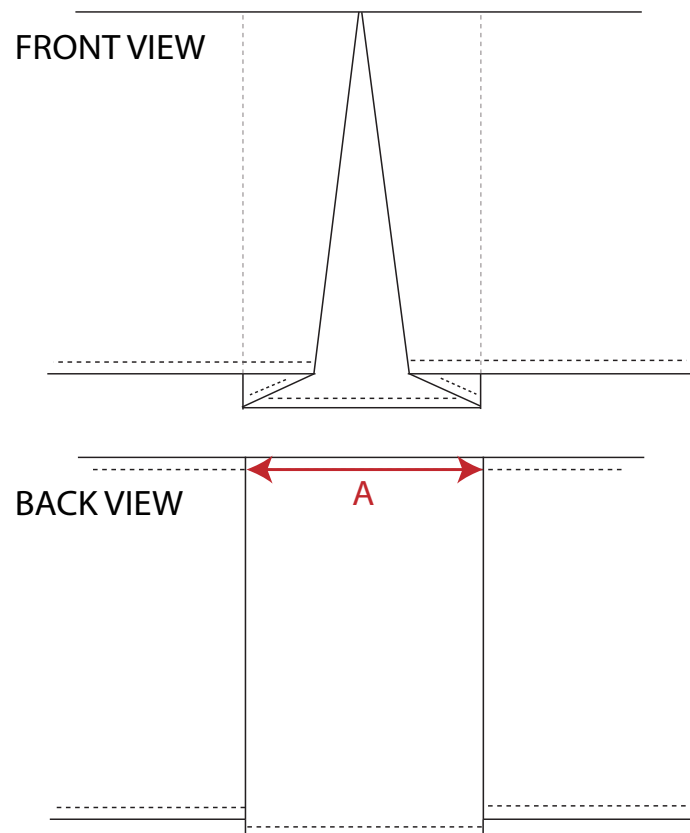


040A: Inverted Pleat Width: Measure on back, straight from folded edge to folded edge at seam.

LOOP

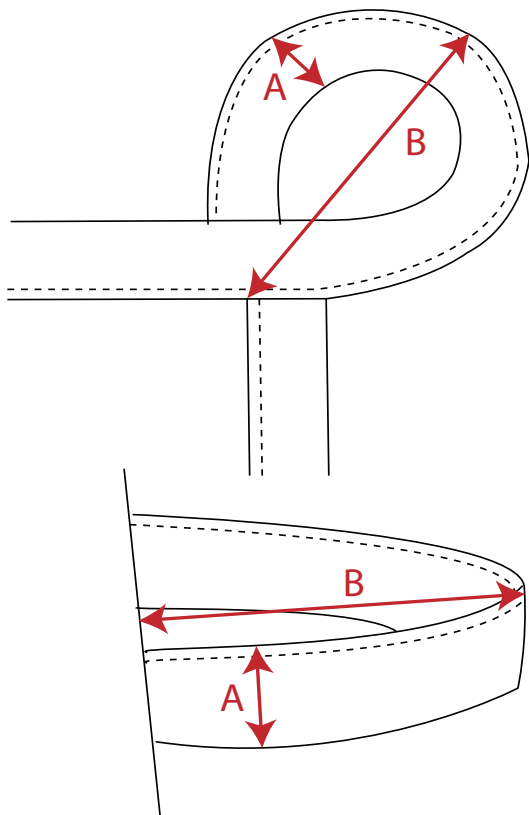


PIPING

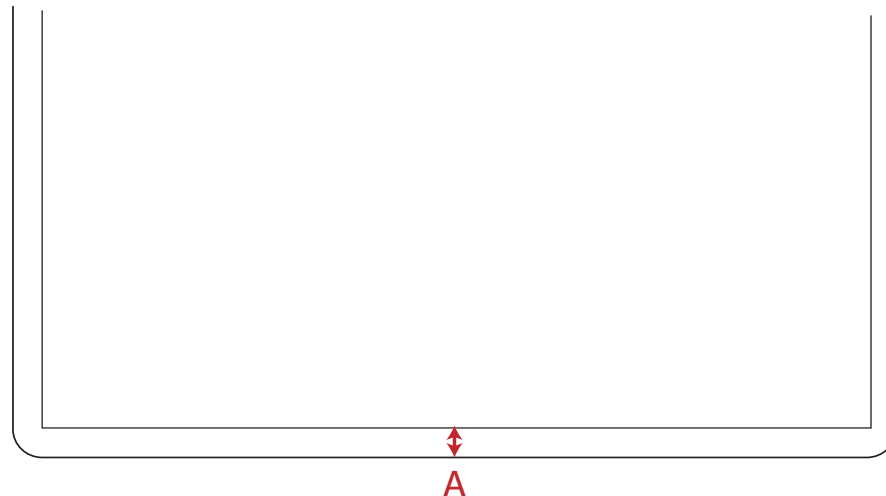

042A: Loop Width: Measure straight from edge to edge.
042B: Loop Length: Measure from intersecting point or seam to longest point.


045A: Piping Width: Measure straight from seam to edge.
** Exclude piping in measurements.

POCKET

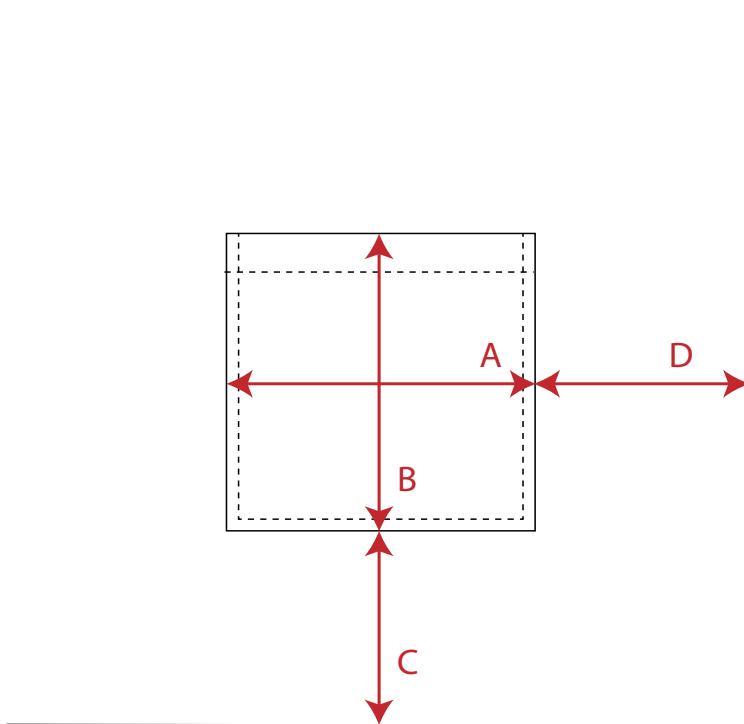


046A: Pocket Width: Measure straight from edge to edge at center.
 046B: Pocket Length: Measure straight from edge to edge at center.
 046C: Pocket Placement Up from Bottom: Measure straight from bottom edge to pocket edge at bottom.
 046D: Pocket Placement Over from Center/Side: Measure straight from center hem edge or side seam to pocket edge at center.

SCALLOP

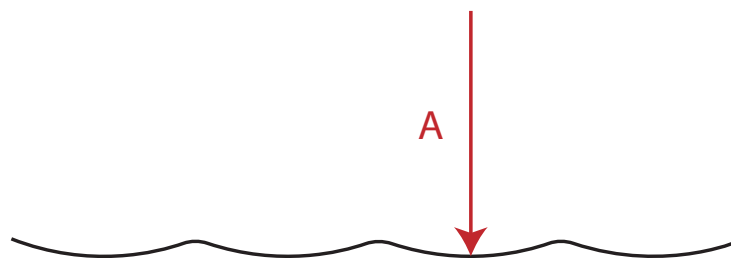

047A: Scallop: Measure to the longest edge of the product.

STITCHES PER INCH (SPI)

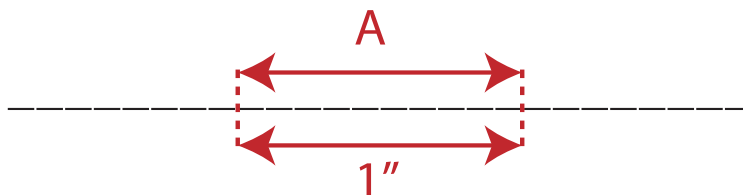


048A: SPI: Count how many stitches are in a 1" distance.

TASSEL




050A. Tassel Length: Measure straight from top edge to bottom edge.
** Exclude tassel in product measurements.

TIES

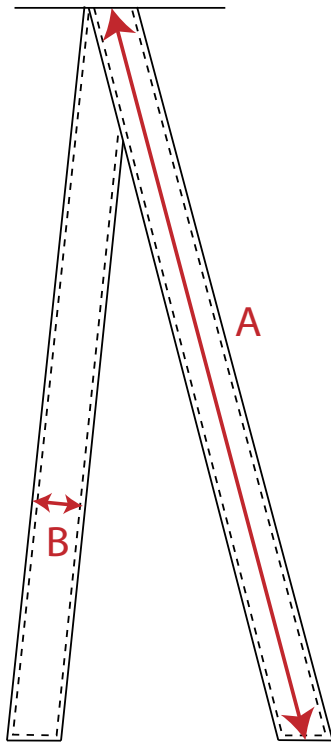

055A: Tie Length: Measure straight from seam or stitch line to end.
055B: Tie Width: Measure straight from edge to edge.

ZIPPER

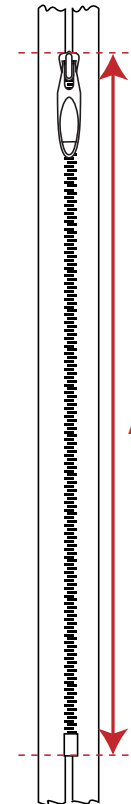

060A: Zipper Length: With zipper closed, measure from the tip of the slider head to the bottom stop.