SAVE THESE INSTRUCTIONS

3 TIER SHOE RACK ASSEMBLY INSTRUCTIONS ASSEMBLE ON A FLAT, PROTECTED SURFACE.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
А		1PC	ТОР
В		2PCS	SHELF
С		2PCS	SIDE BAR
D		2PCS	HORIZONTAL BAR
E		12PCS + 1PC	BOLT (6mm x 24.5mm)
F	Ommo	6PCS + 1PC	SCREW (4mm x 21mm)
G		1PC	ALLEN WRENCH


FOR MISSING OR INCORRECT PARTS/ HARDWARE, CONTACT THE MANUFACTURER'S CUSTOMER SERVICE DIRECTLY AT 1-800-266-6000 and/or customerservice@goldtadco.com.

3 TIER SHOE RACK ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP #1


A. PLACE TOP (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. ALIGN HOLES ON HORIZONTAL BARS (D) WITH PILOT HOLES DRILLED IN TOP (A). PLACE SCREWS (F) THROUGH HORIZONTAL BARS INTO PILOT HOLES AND LIGHTLY TIGTHEN BY HAND TO HOLD IN PLACE. ONCE ALL SCREWS ARE IN PLACE, SLOWLY TIGHTEN USING ALLEN WRENCH (G). DO NOT OVER TIGHTEN.

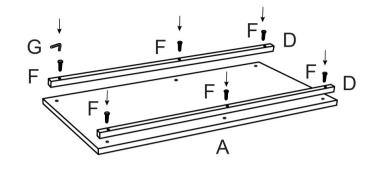

STEP #2


A. ATTACH SIDE BARS (C) TO HORIZONTAL BARS (D)
ALREADY ASSEMBLED TO TOP (A) WITH BOLTS (E)
USING ALLEN WRENCH (G). DO NOT TIGHTEN
COMPLETELY.

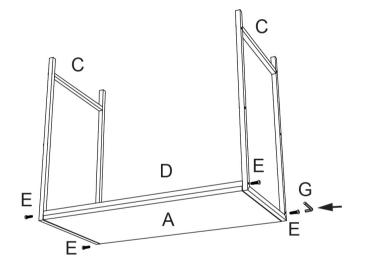

STEP #3

A. ATTACH SHELF (B) TO THE MIDDLE OF THE SIDE BARS (C) WITH BOLTS (E) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

B. ATTACH SHELF (B) TO THE BOTTOM OF THE SIDE BARS (C) WITH BOLTS (E) USING ALLEN WRENCH (G). COMPLETELY TIGHTEN ALL BOLTS (E).

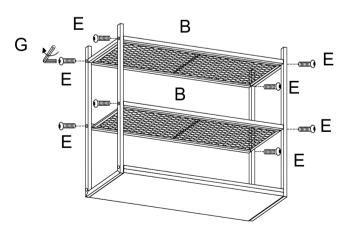

3 TIER SHOE RACK ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP #4

A. ROTATE ASSEMBLED UNIT TO THE UPRIGHT POSITION.

B. ASSEMBLY IS COMPLETE.



** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH (G) AND PERIODICALLY TIGHTEN ALL BOLTS AND SCREWS.

WEIGHT LIMIT

TOP: 200 LBS; SHELVES: 10 LBS EACH

CARE AND CLEANING

WIPE CLEAN WITH A SOFT, DRY CLOTH AS NEEDED.

DO NOT SIT, STAND, OR CLIMB ON UNIT.

FOR INDOOR USE ONLY.