On-Garment Packaging Application


Young Men's & Boys' (8-20) Apparel Proprietary & Exclusive Brand

Modified: 11/03/2022

Asset ID: 7499207 MGR: Kelly Galbraith | DN: Angela Minga


Packaging Examples

Paper Labels & Attachers

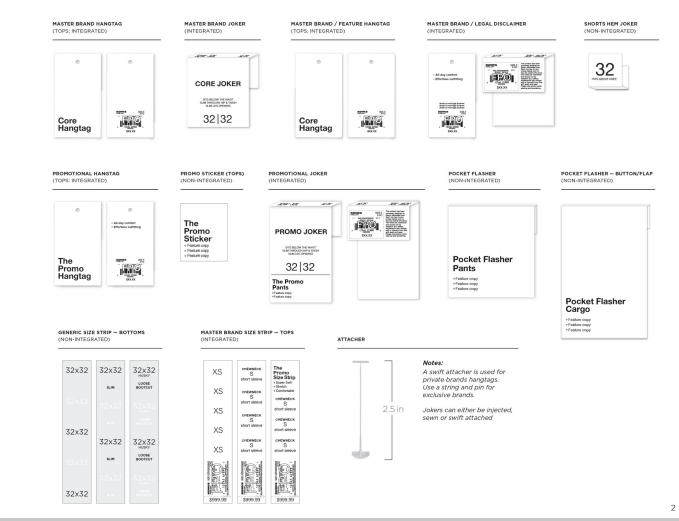

Packaging Examples

Fabric Labels

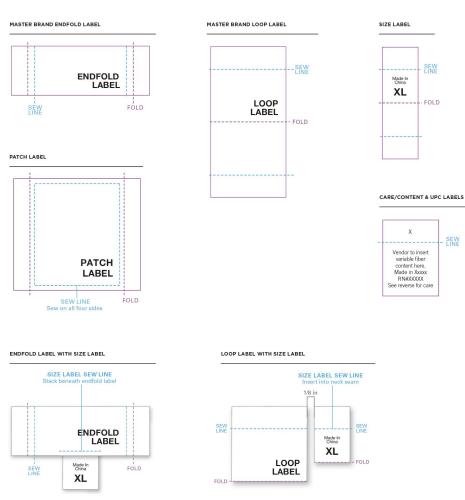

Notes

- · Insert loop label into neck/waistband seam, binding edge or back neck tape/back waistband elastic. See Label Placement slides accordingly.
- · Patch labels may be layered over a denim patch

SEW

. SEW

UPCX00000000X

MASTER BRAND HEAT SEAL - TOPS

MASTER BRAND WAISTBAND HEAT SEAL - BOTTOMS

BOOTCUT

4S

CORE HEAT SEAL

Μ

Made in Xxxxxx Xxx% Xxxxxxx Vendor to insert care. RN# 000000 Factory Code 10/21 UPC#0000000000000

PROMOTIONAL HEAT SEAL - TOPS

PROMOTIONAL WAISTBAND HEAT SEAL - BOTTOMS

PROMOTIONAL HEAT SEAL

BOOTCUT 4S

PROMOTIONAL WAISTBAND HEATSEAL

CORE WAISTBAND

HEATSEAL

THE PROMO PANT

THE PROMO TEE

Μ

Made in Xxxxx Xxx% Xxxxxx Vendor to insert care. RN# 000000 Factory Code 10/21

Packaging Examples Heat Transfers

Folding Options


Standard Tops Folds

1. Quarter-fold Wearer's left or right up can be requested

2. Half-fold widthwise

Wearer's left or right upper can be requested

- 3. Half-fold widthwise
- 4. Square fold

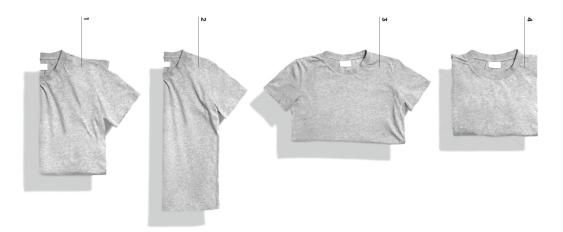

Folding Options

Standard Bottoms Folds

- 1. Tri-fold Back facing
- **2. Tri-fold** Front facing
- 3. Half-fold
- 4. Shorts or Seasonal Bottom Fold

Note: All label placement should follow the same guidelines as outline on the bottoms pages.



Loop Labels

1. If there is a clean center back:

Insert label into neck seam, binding edge or back neck tape. Center from left to right on garment

2. Size/COP Label:

Place 1/8" to the right, on the right side of main label

Attach as indicated by Technical Design

Please use this as a guideline for placement.

See Tech Speck for actual Label placement and execution





Endfold Label

1. Place label 1/2" below the center back neck seam, binding edge, or back neck tape. Center from left to right on the garment


2. Place label at the center back neck seam, binding edge, or back neck tape.

- **3. Size/COP Label:** Stack beneath and attach to main label
- 4. Place fit/program label 1/8" below the core endfold label

Attach as indicated by Technical Design

Please use this as a guideline for placement.

See Tech Speck for actual Label placement and execution

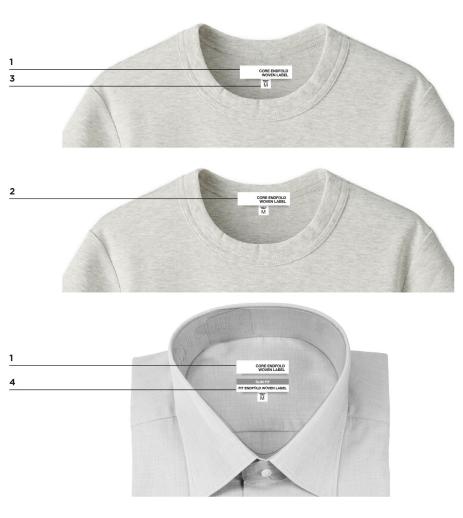

Patch Label

1. Place label 1/2" below the center back neck seam, binding edge, or back neck tape.

Center from left to right on the garment

- 2. Place label at the center back neck seam, binding edge, or back neck tape.
- 3. If there is center back detail (zipper, seam, etc.):

Place 1/2" below the back neck and 1/2" from the center back, on wearer's left


4. Size/COP Label:

Stack beneath and attach to main label

Attach as indicated by Technical Design

Please use this as a guideline for placement.

See Tech Speck for actual Label placement and execution

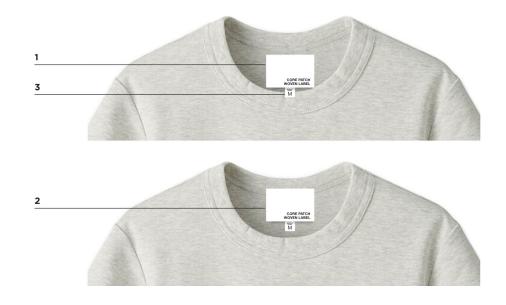

Placement

Heat Transfer/Print (Heat Seal)

1. If there is a clean back:

Place Heat Seal 1/2" below the center back neck seam, binding edge, or back neck tape. Center the Heat Seal from left to right on garment.



Side Seam Label

1. For tops:

The care & content label should be inserted 3 1/2" above the finished hem, sweep seam, or top of the side vent.

If applicable, place all other labels beneath label



Bottoms

 Heat Seal with size/fit: Center vertically on waistband. Logo is centered with fit/size 1.25" to the left of logo

Endfold label: Center vertically on waistband at center back

2. Country of Origin / Care & Content Label Apply to the customer-facing front right of the waistband (3 1/2" from the center; Satin PFL)

Apply UPC label behind care & content label

3. UPC Label

Topstitch label to wearer's left side seam allowance at pocket facing stitch line (Preference for exclusive brands)

4. Center back seam

5. Side seam





Denim Bottoms

1. Combined woven label (denim only): Applied to the center waistband

2. Joker:

Applied to the customer-facing back right, 2" from the center with the UPC facing the interior of the garment



Non-Denim Bottoms


- 1. Waistband core brand endfold label: Applied to the center waistband with size/COP label attached
- 2. Waistband Fit woven label Applied 1.25" to the left of the logo

3. Joker:

Applied to the customer-facing back right, 2" from the center with the UPC facing the interior of the garment

Size/COP label

Stack beneath and attach to main label

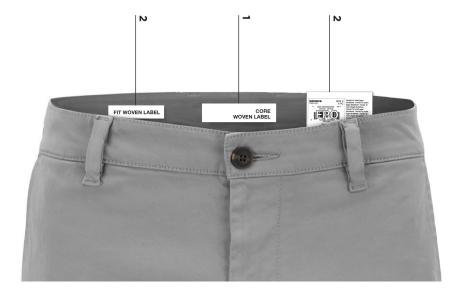

Elastic Waistband

- 1. Core woven label; Loop:
 - Insert loop label into waistband seam, binding edge, or back-waist elastic.
 - · Center from left to right on garment.
 - Set the label flat and do not leave an expansion allowance.
 - Size/COP Label: Place 1/8" to the right, on the right side of main label

2. Waistband Heat Transfer:

- \cdot Logo applied to the center waistband
- \cdot Fit and size applied to the left



2

Young Men's & Boys' (8-20) Tops (hanging and folded) Young Men's & Boys' (8-20) Bottoms (hanging and folded)

Standard | Hanging Tops

1. Woven Label, Heat Seal or Screen Print: Applied at the back center

2. Hangtag:

Applied at the customer-facing right underarm (brand facing forward)

3. Care & Content label:

Insert 3 1/2" above the finished hem, sweep seam, or top of the side vent

UPC label

Applied behind care & content label

This attachment is recommended for hanging product

Hangtags may be attached with the brand standard string and safety pin or swift attacher.

A swift attacher is used for private brands. Use a string and pin for exclusive brands.



Promotional | Hanging Tops

- Promotional Woven Label, Heat Seal or Screen Print: Applied at the back center
- 2. Promotional Hangtag (integrated): applied the through the second buttonhole (promotion facing forward)

3. Care & Content label:

Insert 3 1/2" above the finished hem, sweep seam, or top of the side vent

UPC label

Applied behind care & content label



Exception | Promotional | Hanging Tops


- Promotional Woven Label, Heat Seal or Screen Print: Applied at the back center
- 2. Promotional Hangtag (integrated): Applied at the customer-facing right underarm (brand facing forward)



Standard | Folded Tops

- **1. Woven Label, Heat Seal or Screen Print:** Applied at the back center
- 2. Size Strip (branded, integrated): Applied to the customer-facing lower right 1" from the right edge of garment, wrap

Note: Use for folded programs when the permanent merchandise position is on a table. This can be applied to any fold type.

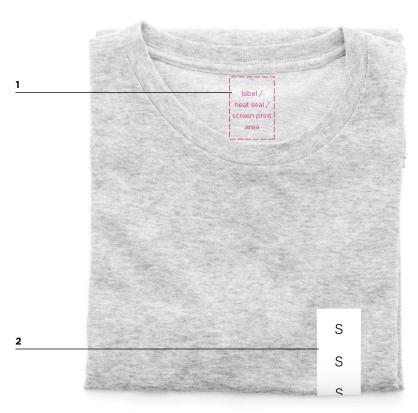

Promotional | Folded Tops

- Promotional Woven Label, Heat Seal or Screen Print: Applied at the back center
- 2. Promotional Sticker: Applied to the customer facing right above size strip

3. Size Strip (branded, integrated):

Applied to the customer-facing lower right 1" from the right edge of garment, wrap

Note: Use for folded programs when the permanent merchandise position is on a table. This can be applied to any fold type.




Exception | Folded Tops Strikepoint / Table and Tower

- Promotional Woven Label, Heat Seal or Screen Print: Applied at the back center
- 2. Promotional Size Strip (branded, integrated):

Applied to the customer-facing lower right 1" from the right edge of garment, wrap. Do not pair with a hangtag.

Note: Use for folded programs that move to a hanging position within two months of delivery. This can be applied to any fold type.

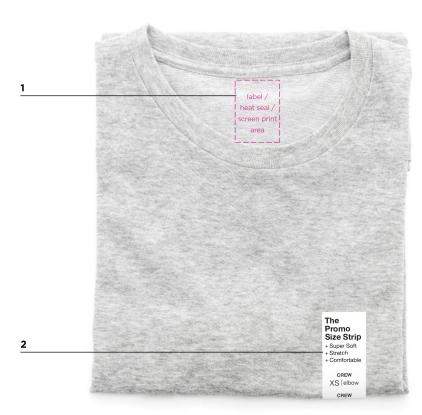

Exception | Hanging Tops Lightweight or Delicate

1. Woven Label, Heat Seal or Screen Print: Applied at the back center

2. Hangtag:

Applied through tearaway tab at the back neck to the customer-facing right 3 1/2" to the right of center. Hangtag placed in the interior of garment with the brand facing forward

3. Tearaway tab

This attachment is recommended for hanging product made of lightweight or delicate material



Standard | Back-Facing, Folded

1. Woven Label, Heat Seal or Screen Print: Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment.

3. Pocket Flasher:

Applied to the back pocket below the joker, centered

3. Generic Size Strip (non-integrated):

Applied to the lower leg 1" from the right edge of garment, wrap



Promotional | Back-Facing, Folded

1. Promotional Woven Label, Heat Seal or Screen Print:

Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment.

3. Promotional Pocket Flasher: Applied to the back pocket below the

joker, centered

3. Generic Size Strip (non-integrated): Applied to the lower leg 1" from the right edge of garment, wrap



Promotional | Front-Facing, Folded

1. Promotional Woven Label, Heat Seal or Screen Print:

Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Promotional joker with extender (integrated):

Applied to the customer-facing front right, 2" from the center. The joker must be facing out when folded with the UPC facing the interior of the garment

3. Generic Size Strip (non-integrated):

Applied to the lower leg 1" from the right edge of garment, wrap



Promotional | Back-Facing, Hanging

1. Woven Label, Heat Seal or Screen Print: Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment. Plastic hanger should not cover joker

3. Promotional Sticker:

Applied at the customer-facing front right, below the pocket



Standard | Front-Facing, Folded Shorts

1. Woven Label, Heat Seal or Screen Print: Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment.

3. Shorts Hem (Mini) Joker:

Applied to the customer-facing front right bottom hem, 1" from the front fold

Note: Use for folded programs when the permanent merchandise position is on a table. This can be applied to any fold type.



Promotional | Front-Facing, Folded Shorts

1. Promotional Woven Label, Heat Seal or **Screen Print:**

Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Promotional joker with extender (integrated):

Applied to the customer-facing front right, 2" from the center. The joker must be facing out when folded with the UPC facing the interior of the garment

3. Shorts Hem (mini) Joker:

Applied to the customer-facing front right bottom hem, 1" from the front fold



PROMO JOKER

Standard | Side-Facing, Hanging Shorts

1. Woven label, Heat Seal or Screen Print: Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment.

Plastic hanger should not cover joker

3. Pocket Flasher:

Applied to the back pocket below the joker, centered

4. Shorts Hem (mini) Joker:

Applied to the customer-facing front right bottom hem, 1" from the front fold



Exception | Promotional | Side-Facing, Hanging Cargo Shorts

1. Promotional Woven Label, Heat Seal or Screen Print:

Applied to the center/customer-facing back left of the waistband. Logo is centered with fit/size 1.25" to the left of logo

2. Promotional Pocket Flasher:

Applied to the back pocket below the joker, centered

3. Joker (integrated):

Applied to the customer-facing back right, 2" from the center with the UPC facing interior of the garment.

4. Shorts Hem (mini) Joker:

Applied to the customer-facing front right bottom hem, 1" from the front fold

