

All Private and Exclusive brands must follow measurement guidelines unless specified in the TP.



# Table of Contents

•	Meas	urement Basics	3-9
٠	Tops.		11-66
	•	Neck11	<u>-16</u>
	•	Collars17	<u>-21</u>
	•	Hoods22	<u>-24</u>
	•	Shoulders & Yokes25	<u>-29</u>
	•	Bras	<u>-43</u>
	•	Across Front, Back, & Shoulder43-	<u>-45</u>
	•	<u>Chest46</u>	-47
	•	<u>Waist49-</u>	<u>-50</u>
	•	Hips/Sweeps50	<u>-51</u>
	•	Lengths52-	<u>-57</u>
	•	Armholes & Sleeves57-	<u>·64</u>
	•	<u>Trims65-</u>	<u>.66</u>
•	<b>Botton</b>	าร	67-97
	•	<u>Waist67-</u>	<u>-75</u>
	•	Hips76-	<u>-79</u>
	•	Leg Widths & Openings79-	<u>83</u>
	•	Rises84-	<u>86</u>
	•	Briefs85-	<u>.88</u>
	•	<u>Fly88-</u>	<u>.89</u>
	•	Gusset/Crotches90-	<u>.92</u>
	•	Inseams/Outseams92-	<u>.94</u>
	•	Bibs95-	<u>-97</u>
	•	Accessories & Components97-1	<u>115</u>
	•	Pockets116-1	125

# KOHĽS

# HOW TO MEASURE GUIDE FOR PRIVATE & EXCLUSIVE BRAND APPAREL

The Kohl's How To Measure Guide is used both internally and externally to correctly demonstrate how Kohl's private label & exclusive brand merchandise is measured. It is necessary to use the correct measuring tools when following the measuring guidelines for all products in order to remain consistent with our specification requests.

The How To Measure Guide contains Point of Measure (POM), along with its short description, a long description of how to measure and an illustration. The descriptions for each point may not always work for every situation. In these cases, the Technical Designer may revise or clarify the description by adding, removing or rewriting the description.


This guide should be used in collaboration with the measurement specification sheet, which outlines the correct POMs to be used for that particular garment.

- All measurements are given in the nearest 1/8 of an inch
- Measurements are taken on wearer's left side of garment

- Measurements are taken on front of garment, unless otherwise specified.
  Measurements are taken on the outside of garment, unless otherwise specified.
- Fasteners, such as zippers, snaps, buttons, etc. should be closed when measurements are taken, unless otherwise specified.
- Descriptions using the term "HPS" meaning *High Point Shoulder* reference the point at the shoulder and neck intersection where the natural fold of the garment falls. It may be a folded edge or a seam. Garments with collars or set-in neck trim, refer to the neck intersection point as the seam. Garments with bound neck trim, refer to the neck intersection point as the top of the trim (see figure 1). Descriptions using the term "**peak**" references to the point where the strap joins the body of the garment (see figure 2). This is only referenced on a camisole or tank type top.
- Circumference measurements
- KNIT/SWEATER/WOVEN garment measurements are recorded in HALF CIRCUMFERENCE, noted as EITHER "H" or "1/2 Measurement"

# Example: POM A260, A260H SW (Sweater) CHEST 1" BELOW ARMHOLE RE-LAXED

• Please note wherever there is a seam/edge, you will be measuring from the seam with the exceptions of any bound edge finishes. If the garment is bound, you should be measuring from the edge. (Figure 1-3)

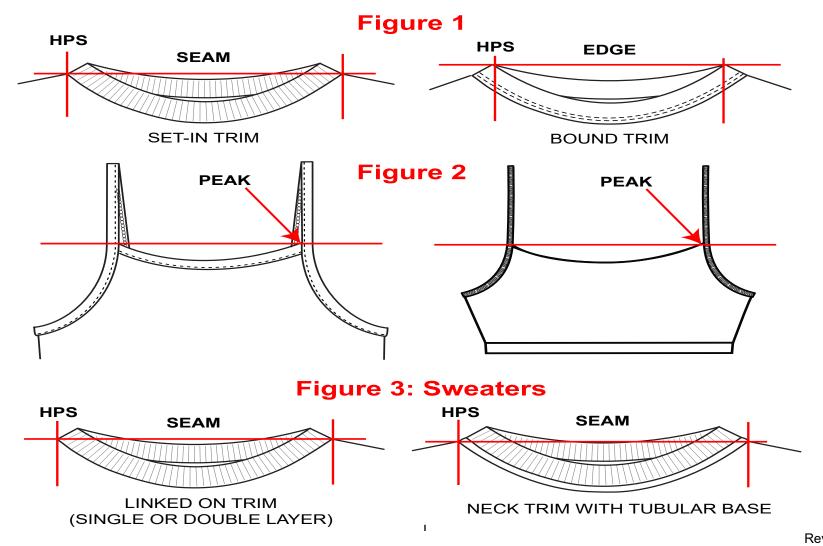



Use of Placement POMs

• If a POM requires a placement for measuring that DOES NOT GRADE, the Tech Designer should replace the # in the POM description with the actual number to locate where to measure.

If a POM requires a GRADED placement for measuring, then a second POM for placement should accompany the original POM.


Example:

• HOOD WIDTH AT #" FM HIGHEST PT - If placement does not grade the TD should replace **#** with actual number. If the distance is 3", POM description will read HOOD WIDTH AT 3" FM HIGHEST PT. The Number 3 will replace the **#** sign.

If placement grades the TD should use HOOD PLCMT FROM HIGHEST PT along with HOOD WIDTH AT #" FM HIGHEST PT. The #" remains in the POM unchanged.



How to Lay out Tops, Pants, & Sweaters: See K-Link Resources

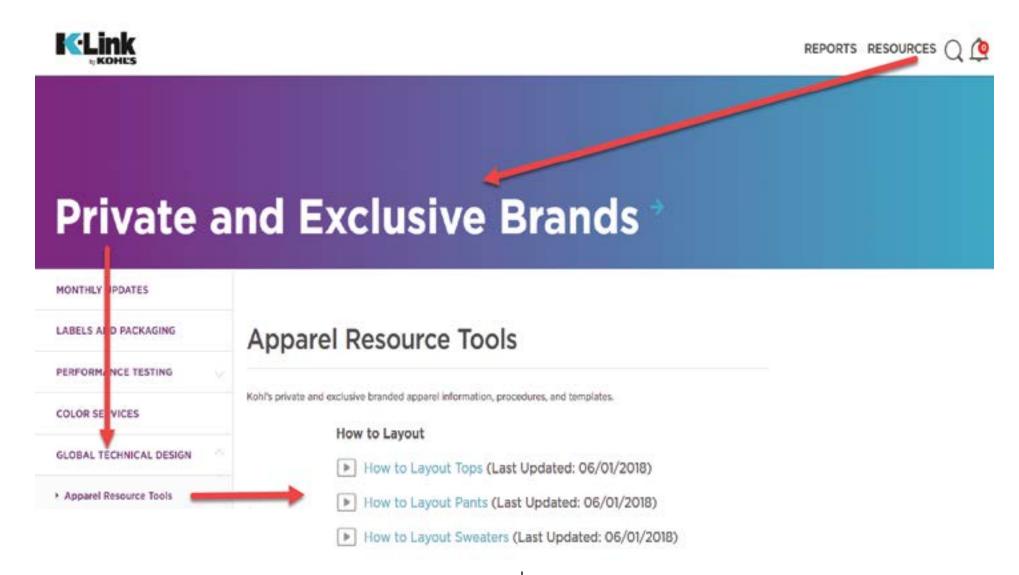



# How To Measure Abbreviations



No Grade

Outseam

Placket

Pocket

Relaxed

Shoulder

Sleeve

Seam Allowance

Point

Placement

Neck

# HOW TO MEASURE GUIDE FOR PRIVATE & EXCLUSIVE BRAND APPAREL

# How To Measure Abbreviations

- NG
- NK
- 09
- OS
- PLCMT
- PLKT
- PKT
- PT
- RI XD
- SA
- 5A
- SHLDR
- SLV
- SLVLSS Sleeveless
- S/SLV Short Sleeve
- SD
- SS
- STR
- 3/4 SLV Three-Quarter Sleeve

Straight

Side Seam

Side

• UA Upperarm

- WB
- Waistband
- WST Waist


WORDS THAT SHOULD NOT BE ABBREVIATED

- Seam
- Stitch

I.




#### POM A003 WAIST POSITION ON FORM AT CENTER FRONT

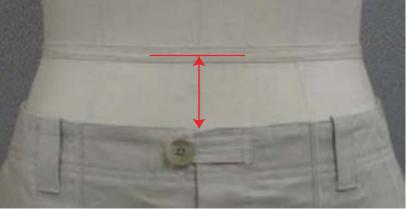


This measurement is for fit reference on the dressform. Measure from Center of waist tape on dressform to top edge of garment waist at Center Front.

#### POM A004 WAIST POSITION ON FORM AT CENTER BACK

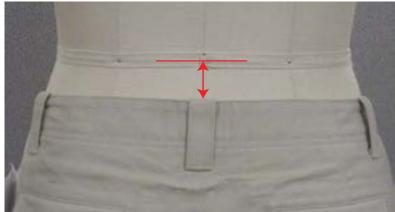


This measurement is for fit reference on the dressform. Measure from Center of waist tape on dressform to top edge of garment waist at Center Back.

#### POM A005 WAIST POSITION ON FORM AT SIDE SEAM

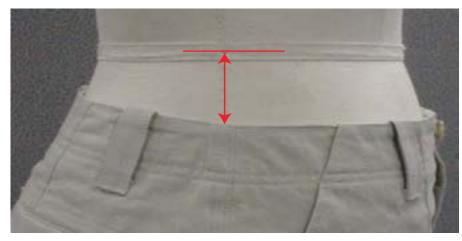

This measurement is for fit reference on the dressform. Measure from Center of waist tape on dressform to top edge of garment waist at Side Seam.


#### POM A009 HOW TO MEASURE FLAT FELLED SEAMS

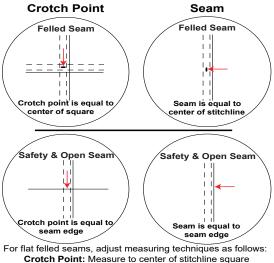

Seam: Measure to center of stitchline


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



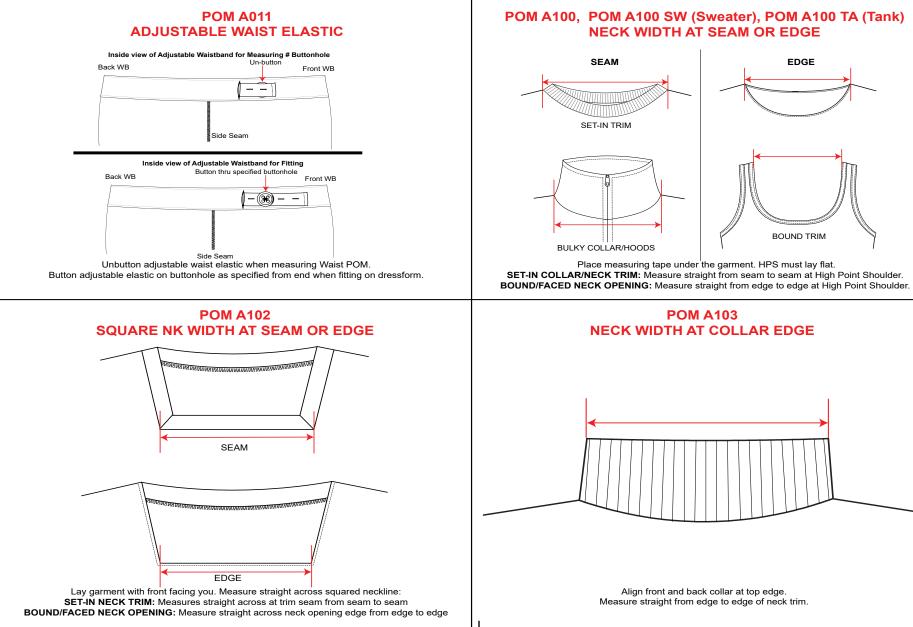

GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



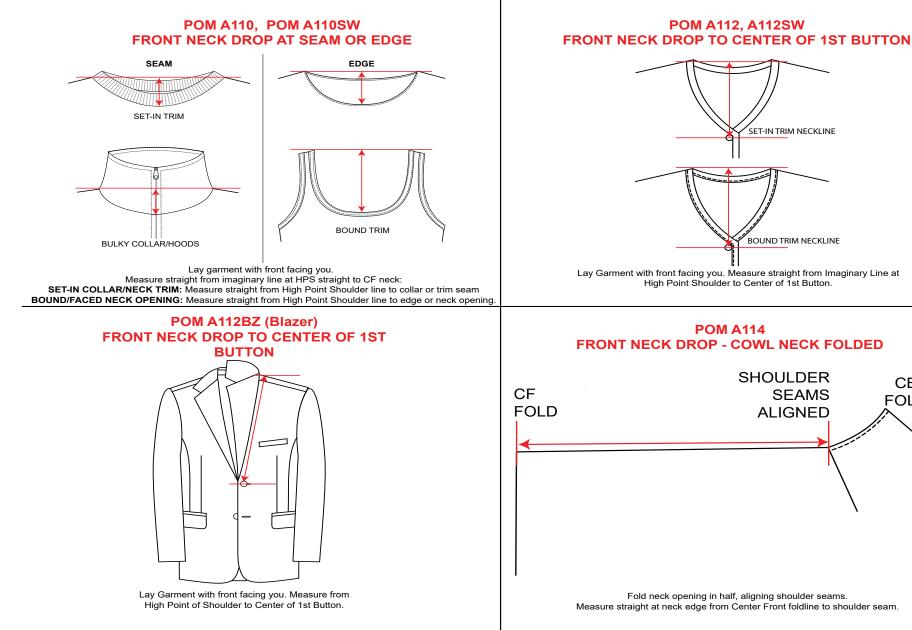


CB

FOLD




# <section-header><section-header><section-header>



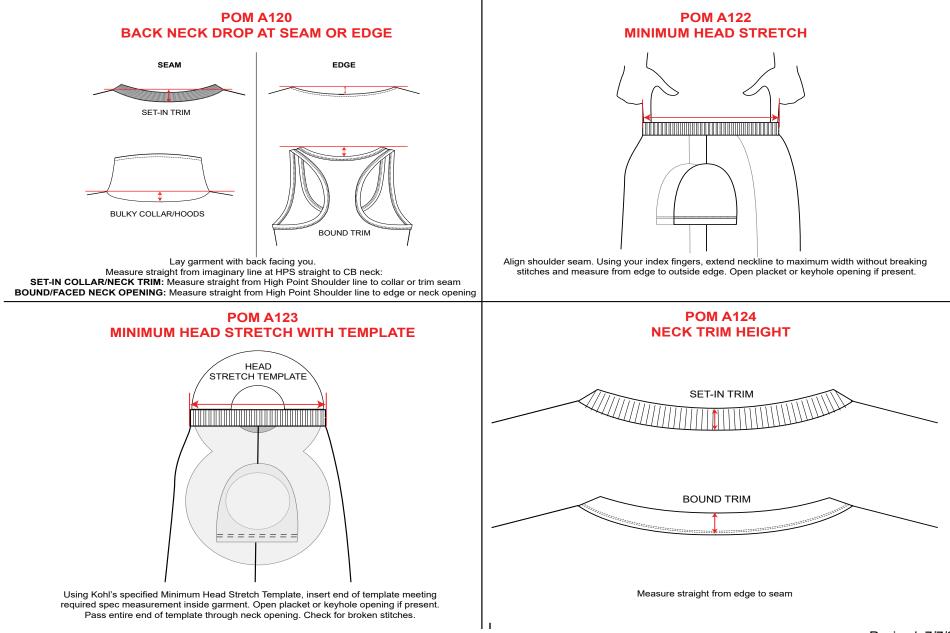


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



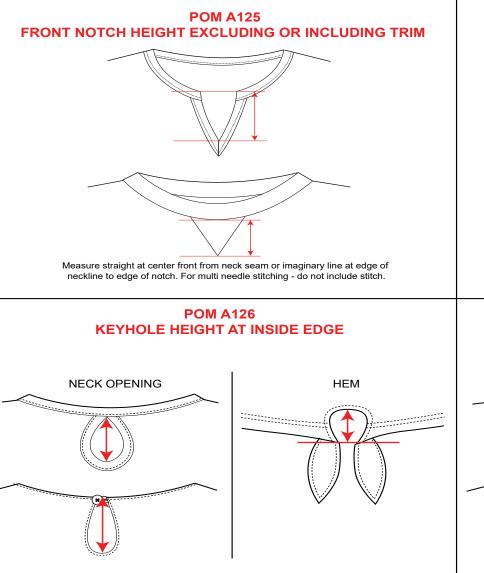


Measure straight from edge to edge at deepest point of keyhole opening


POM A125A FRONT NOTCH WIDTH EXCLUDING OR INCLUDING TRIM

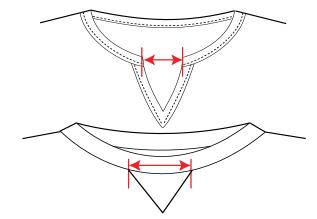

Measure straight from edge to edge or seam to seam at widest point


#### POM A126A KEYHOLE WIDTH AT INSIDE EDGE

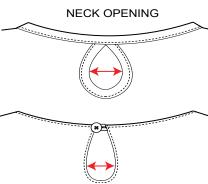

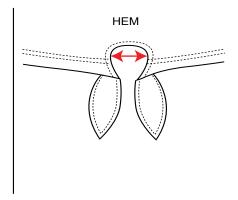


Measure straight from edge to edge at widest point of keyhole opening




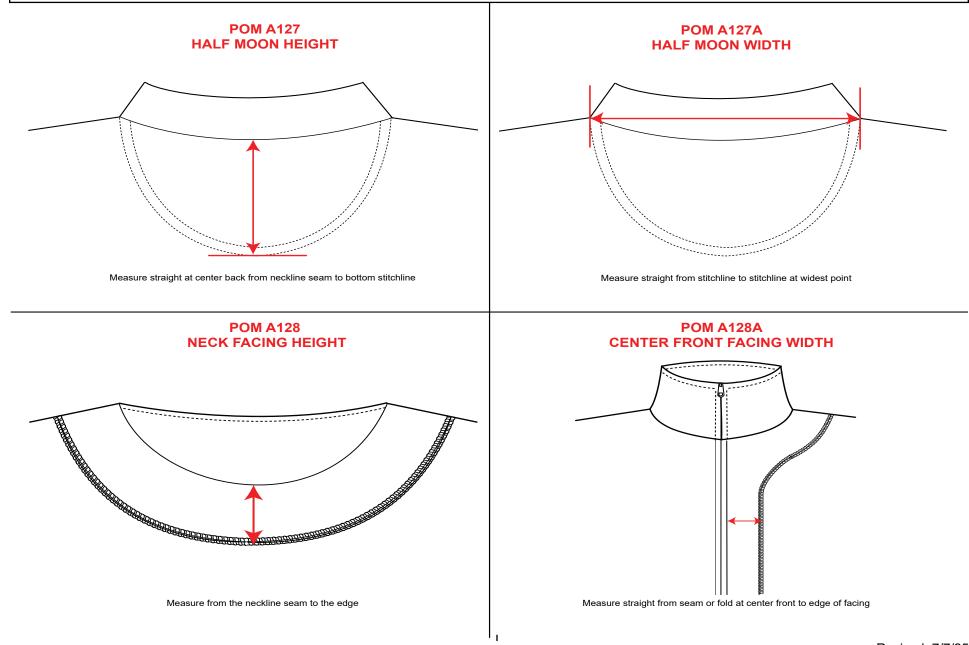




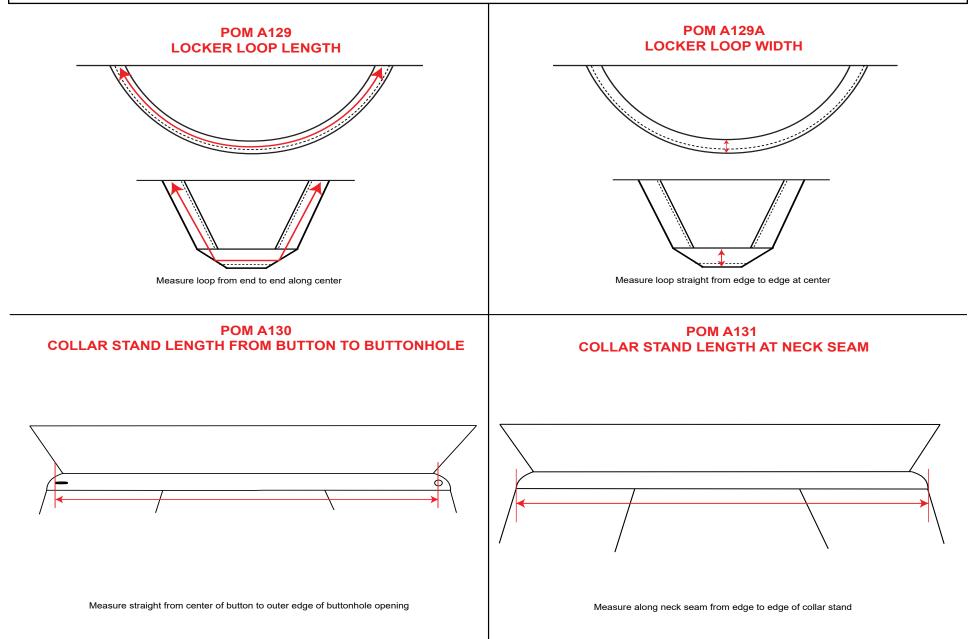




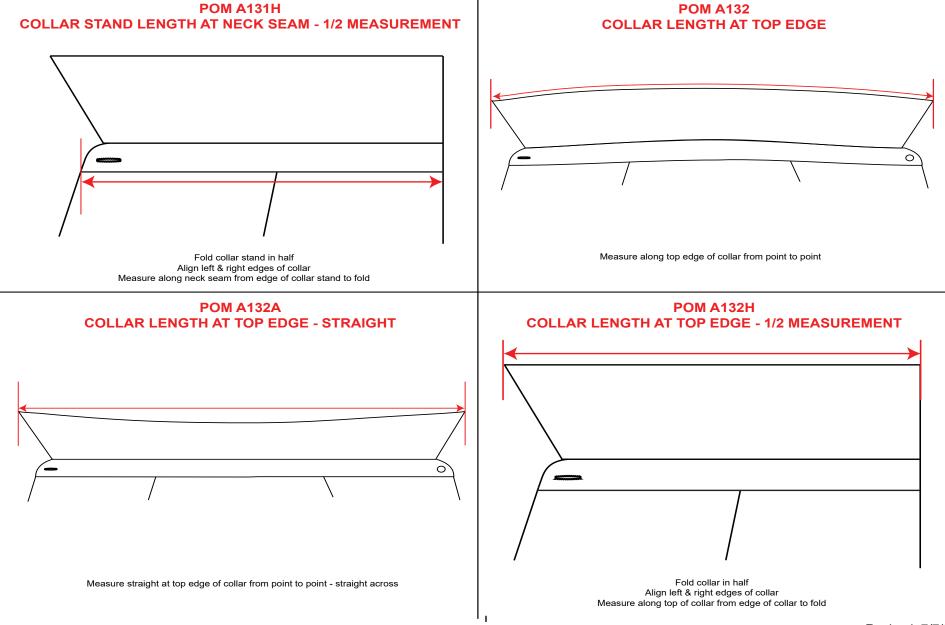




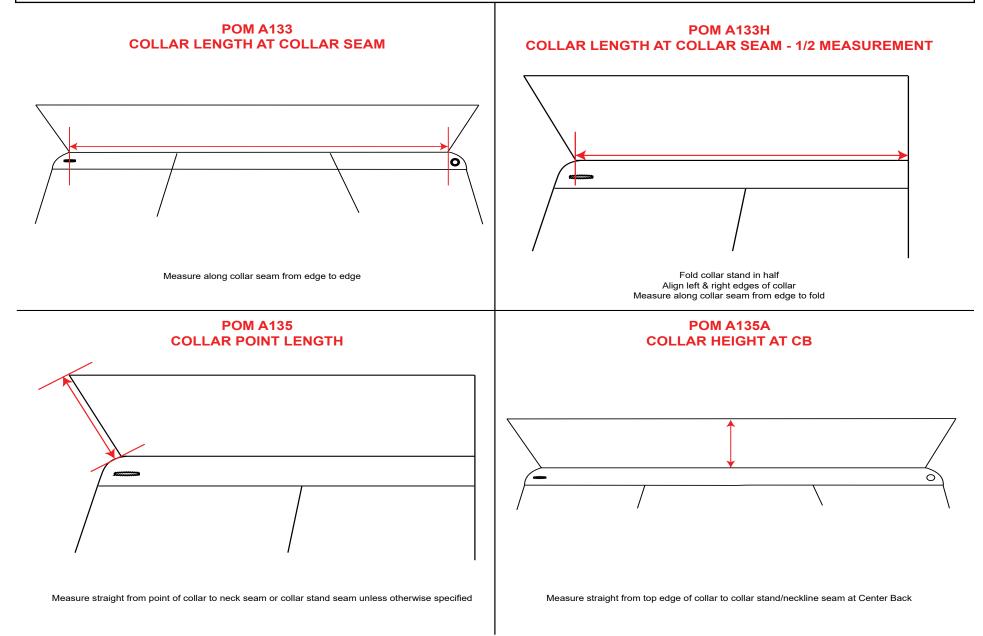



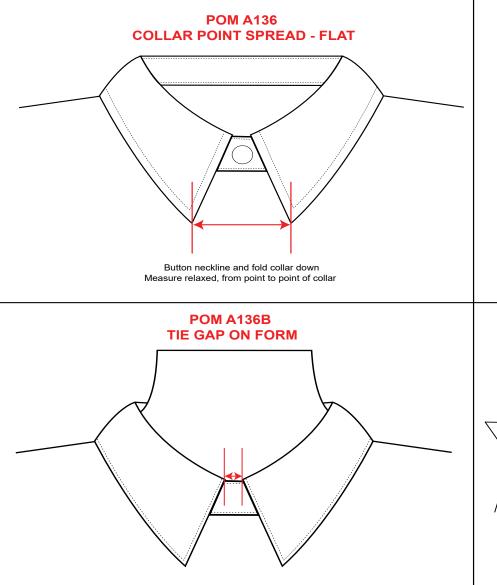


With garment on form, Measure at Center Front between collar edges at collar/stand seam, with neckline buttoned and collar folded down

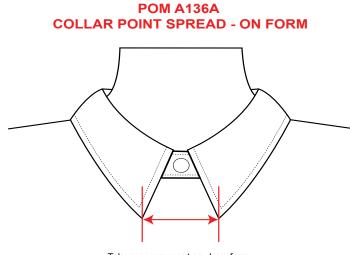

Take measurement on dressform Button neckline and fold collar down Measure the distance from point to point of collar

#### POM A137 COLLAR STAND HEIGHT AT CB

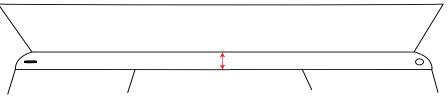


Measure straight from collar stand seam to neckline seam at Center Back

L L




#### POM A137A COLLAR STAND HEIGHT AT CENTER FRONT

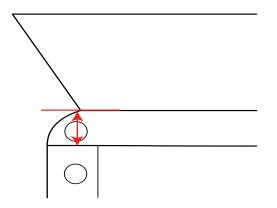


Measure straight from collar stand edge to neckline seam at Center Front

#### POM A138A LAPEL POINT LENGTH

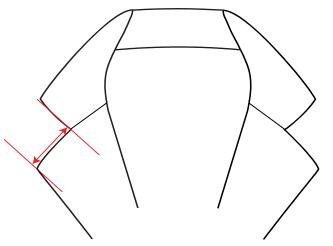


Measure straight from edge at collar and lapel join to lapel point

POM A138 FRONT NECKLINE LENGTH AT SEAM

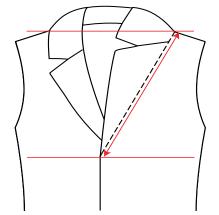


Fold collar up, measure along collar seam from High Point Shoulder to edge

#### POM A138B LAPEL WIDTH

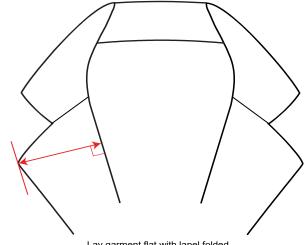


Lay garment flat with lapel folded Measure at a right angle from fold to lapel point



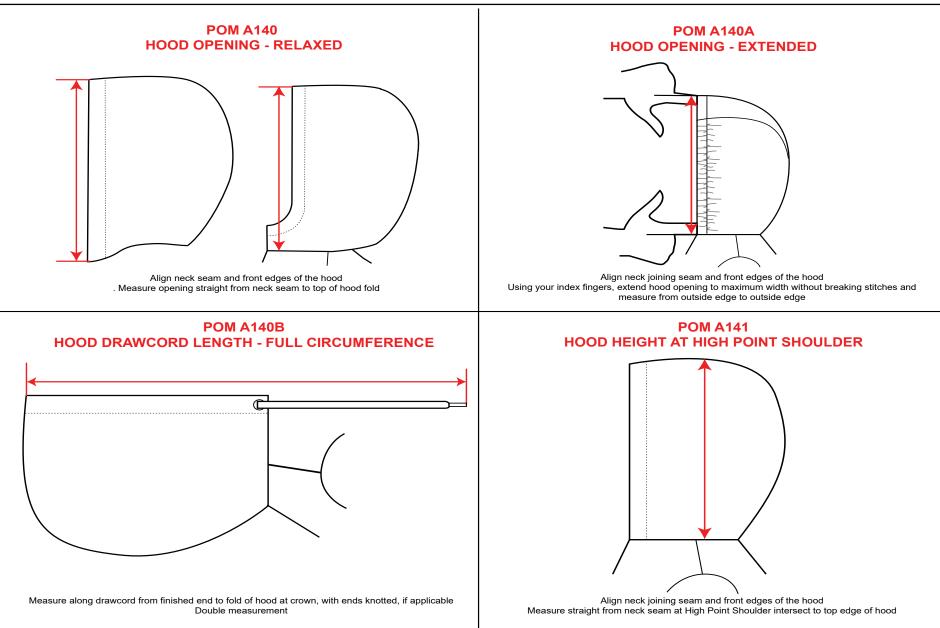


22




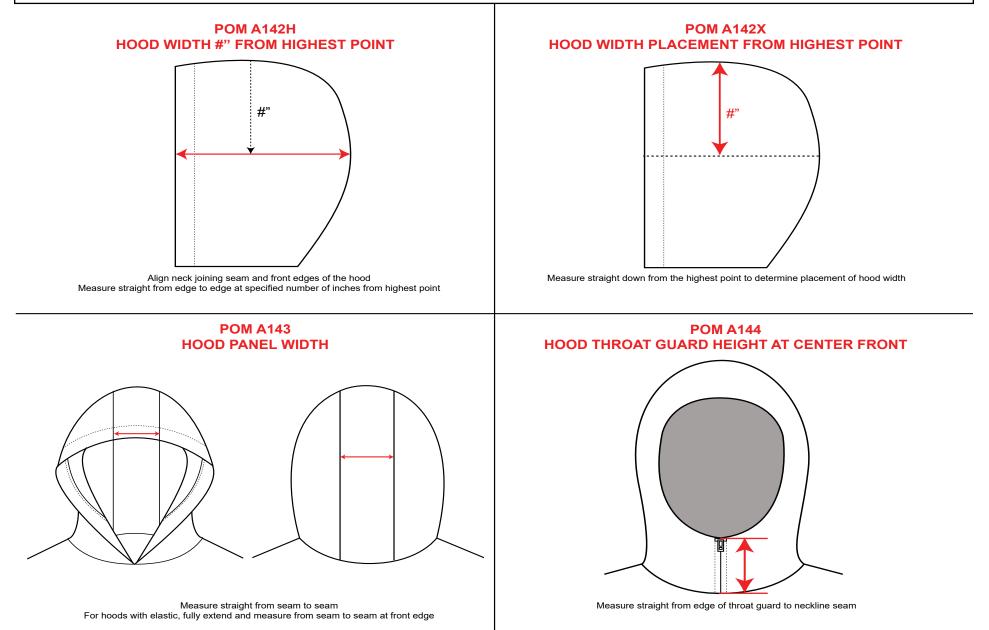



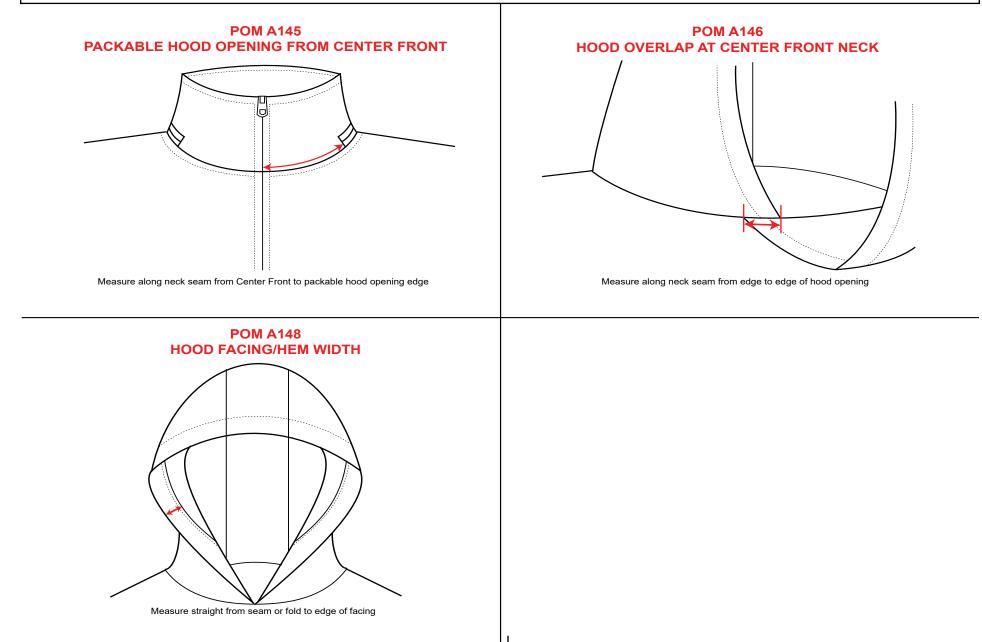




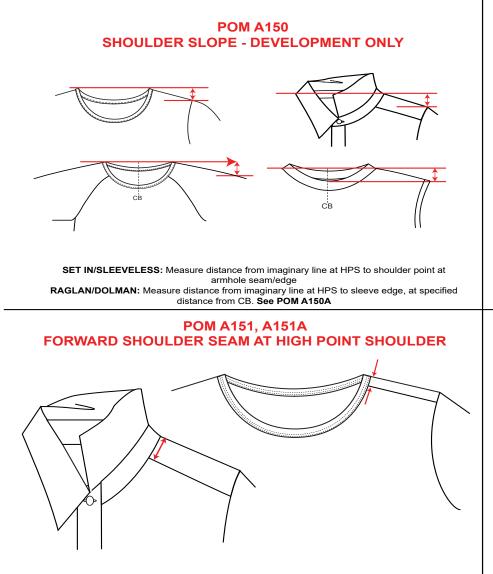


Measure along neck seam from High Point Shoulder to forward shoulder seam

POM A150A SHOULDER SLOPE PLACEMENT FROM CENTER BACK -DEVELOPMENT ONLY

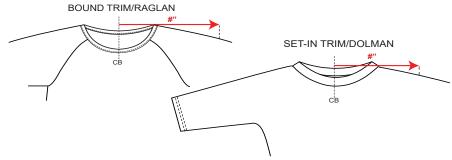


Place a ruler at HPS level and measure specified distance from CB, to locate shoulder slope placement.

#### POM A151B FORWARD SHOULDER SEAM AT ARMHOLE SEAM

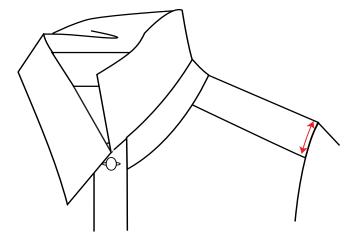


Measure along armhole curve seam from natural fold of shoulder to forward shoulder seam



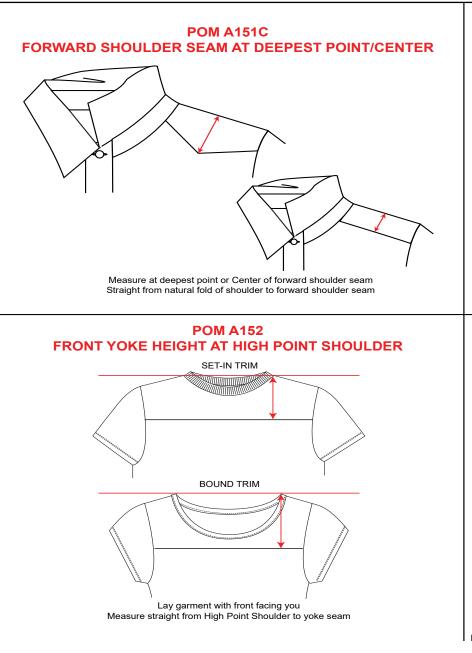


POM A151D RAGLAN SEAM FROM HIGH POINT SHOULDER -DEVELOPMENT ONLY

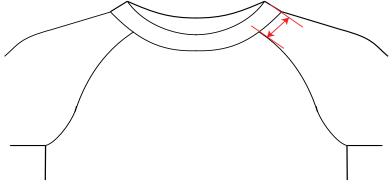


Measure along neck seam from High Point Shoulder to Raglan Seam

#### POM A152A FRONT YOKE HEIGHT AT CENTER FRONT

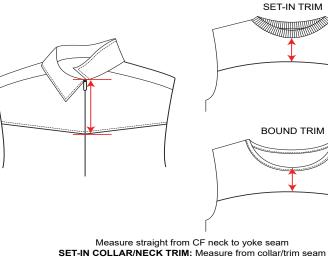


SET-IN COLLAR/NECK TRIM: Measure from collar/trim seam BOUND/FACED NECK OPENING: Measure from edge of neck opening



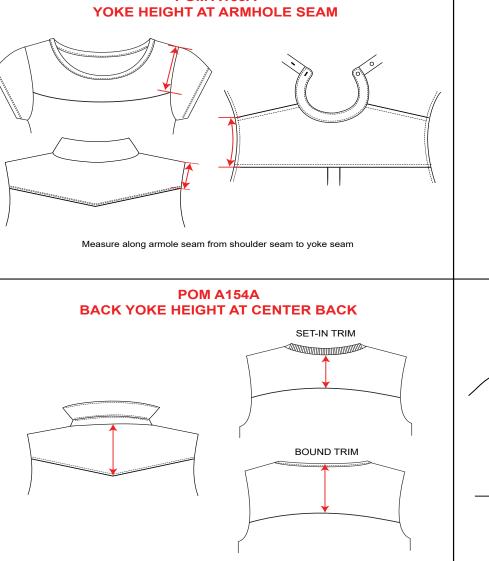


**POM A153A** 

Measure straight from CB neck to yoke seam SET-IN COLLAR/NECK TRIM: Measure from collar/trim seam BOUND/FACED NECK OPENING: Measure from edge of neck opening POM A154 BACK YOKE HEIGHT AT SHOULDER/NECK SEAM

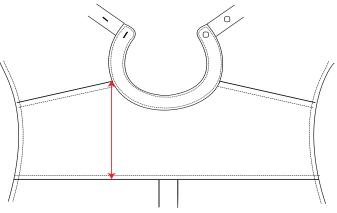


Lay garment with back facing you Measure straight from High Point Shoulder/Neck Joined point to yoke seam

#### POM A156 RAGLAN ACROSS FRONT AT NECKLINE

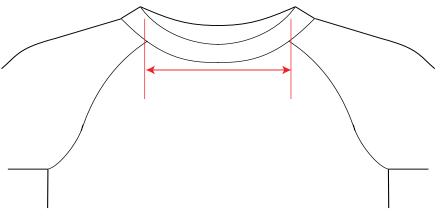


Lay garment with front facing you Measure straight from raglan seam to seam at front neckline



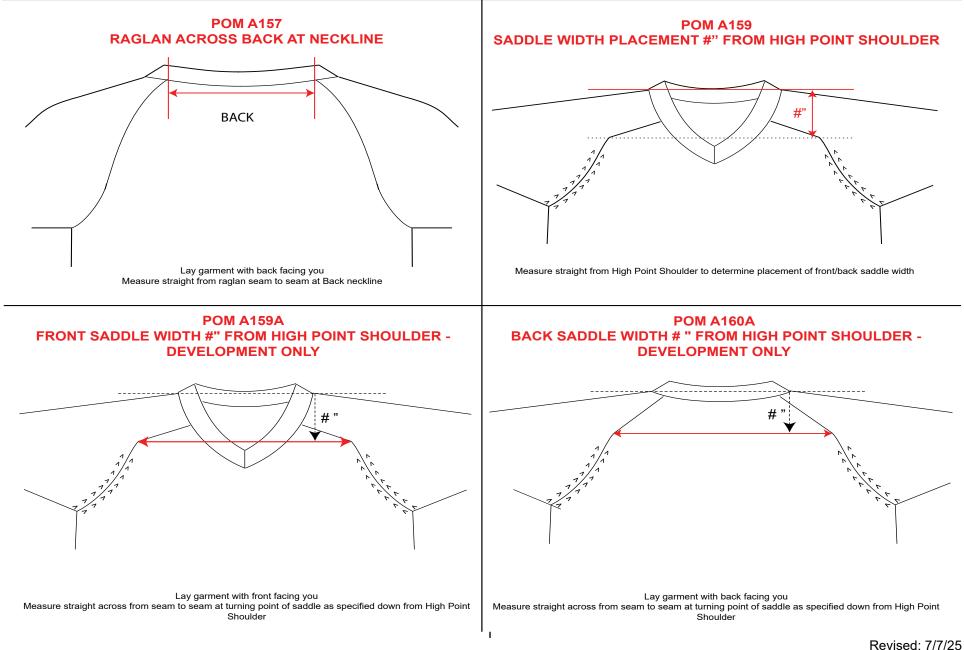


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



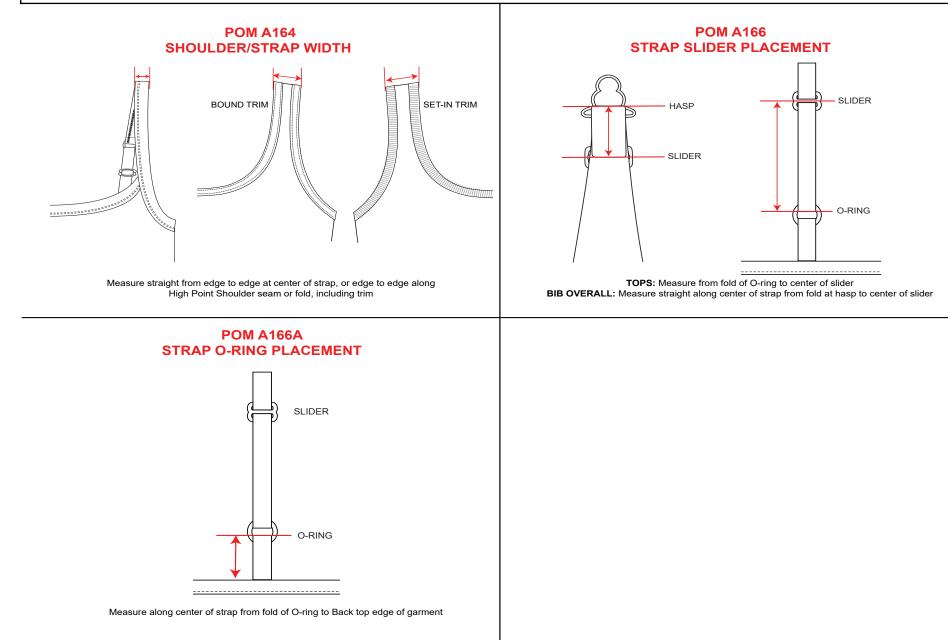


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



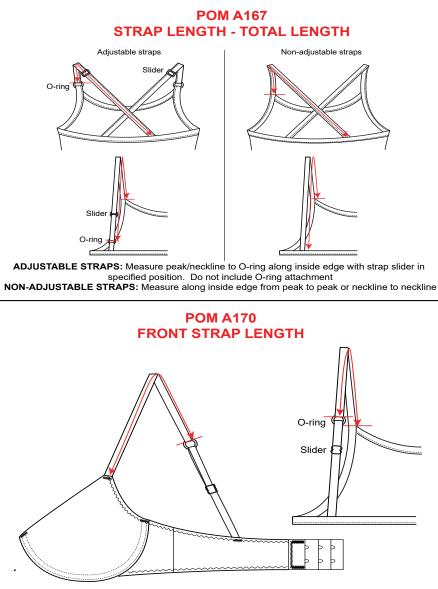


Measure along strap from cup join/peak to ring excluding hardware

1

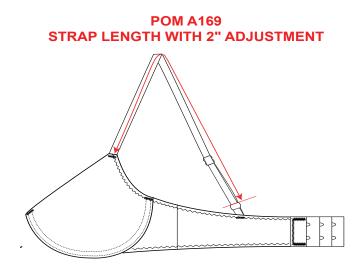


Measure strap from front cup join to back edge excluding hardware and tab

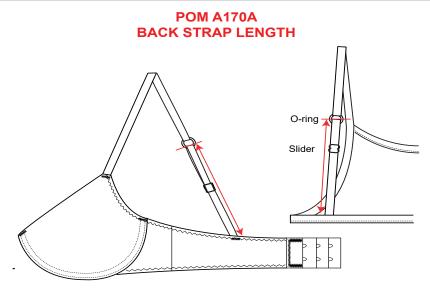


Measure along strap from O-ring to wing/back seam or binding excluding hardware



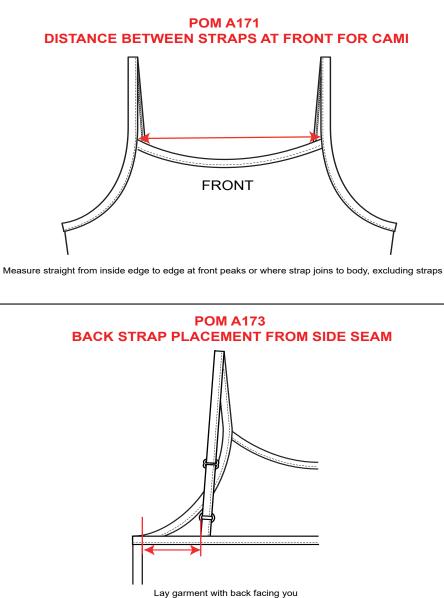


Lay garment with back facing you Measure along back neckline from Side Seam location to edge of strap

POM A172 DISTANCE BETWEEN STRAPS AT BACK FOR CAMI

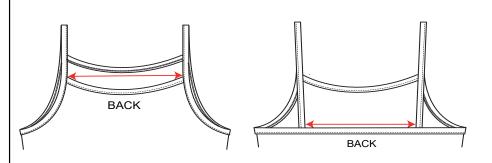


Lay garment flat with back facing you Measure straight from inside edge to edge at back peaks or where strap joins to body, excluding straps

#### POM A175 DISTANCE BETWEEN STRAPS AT FRONT

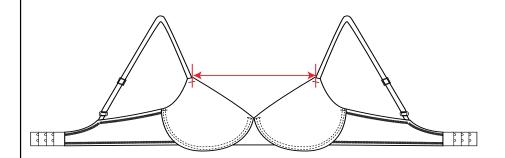


Measure straight across front at strap join from inside edge to inside edge



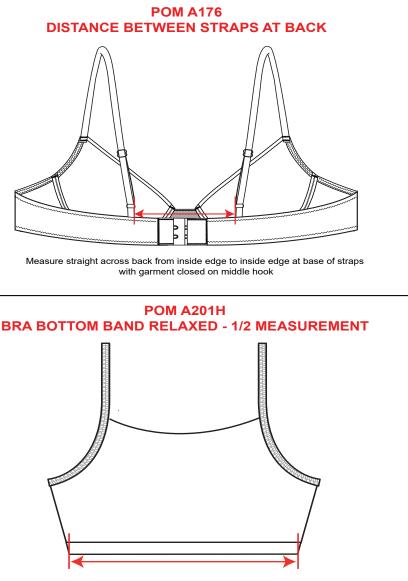


Measure straight from outside edge to outside edge at bottom opening INTERNAL BRA: Turn garment inside out so bra is outside of garment shell before measuring POM A200 BOTTOM BAND LENGTH - EXCLUDING CLOSURE

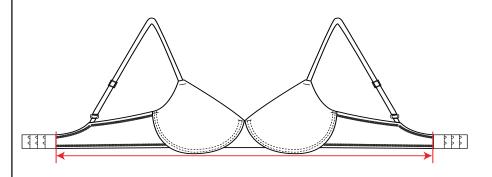

Lay garment flat, unfastened Measure from closure seam to closure seam, excluding hooks and eyes


POM A202H BRA BOTTOM BAND EXTENDED - 1/2 MEASUREMENT

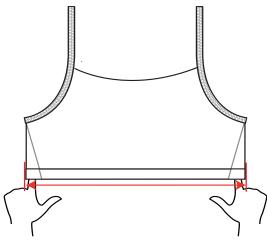

Using your index fingers, extend bra to maximum width without breaking stitches and measure from outside edge to outside edge INTERNAL BRA: Turn garment inside out so bra is outside of garment shell before measuring


L 1



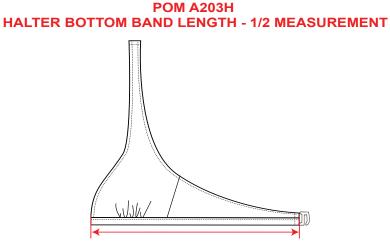


Measure straight at bottom band from CF to CB of garment - Folded

#### POM A206 BACK NECKLINE LENGTH WITH FRONT CLOSURE

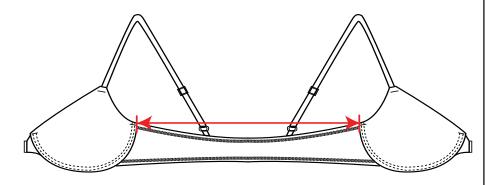


Lay garment flat, unfastened Measure along top edge from cup join seam to cup join seam POM A205 BOTTOM BAND LENGTH FRONT CLOSURE

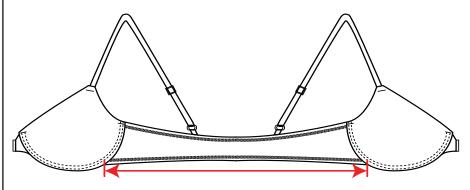

Lay garment flat, unfastened Measure along bottom back edge from seam to seam of cup join

#### POM A207 BACK NECKLINE LENGTH WITH BACK CLOSURE

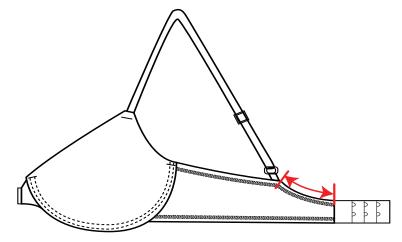

Measure along edge from closure seam to back strap platform




# POM A208, A208GG (Gore Grade), A208PG (Plunge Grade) POM A209, A209GG (Gore Grade), A209PG (Plunge Grade) WING LENGTH AT TOP EDGE WING LENGTH AT BOTTOM $VJV_{V}$ Measure along edge from closure seam to back strap platform Measure along bottom edge of wing from wire channel or cup seam to closure seam - excluding closure POM A210, A210GG (Gore Grade), A210PG (Plunge Grade) POM A211, A211GG (Gore Grade), A211PG (Plunge Grade) SIDE WING LENGTH AT TOP TO BACK EXTENSION SEAM SIDE WING LENGTH AT BOTTOM TO BACK EXTENSION SEAM

1


Measure top of wing from wire channel to back extension seam

Measure side of wing at bottom from wire channel to back extension seam




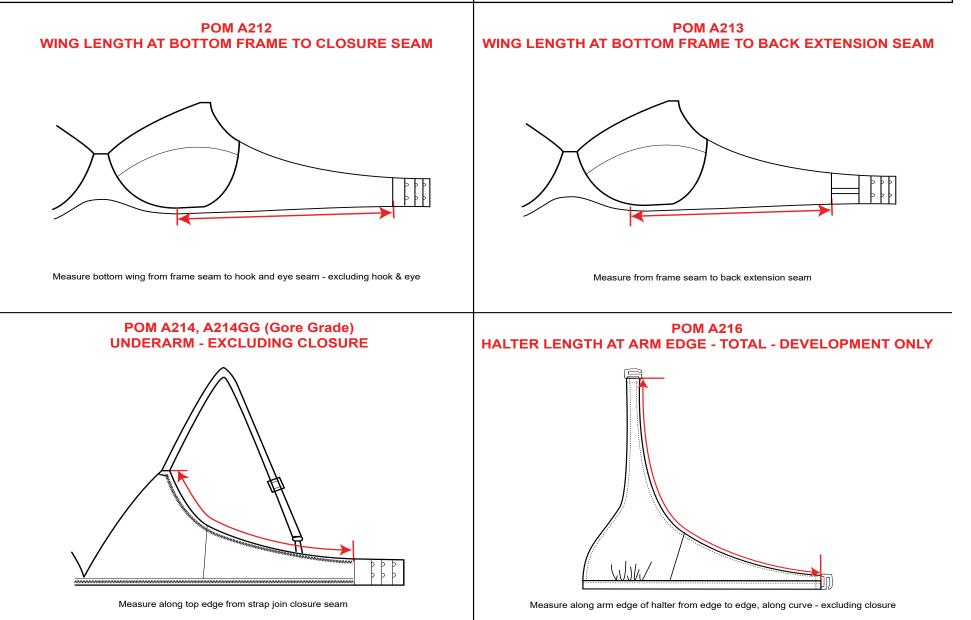



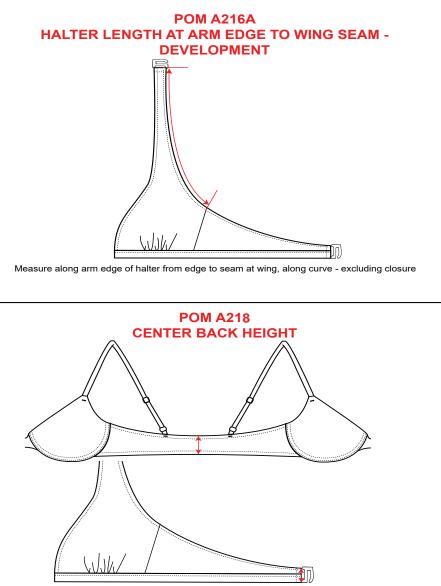


Measure straight from edge to edge at center back

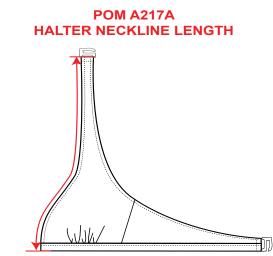

Measure along neckline edge of halter from strap edge to bottom edge - excluding closure


POM A219 WING HEIGHT AT CUP SEAM

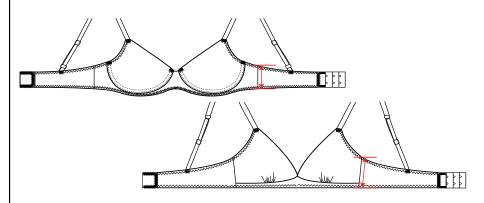

Measure along wing seam from edge to edge

1




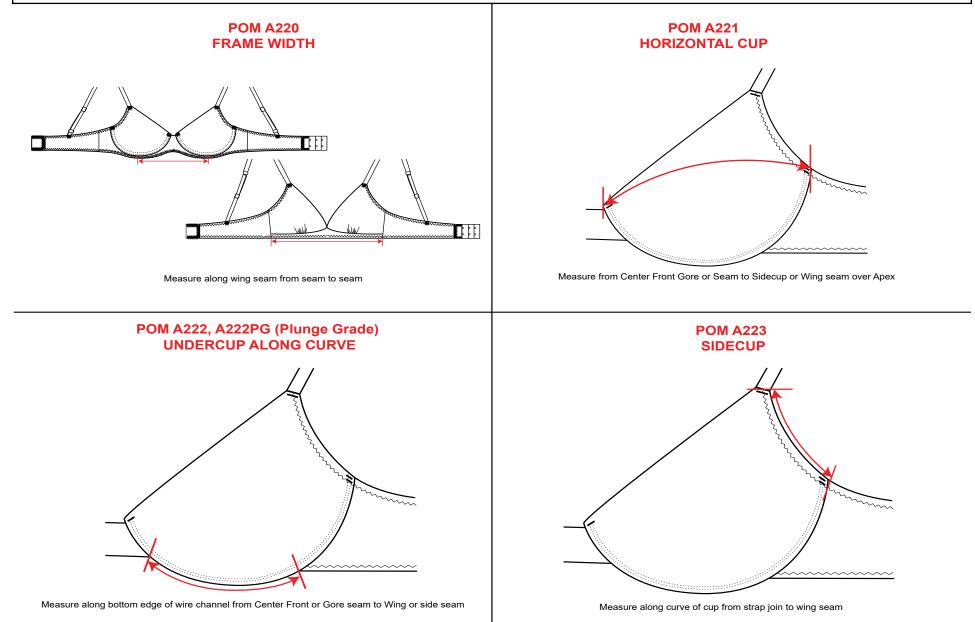

GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.




### POM A224, A224PG (Plunge Grade) CUP WIRE CHANNEL EDGE TO EDGE

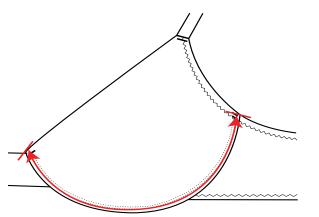


Measure along outer stitch of wire channel from cup edge to cup edge


### POM A225, A225PG (Plunge Grade) CUP LENGTH AT NECKLINE

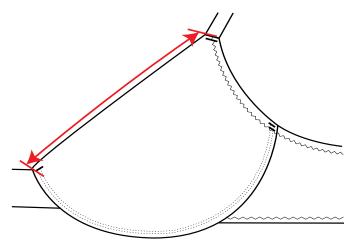

Measure along neckline edge from Center Front or Gore seam to side cup/strap join or platform

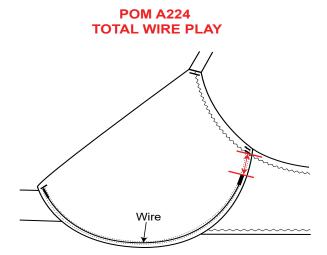


With wire end touching Center Front bartack, measure distance between wire end and bartack at side of cup

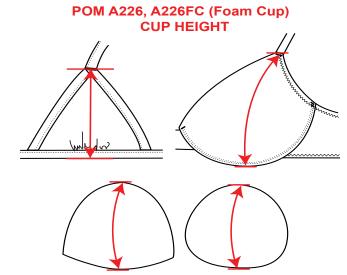

Measure from bottom edge of cup to strap join/bottom cup, over apex FOAM CUP: Orientation of cup measurement matches orientation of cup in garment.




### POM A227 CUP LENGTH AT BOTTOM EDGE

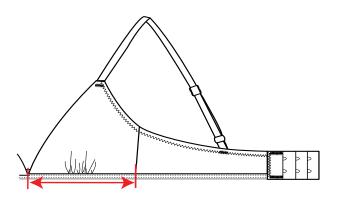

Measure along bottom edge from Center Front or Gore seam to side wing seam or side seam.


### POM A227FC (Foam Cup) CUP WIDTH AT WIDEST POINT

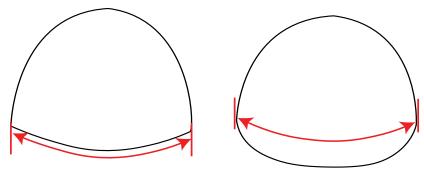

Measure edge to edge over apex.


Measure straight from edge to edge at widest point of foam cup. Orientation of cup measurement matches orientation of cup in garment.

### POM 227S CUP WIDTH AT BOTTOM SEAM - SWIM

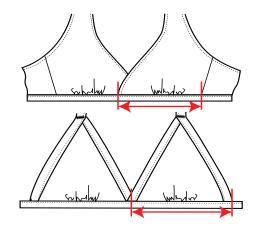

Measure along bottom edge from Center Front to side wing seam or side seam


### POM 228S CUP WIDTH #" FROM BOTTOM SEAM OR EDGE - SWIM DEVELOPMENT ONLY

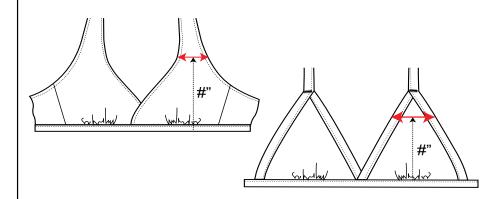

Measure straight across from edge to edge of cup at specified distance from bottom edge or seam of cup


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



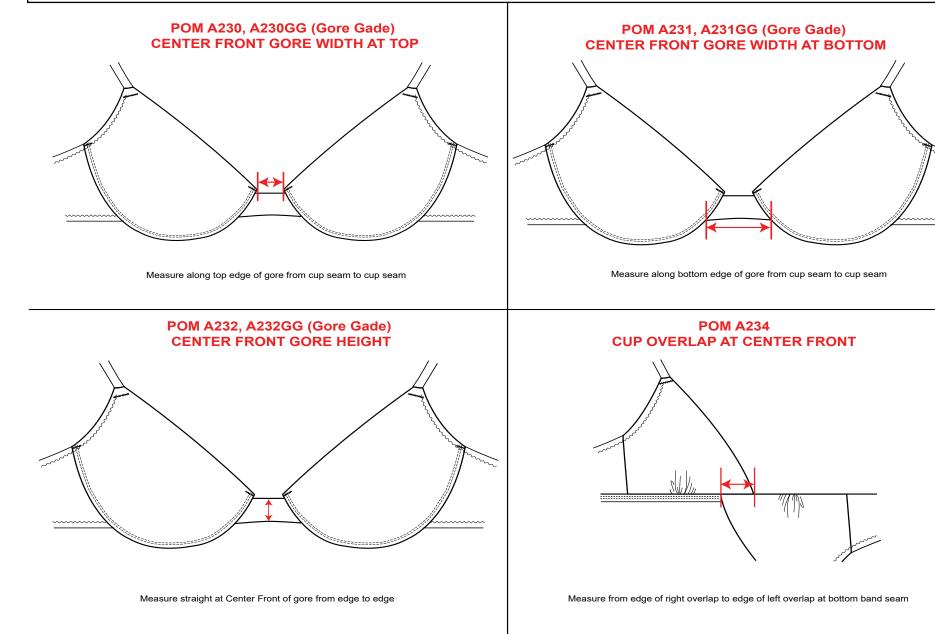




**POM A235A** 

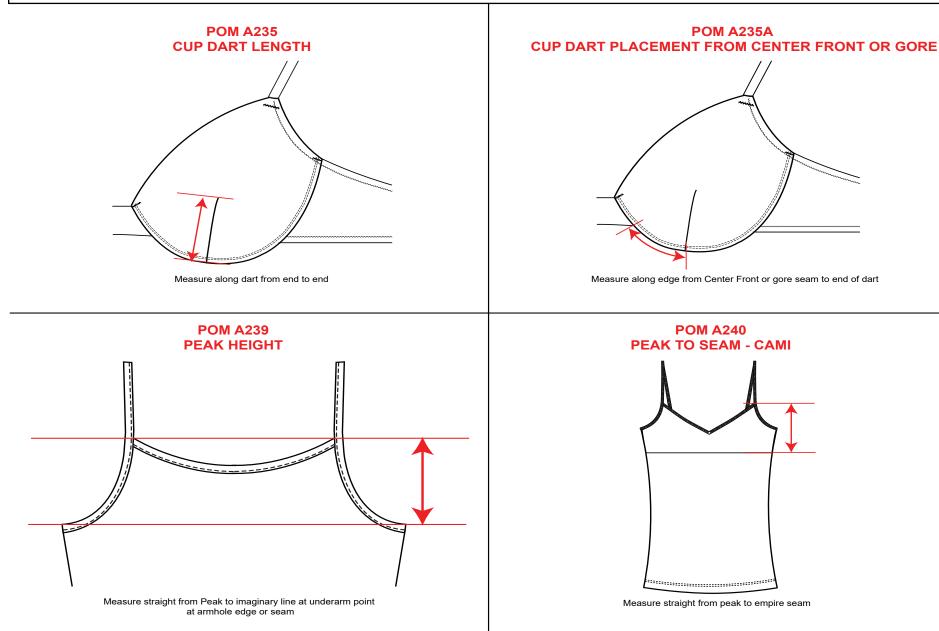




### POM A241 AB CENTER FRONT LENGTH - SPORT BRA

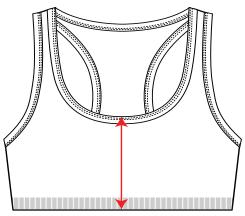


Lay garment with front facing you Measure straight from Center Front neck edge to Center Front bottom edge

### POM A241 IB CENTER FRONT LENGTH - BRA

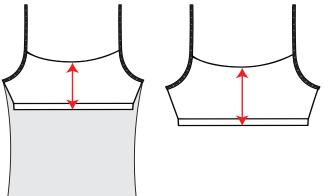


Measure bra straight at Center Front from neck edge to bottom opening edge, including trim

### POM A242 AB CENTER BACK LENGTH - SPORT BRA

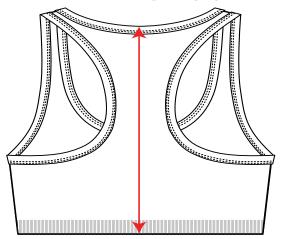

Lay garment with back facing you Measure straight from Center Back neck edge to Center Back bottom edge

POM A242 IB CENTER BACK LENGTH - BRA

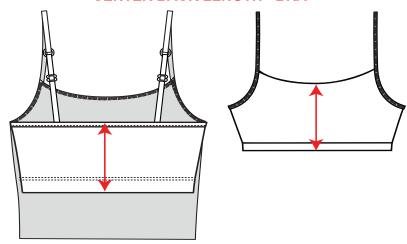


Measure bra straight at center back from neck edge to bottom opening edge, including trim

1




### POM A243 AB SIDE SEAM LENGTH - SPORT BRA

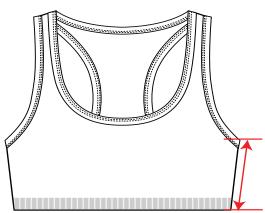


Measure along side seam of bra from underarm edge to bra opening edge, including trim

### POM A250, A250 CPSC(Sleep) SW(Sweater) ACROSS SHOULDER

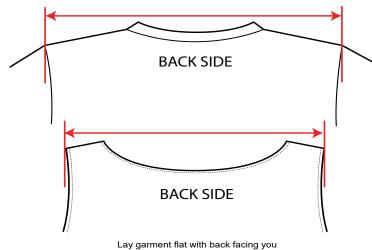


Measure straight from armhole seam For sleeveless garments measure straight from armhole edge to edge

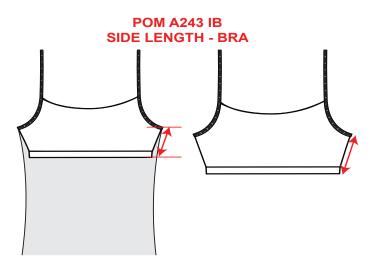


Measure bra straight at side seam from armhole edge to bottom opening edge including trim

### POM A251 ACROSS SHOULDER DOLMAN & DROP SHOULDER

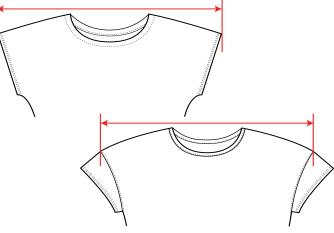



Lay garment flat with front facing you Measure straight from top of sleeve hem or edge to top of sleeve hem/edge DROP SHOULDER: Measure straight from Armhole seam to Armhole seam.



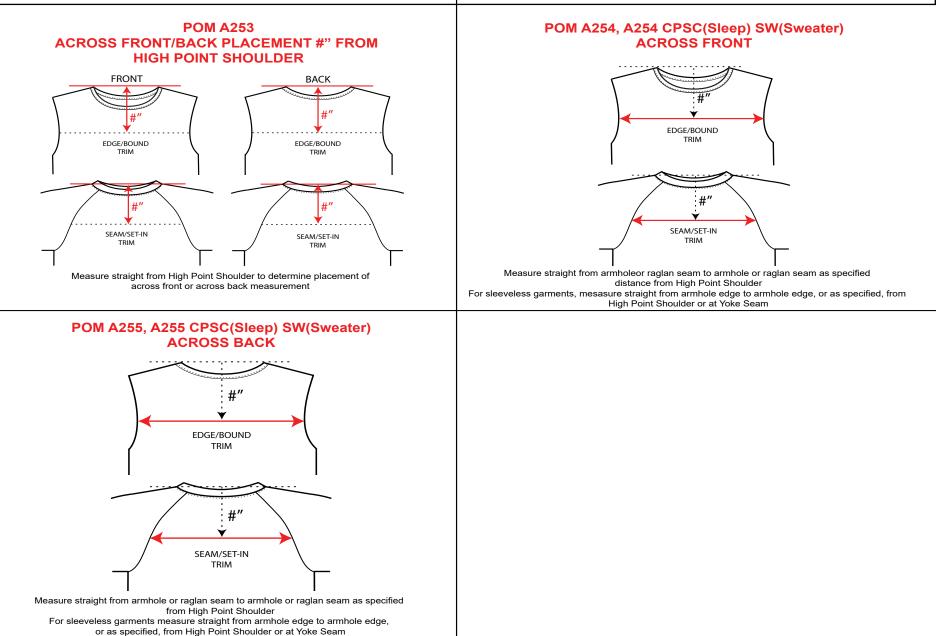




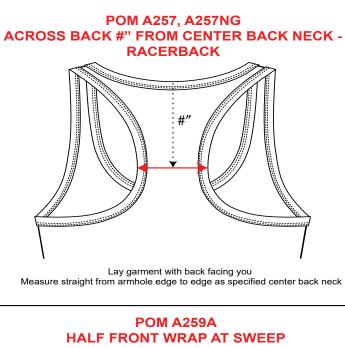


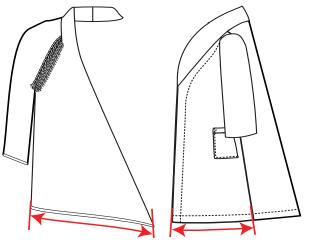

Open garment Measure along bottom from side seam to front edge at bottom of the garment

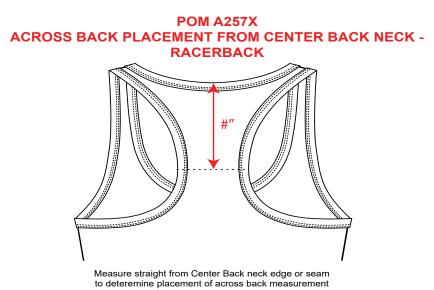


### POM A259B HALF FRONT WRAP #" BELOW ARMHOLE

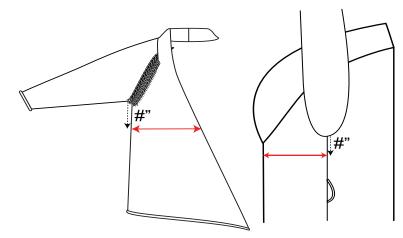

Open garment and fold sleeve up Measure down specified #" and measure straight from side seam to front edge




### POM A260, A260H SW (Sweater) CHEST 1" BELOW ARMHOLE RELAXED

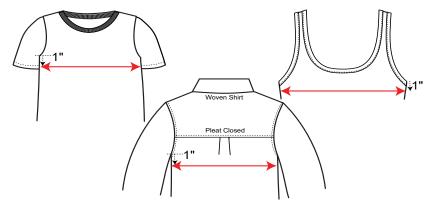


Measure straight across from edge to edge, 1" below armhole Pleats or gathers are closed unless otherwise specified WOVEN SHIRTS: Measure w/pleat closed.


### POM A262H CPSC (Sleep) CHEST AT ARMHOLE RELAXED

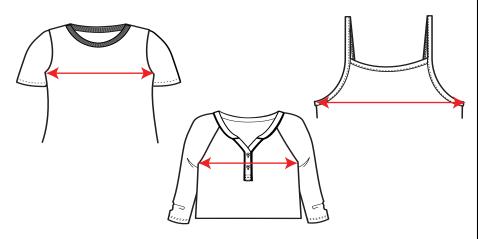

Measure straight from edge to edge at bottom armhole. Pleats or gathers are closed/relaxed. EXTRA FULLNESS AT CHEST: Fold garment 2" below armhole and adjust fullness. Then measure at bottom of armhole. POM A261, A261H CHEST 1" BELOW ARMHOLE EXTENDED

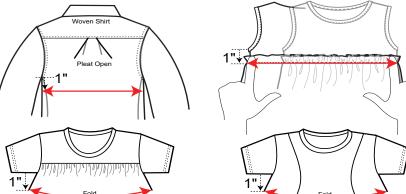

Measure straight across from edge to edge, 1" below armhole with seam or stitchline extended. WOVEN SHIRTS: Measure w/pleat open. FOR GARMENTS WITH EXTRA FULLNESS : Fold garment at specified distance below armhole to spread out all gathers. Measure along foldline.

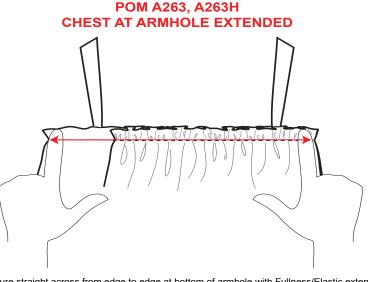

Measure straight across from edge to edge at bottom of armhole with Fullness/Elastic extended. EXTRA FULLNESS AT CHEST: Fold garment in half at bottom armhole to spread out all pleats & gathers. Measure along fold line.


۱.



# POM A264, A264H, A264 SW (Sweater) CHEST DOLMAN WIDTH


Measure straight across from edge to edge at widest point

POM A264X, A264X SW (Sweater) CHEST DOLMAN #" PLACEMENT FROM HIGH POINT OF SHOULDER

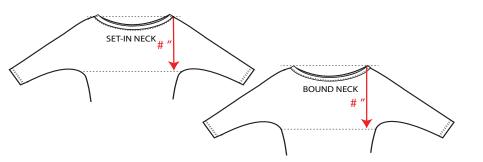


Measure straight from high point of shoulder to determine placement of chest



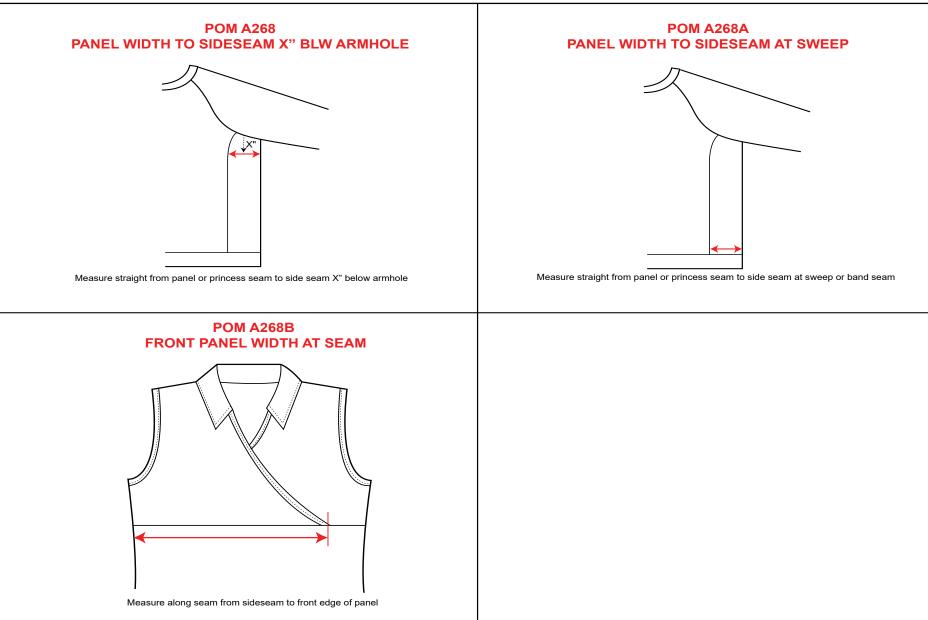




### POM A270, A270H, A270H SW (Sweater) WAIST RELAXED - TOPS

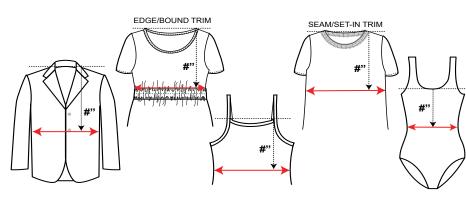


Measure straight from edge to edge at specified distance from High Point Shoulder, Peak, or Center Front Neck

### POM A272HPS WAIST PLACEMENT FROM HIGH POINT SHOULDER - TOPS

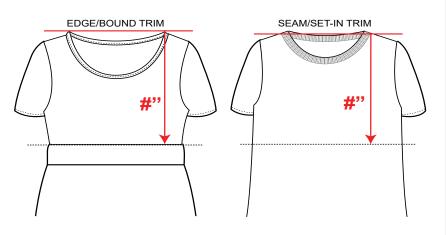


Measure straight from High Point Shoulder to determine placement of waist

POM A271, A271H WAIST EXTENDED - TOPS

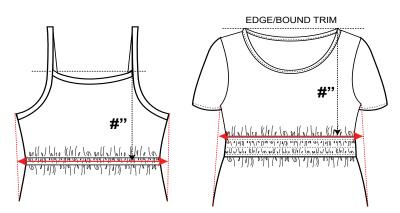

Extend fullness at seam or stitchline Measure straight from edge to edge at specified distance from High Point Shoulder, Peak, or Center Front Neck


### POM A272PK WAIST PLACEMENT FROM PEAK - TOPS

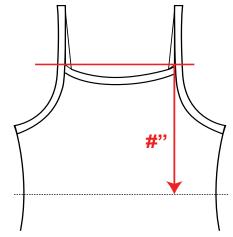


Measure straight from peak to determine placement of waist

49




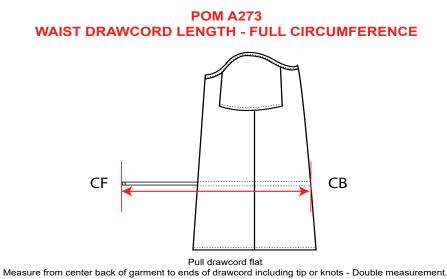

### POM A284 HPS HIP PLACEMENT FROM HIGH POINT SHOULDER

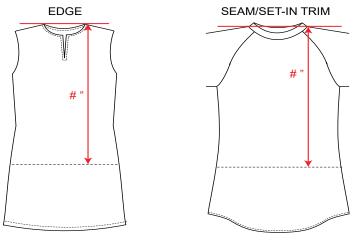


Measure straight from High Point of Shoulder to determine placement of hip

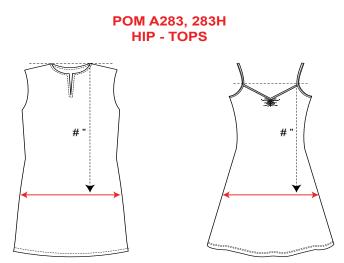

Measure straight from edge to edge as specified # from High Point Shoulder or Peak




### POM A290, 290H, 290H SW (Sweater) CPSC (Sleep) SWEEP RELAXED AT HEM OR TOP OF SLIT

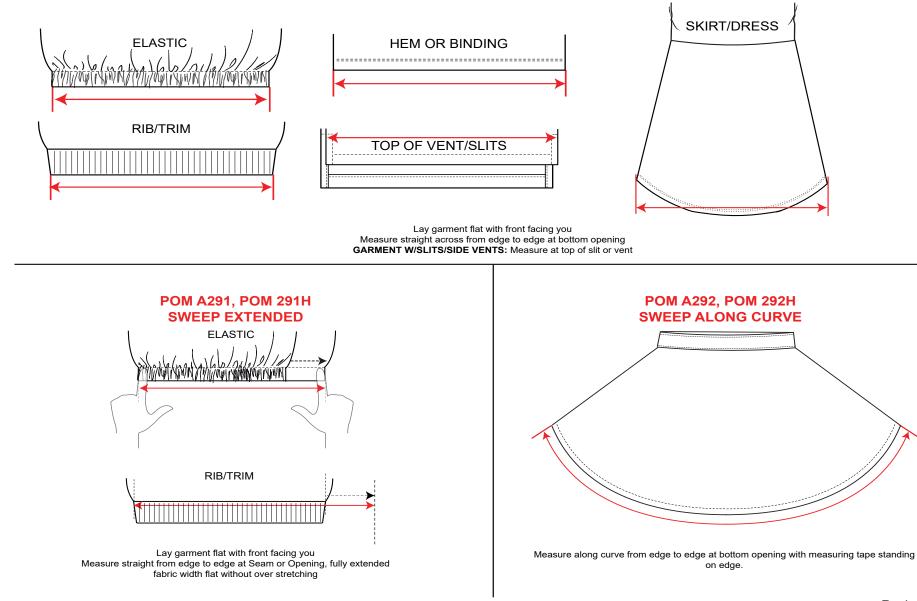




### POM A298, A298-03W (WAIST) - 04HH (HIP) LENGTH CENTER BACK NECK TO SEAM

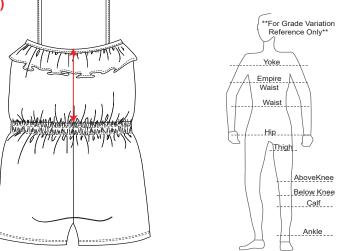

Lay garment with back facing you Measure straight from center back neck edge or seam to seam location indicated


### POM A299, A299-01C (Yoke) - 02AW (Empire Waist) - 03W (Waist) - 04HH (Hip) HIGH POINT SHOULDER TO FRONT OR BACK SEAM

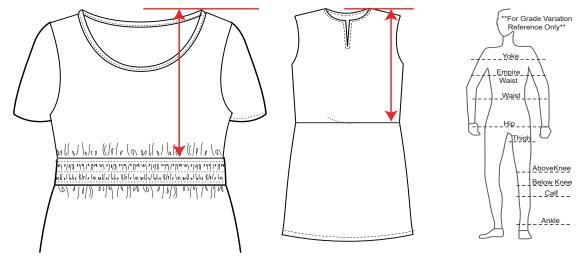


Measure straight from High Point Shoulder to seam or stitchline

т



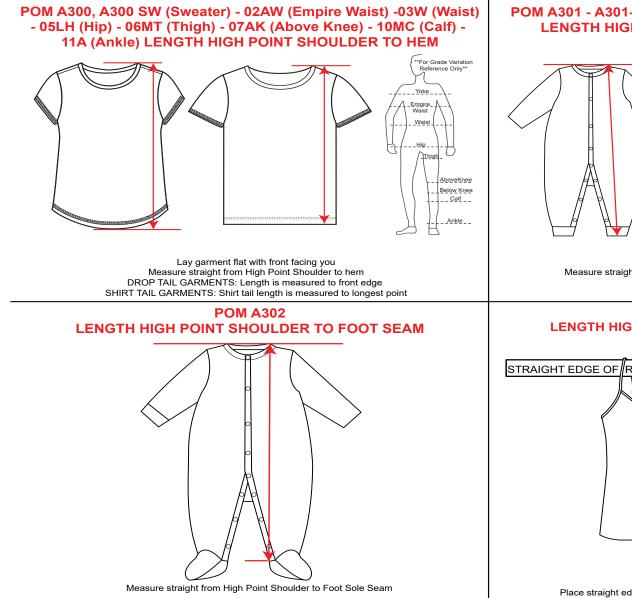


### POM A301 - A301-06MT (Mid Thigh) - 08K (Knee) - 11A (Ankle) LENGTH HIGH POINT SHOULDER TO LEG OPENING

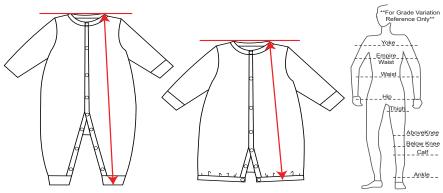


Lay garment flat Measure straight from High Point Shoulder to middle of leg opening edge


### POM A303 LENGTH HIGH POINT SHOULDER FROM STRAP TO HEM DEVELOPMENT ONLY

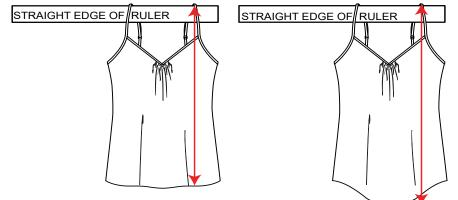

Lay garment flat with front facing you Place straight edge or ruler between straps so straps lay straight and smooth Measure straight form HPS (Strap edge at ruler) to hem SHIRT TAIL GARMENTS: Shirt tail length is measured to longest point.



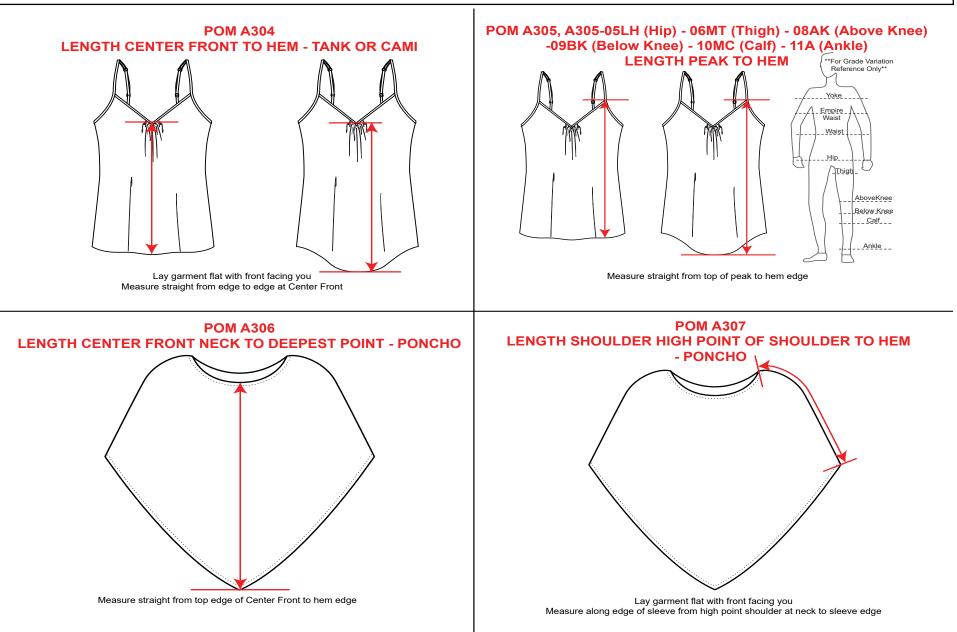


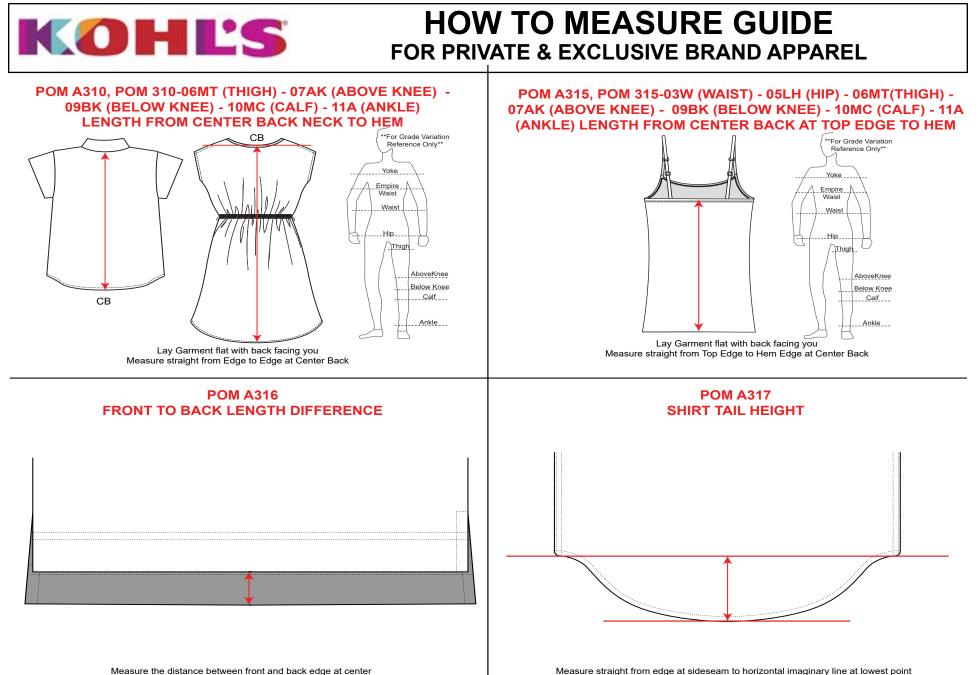

Measure the distance between front and back edge at center




### POM A318 SHELL TO LINING DIFFERENCE

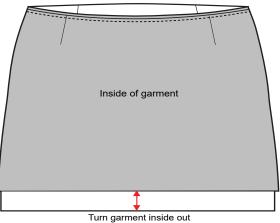


Measure the distance between fold of hem on lining and fold of hem on outer shell

### POM A320 VERTICAL TRUNK LENGTH

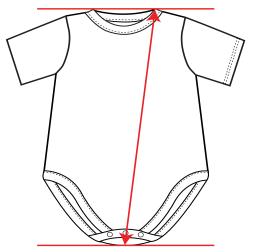


Measure from High Point Shoulder to natural fold at Center Front Crotch

1

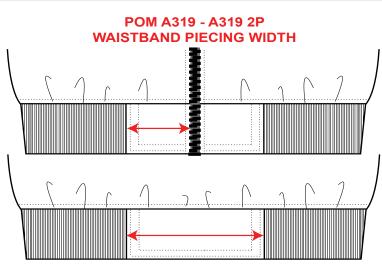


Measure straight from edge to edge of piecing

### POM A322 LENGTH CENTER FRONT NECK TO CROTCH-SWIM

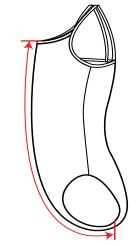

Fold garment in half, align sideseams Curve center front foldine as needed to smooth out fullness Measure along curve from center front neck edge to back crotch seam



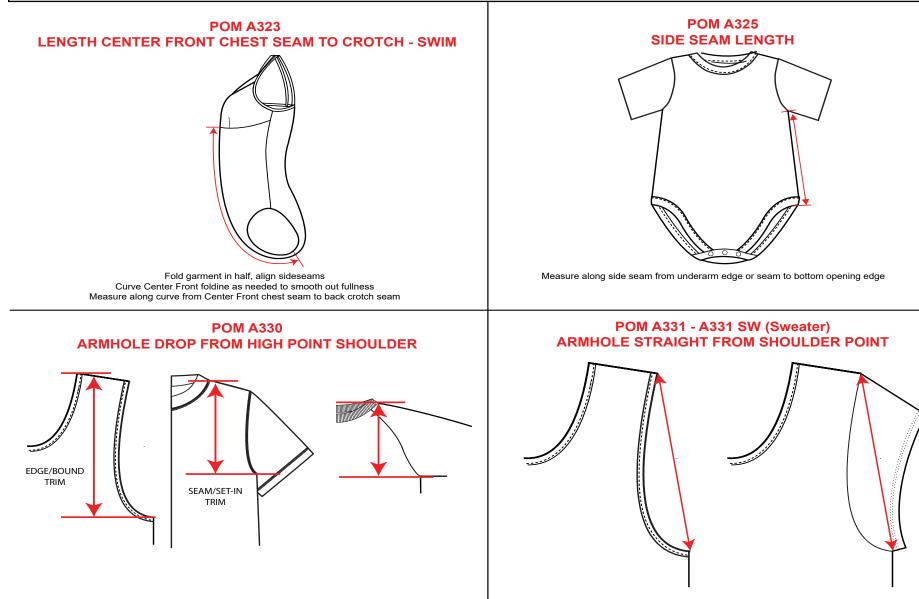


Measure straight from shoulder point to underarm point at armhole edge or seam


Measure straight from High Point Shoulder to imaginary line at underarm point at armhole

edge or seam




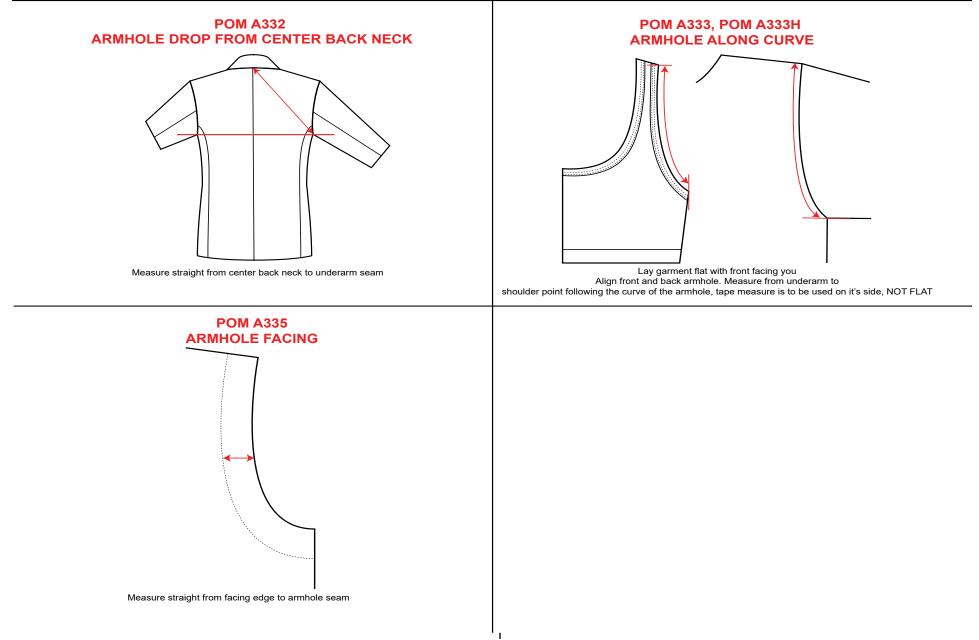



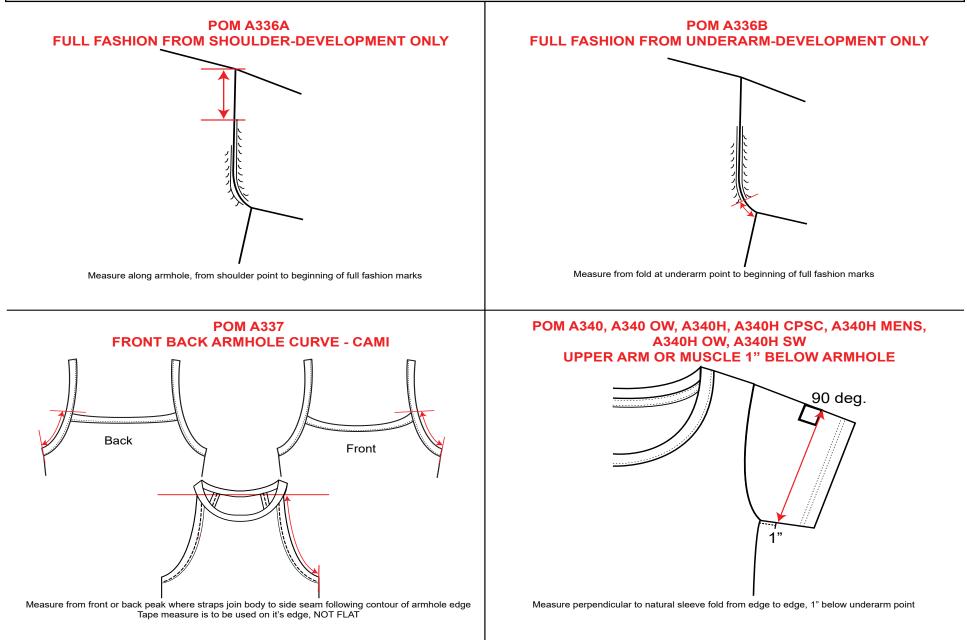




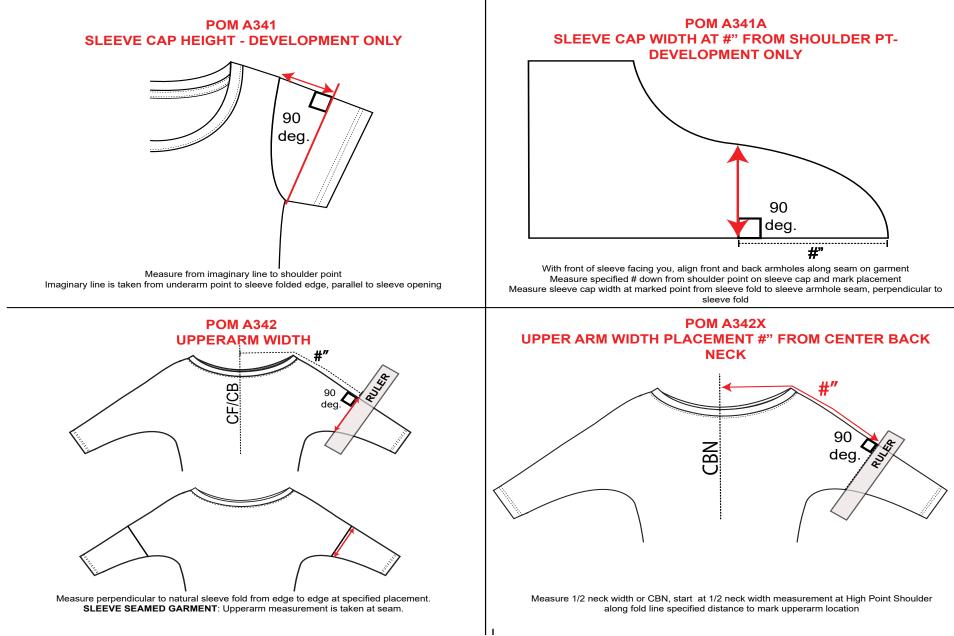


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



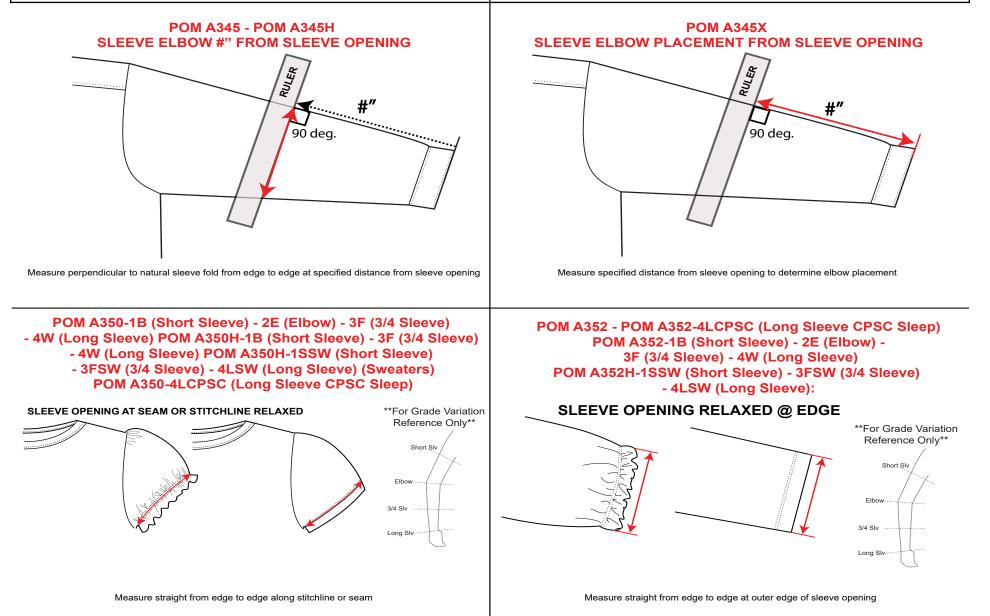




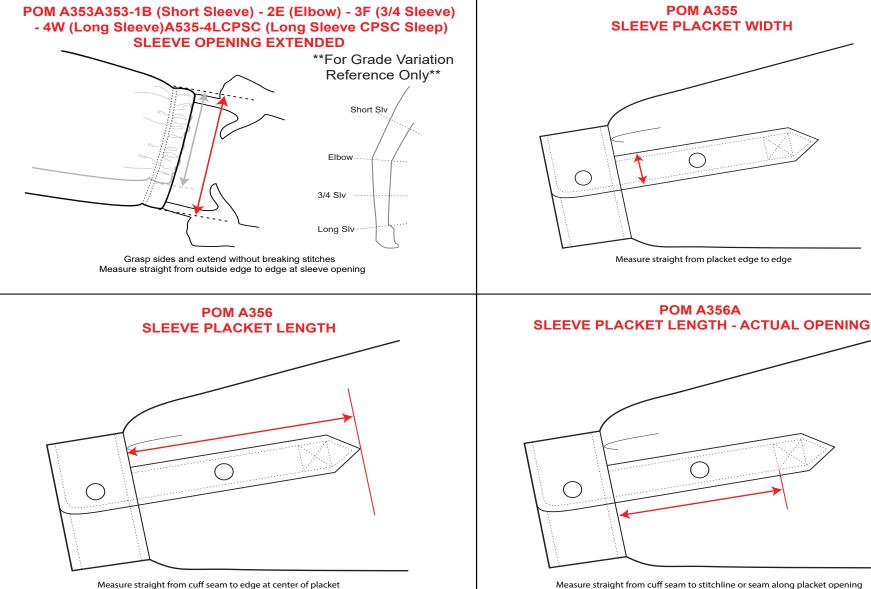

Measure straight from cuff seam to edge at center of placket




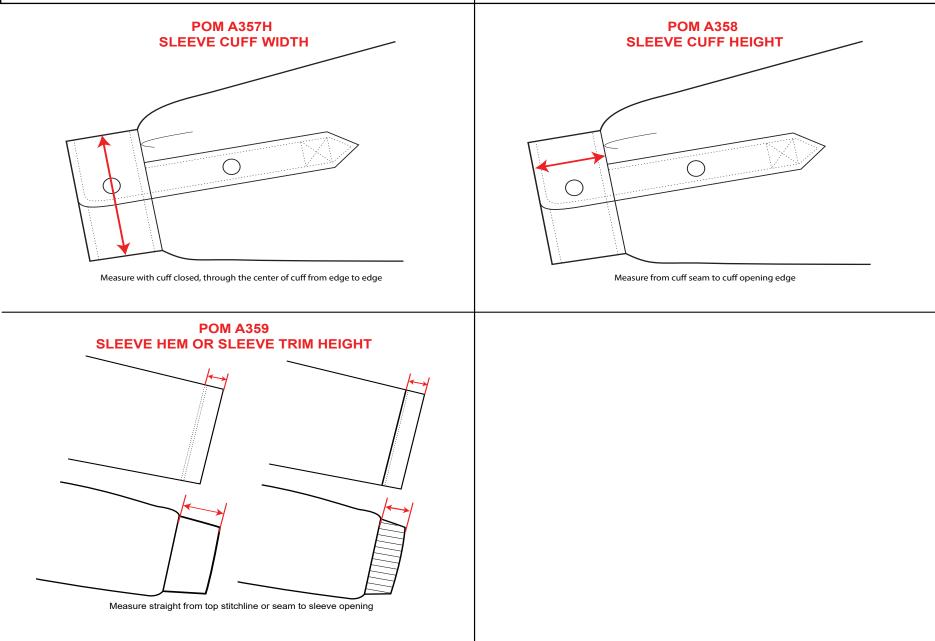




### POM A360 - POM A360 NG (No Grade)


POM A360-1B (Short Sleeve) - 2E (Elbow) - 3F (3/4 Sleeve) - 4W (Long Sleeve) POM A360-1SSW (Short Sleeve) - 3FSW (3/4 Sleeve) - 4LSW (Long Sleeve) POM A360-1TB (Tall - Short Sleeve) - 4TW (Tall - Long Sleeve)

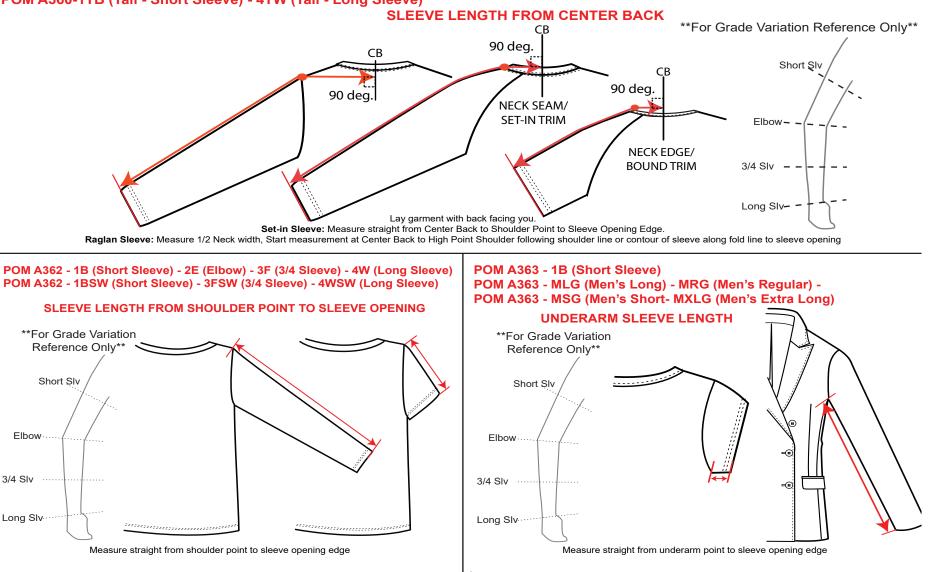



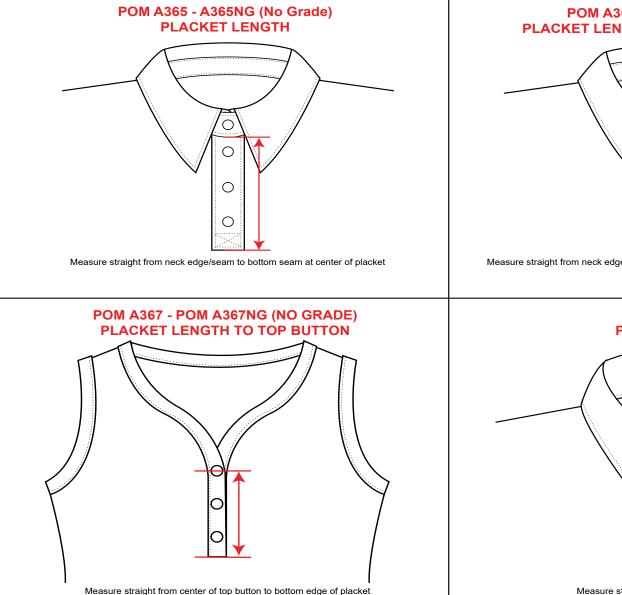


POM A366 - A366NG (No Grade) PLACKET LENGTH - FUNCTIONAL OPENING

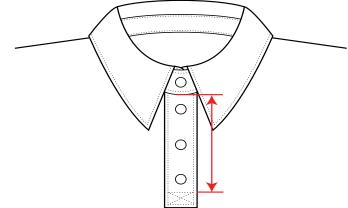


Measure straight from neck edge or seam to bottom seam at center of placket opening

POM A368 PLACKET WIDTH

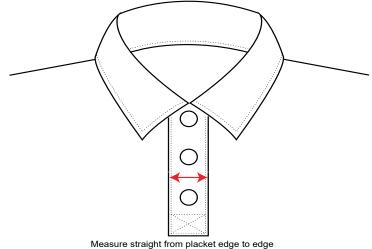




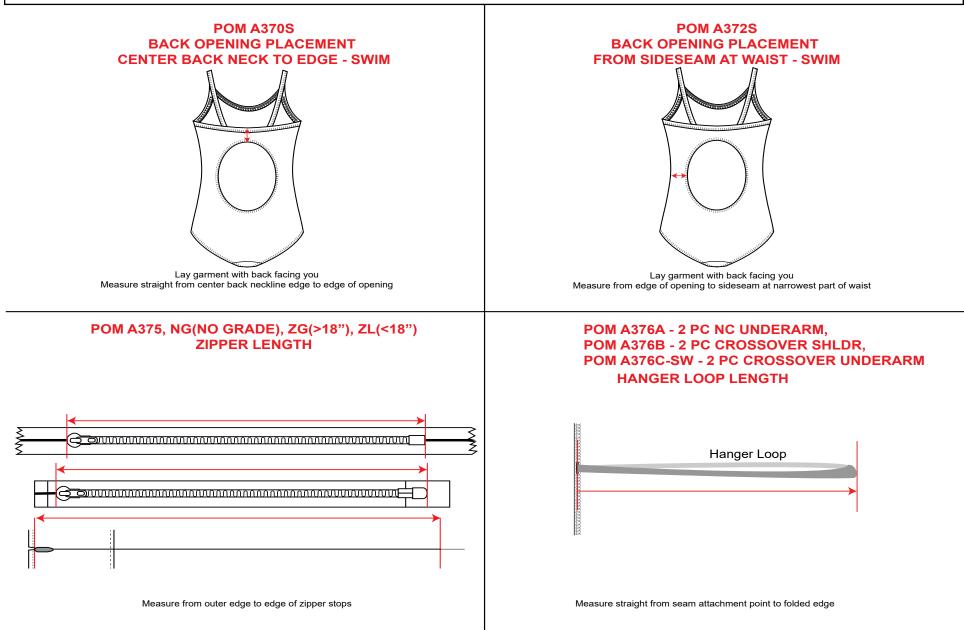

# KOHĽS


# HOW TO MEASURE GUIDE FOR PRIVATE & EXCLUSIVE BRAND APPAREL

### POM A399H MINIMUM WAIST STRETCH

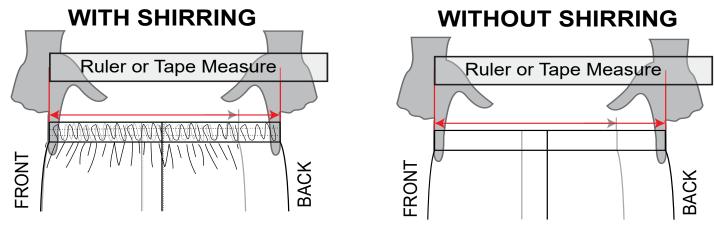


Align front and back waistband. Using your index fingers, extend waistband to maximum width without breaking stitches and measure from outside edge to outside edge GARMENT WITH WAISTBAND CLOSURE: Measure with closure open


### POM A400RW WAIST AT TOP EDGE - RIDGID WAIST

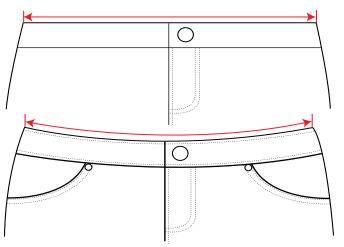

Align front and back of waistband with closures fastened - i.e. zippers and buttons closed Measure straight from edge to edge along top of waistband

### POM A400 A400 NG (No Grade)-H (CPSC Sleep) WAIST AT TOP EDGE - RELAXED

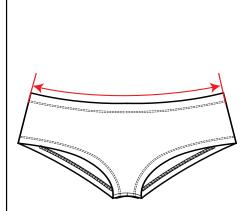


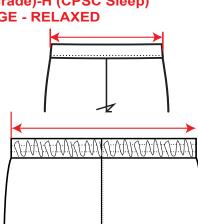


Align front and back waistband with closures fastened - i.e. zippers, buttons Smooth or Flatten out elastic without stretching the waist Measure along top of waist from outsid edge to edge




### POM A401, NG(NO GRADE), H CPSC(CPSC SLEEP) WAIST AT TOP EDGE - EXTENDED

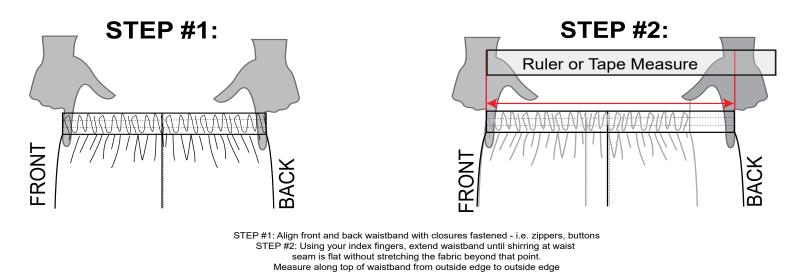



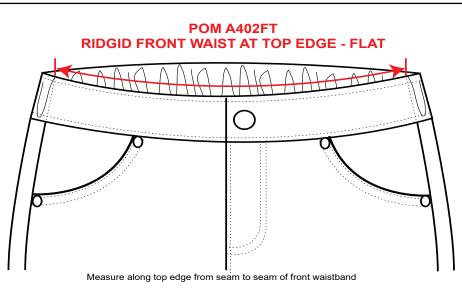

POM A402PN BACK WAIST WITH FRONT PANEL - FLAT

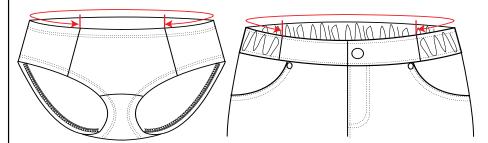


Lay garment flat Measure back waist along top edge from front panel seam to front panel seam

GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



# POM A403 ADULT DRAWSTRING LENGTH - FULL CIRCUMFERENCE

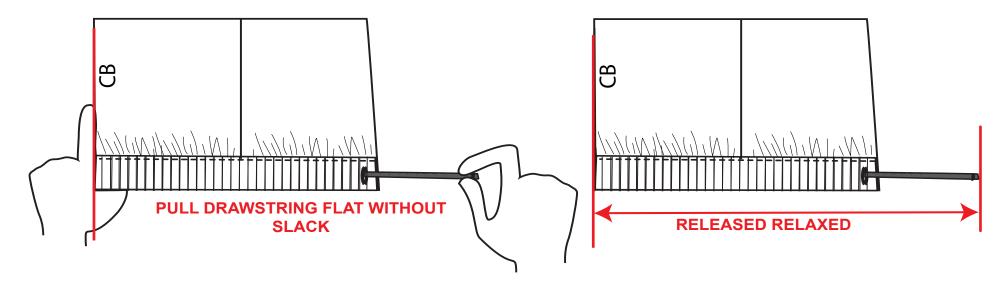

For Woven Drawstring: Pull drawstring flat without slack For Knits Drawstring: Pull drawstring flat without slack Do not stretch drawstring

Measure from Center Back of garment to end of drawstring, including tipping or knots. Double measurement.


\*\*Garments with internal drawstrings will need to be turned inside out.

т



# DRAWSTRING APPLICATIONS FOR POM A403 EXP CHILDRENS DRAWSTRING EXPOSED LENGTH CRITICAL/PRIMARY


**FUNCTIONAL DRAWSTRING APPLICATION TYPES:** 

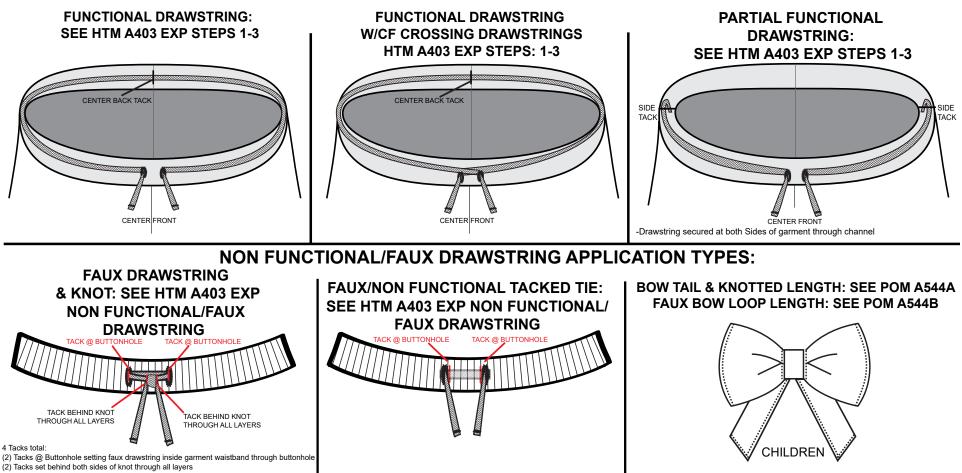

\*\*Garments with internal drawstrings will need to be turned inside out. See Minimum Construction Standards & Kohl's Department Stores Product Safety & Regulatory Standards



# MEASUREMENT STEPS: POM A403 EXP CHILDRENS DRAWSTRING EXPOSED LENGTH CRITICAL/PRIMARY

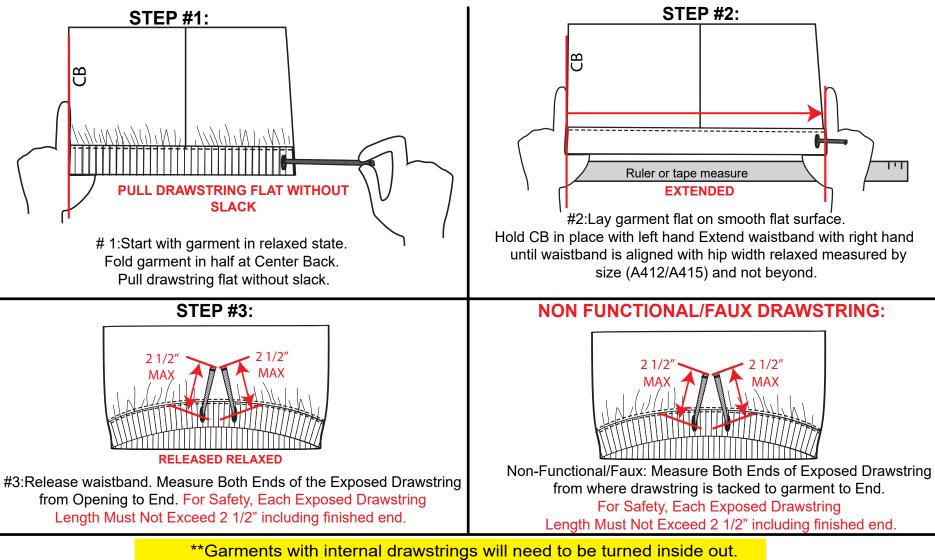



# DRAWCORD APPLICATIONS FOR POM A403C EXP CHILDRENS DRAWCORD EXPOSED LENGTH CRITICAL/PRIMARY


FUNCTIONAL DRAWCORD APPLICATION TYPES:

 FUNCTIONAL DRAWCORD:<br/>SEE HTM A403C EXP STEPS 1-3
 M

 Image: Center Back Tack
 Image: Center Back Tack

 Image: Center Back Tack
 Image: Center Front

FUNCTIONAL DRAWCORD W/CF CROSSING DRAWCORD HTM A403C EXP STEPS: 1-3

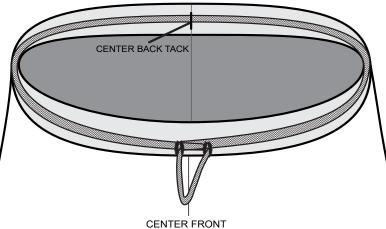


\*\*Garments with internal drawstrings will need to be turned inside out.

# KOHĽS

# HOW TO MEASURE GUIDE FOR PRIVATE & EXCLUSIVE BRAND APPAREL


# MEASUREMENT STEPS: POM A403C EXP CHILDRENS DRAWCORD EXPOSED LENGTH CRITICAL/PRIMARY

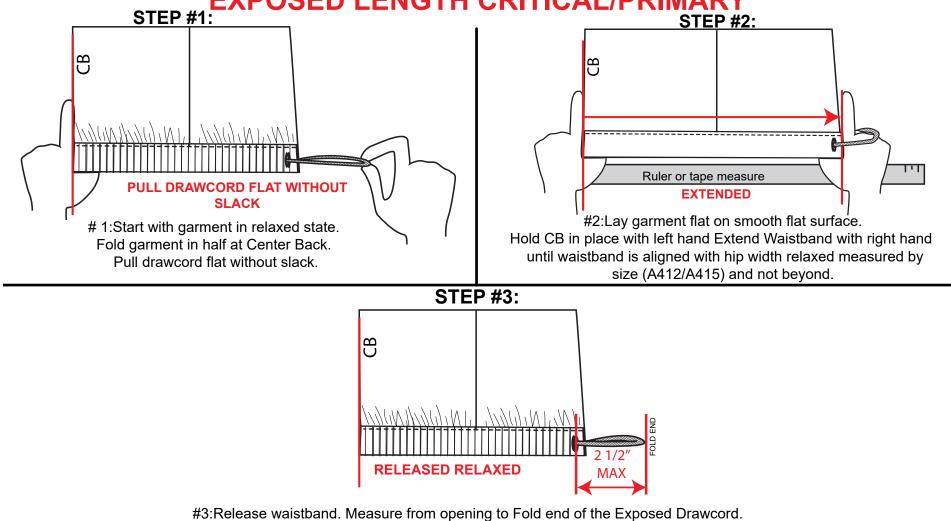


For Safety, Exposed Drawcord Length Should Not Exceed 2 1/2".

\*\*Garments with internal drawstrings will need to be turned inside out.




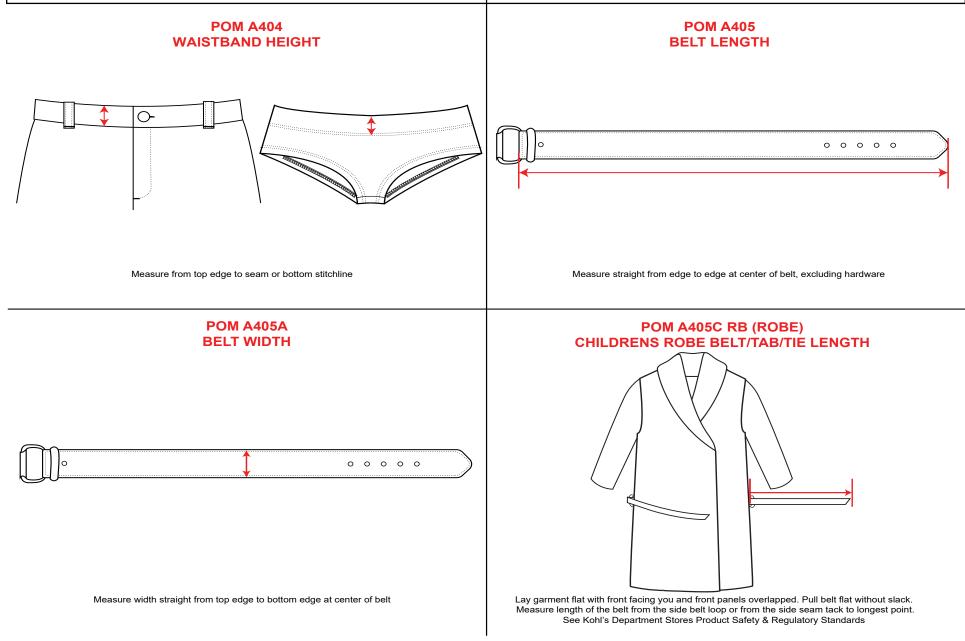



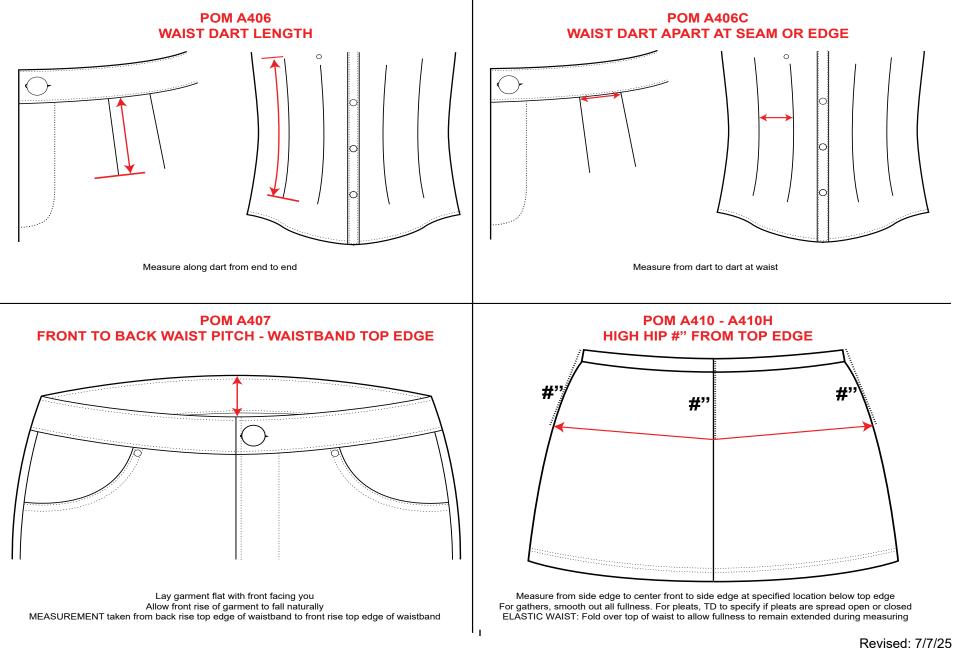



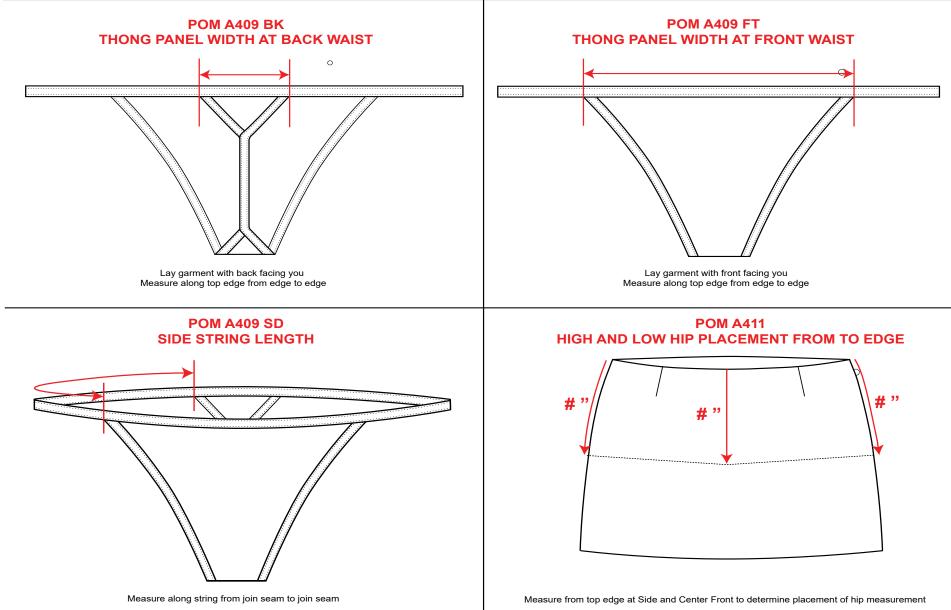




# POM A412 - A412H LOW HIP #" FROM TOP EDGE # " # " # "


Measure from side edge to center front to side at specified location below top edge For gathers, smooth out all fullness. For pleats, TD to specify if pleats are spread open or closed ELASTIC WAIST: Fold over top of waist to allow fullness to remain extended during measuring

#### POM A415 - A415H HIP #" FROM CROTCH POINT

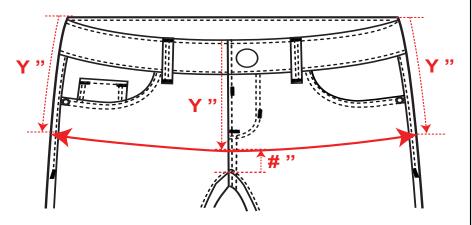


Measure up # from crotch point at center front rise, mark location. Measure down at center front rise from top of waist to mark Y". Measure the same disatance Y", down from top of waist at each sideseam and mark location. Measure from side edge to center front to side edge. For gathers, smooth out all fullness. For pleats, TD to specify if pleats are spread open or closed. ELASTIC WAIST: Fold over top of waist to allow fullness to remain extended during measuring.

#### POM A413 HIP PLACEMENT FROM CROTCH POINT

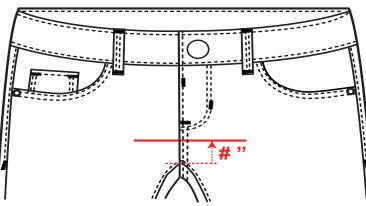


Hip placement # up from crotch point at center front rise

#### POM A416 - A416H - A416H CPSC (CPSC Sleep) HIP #" FROM CROTCH POINT - STRAIGHT

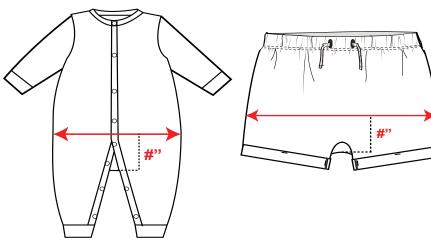

Measure up #" from crotch or gusset fold at Center Front and mark location Measure straight across garment at marked location from edge to edge of folded garment Use for 1 piece garments.




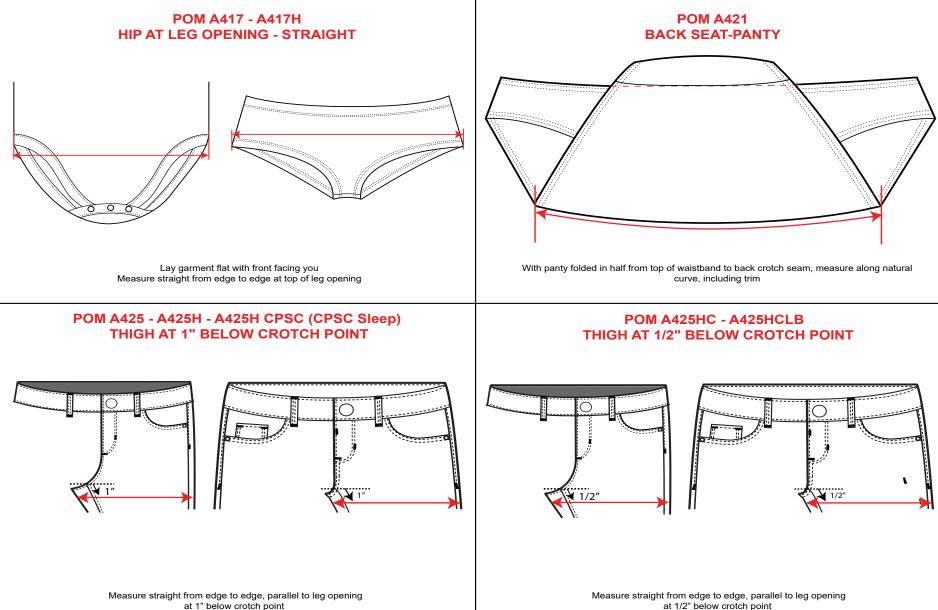

at 1" below crotch point



#### POM A426 - A426H THIGH AT CROTCH POINT

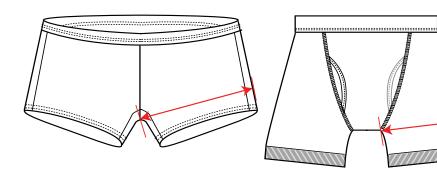


Measure straight from edge to edge, parallel to leg opening at crotch point

# POM A428 - A428H MID-THIGH #" BELOW CROTCH POINT \*\*For Grade Variation Reference Only\*\*


Measure straight from edge to edge, parallel to leg opening at specified distance from crotch point

#### POM A428X MID-THIGH PLACEMENT BELOW CROTCH POINT

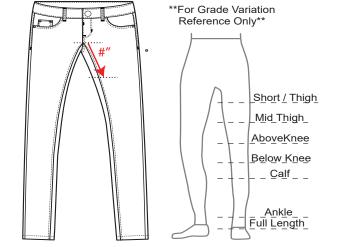

Measure along inseam from crotch point specified distance to deteremine Mid-Thigh


#### POM A430 - A430H KNEE #" FROM CROTCH POINT

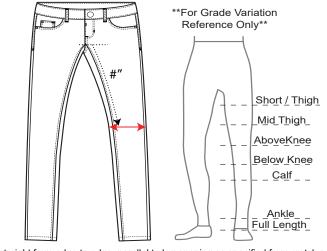

Measure straight from edge to edge, parallel to leg opening as specified from crotch point


۱.



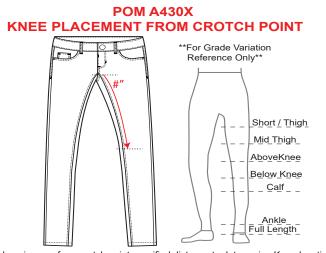


Measure along inseam from crotch point specified distance to deteremine Knee location

#### POM A430XH KNEE 1/2 INSEAM LENGTH + 2" UP FROM FOLD

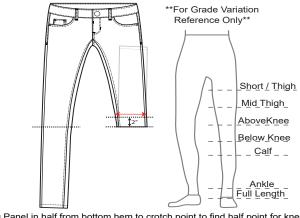


Fold Leg Panel in half from bottom hem to crotch point to find half point for knee Measure 2" above fold

#### POM A432 - A432H CALF #" BELOW CROTCH POINT

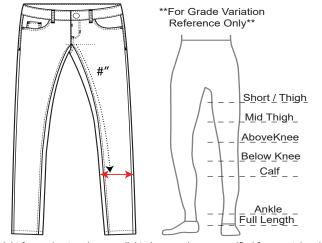


Measure straight from edge to edge, parallel to leg opening as specified from crotch point

#### POM A432X CALF PLACEMENT FROM CROTCH POINT

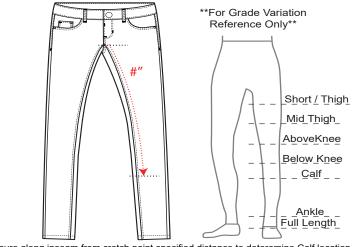


Measure along inseam from crotch point specified distance to deteremine Calf location




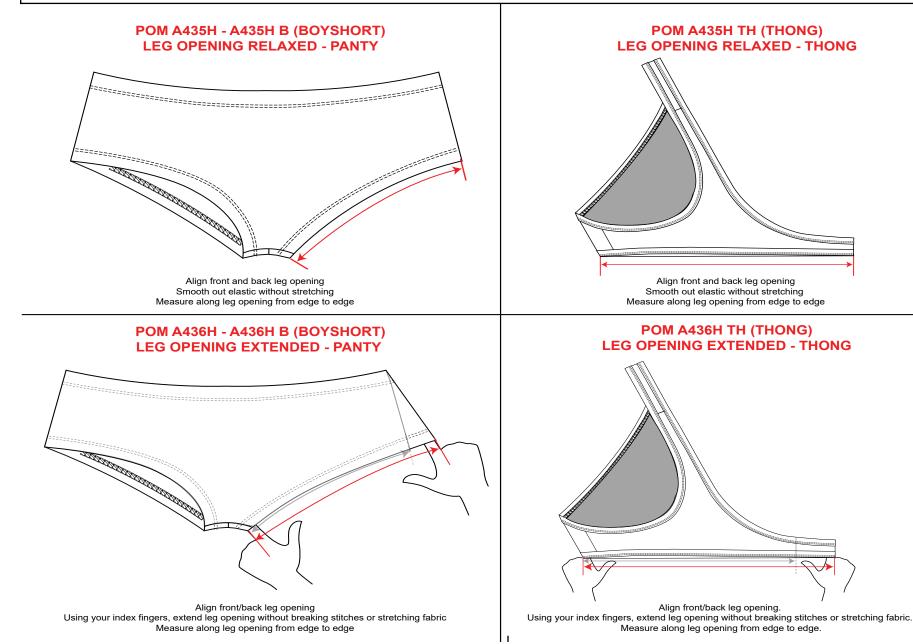




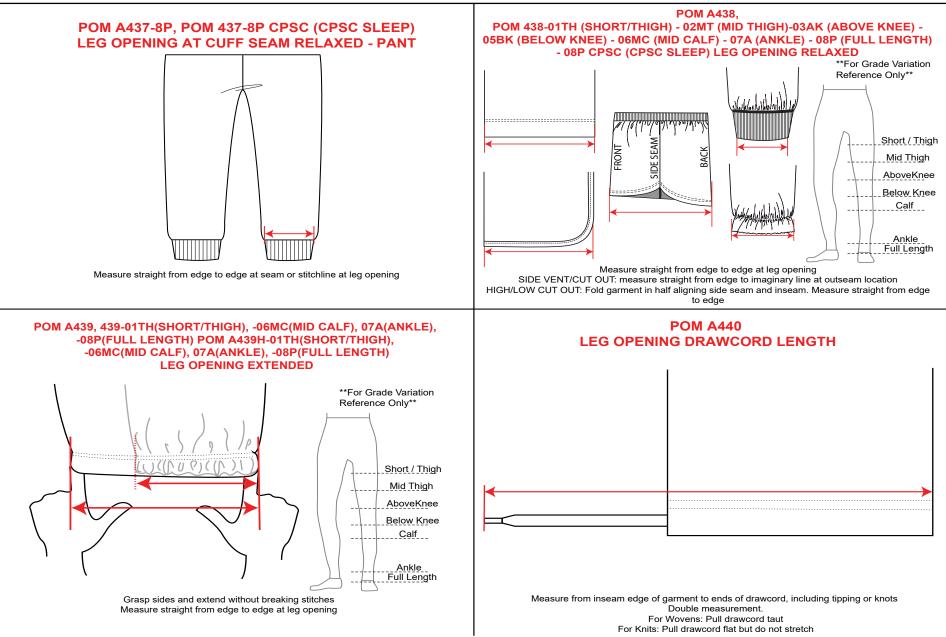



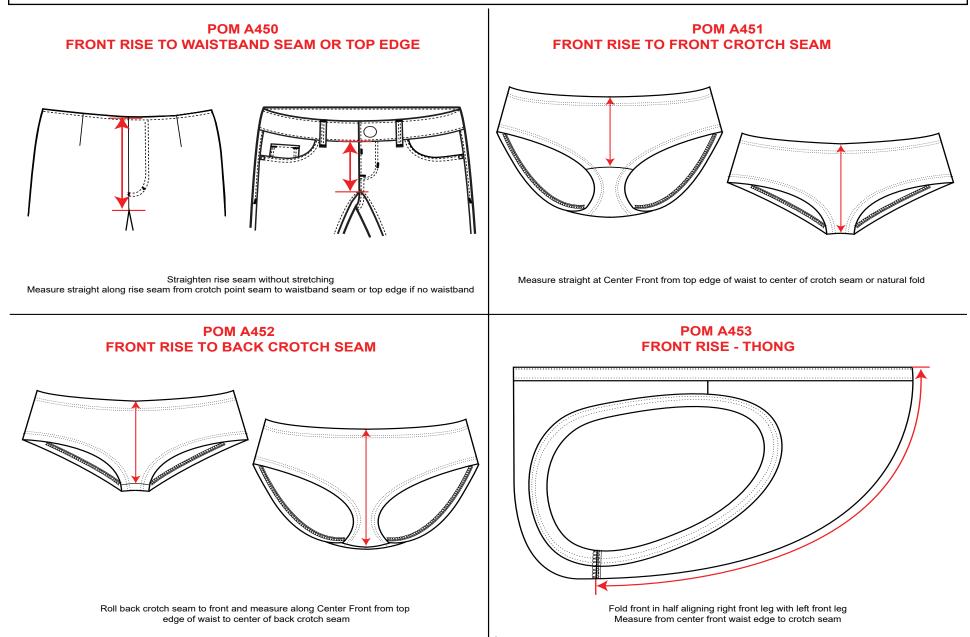



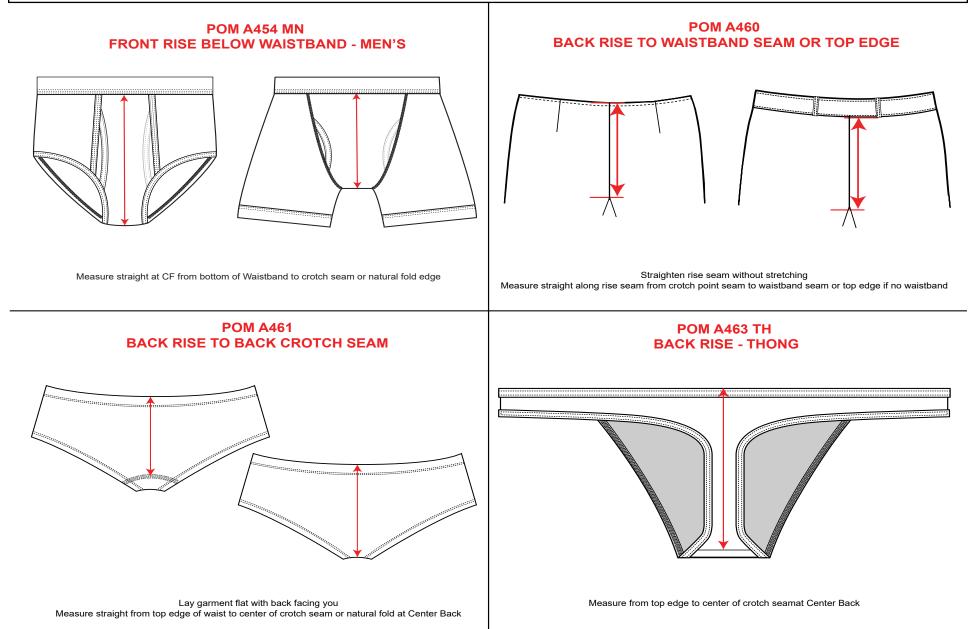


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



# **POM A463A TH BACK STRING LENGTH- THONG**


Measure from top edge or string join to string join

**POM A464 MN BACK RISE BELOW WAISTBAND - MEN'S** 

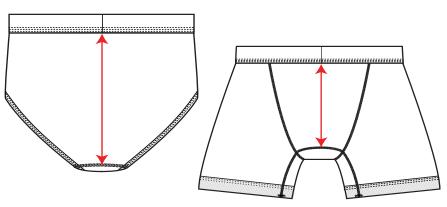


Measure straight down at center of garment from below waistband to center of crocth at bottom or seam

#### **POM A471 MN** FRONT PANEL WIDTH AT TOP EDGE WITH TAPE - MEN'S

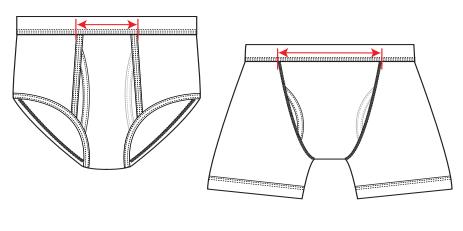

Measure at waistband seam straight across fly panel from outer edge of seam to outer edge of seam


#### **POM A472 MN** BACK PANEL WIDTH AT TOP EDGE WITH TAPE - MEN'S

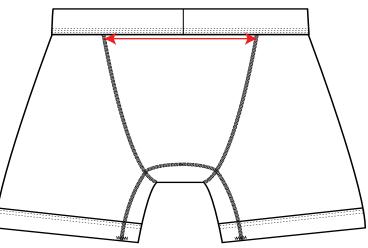


Measure at waistband seam straight across back panel from outer edge of taped seam to

outer edge of taped seam




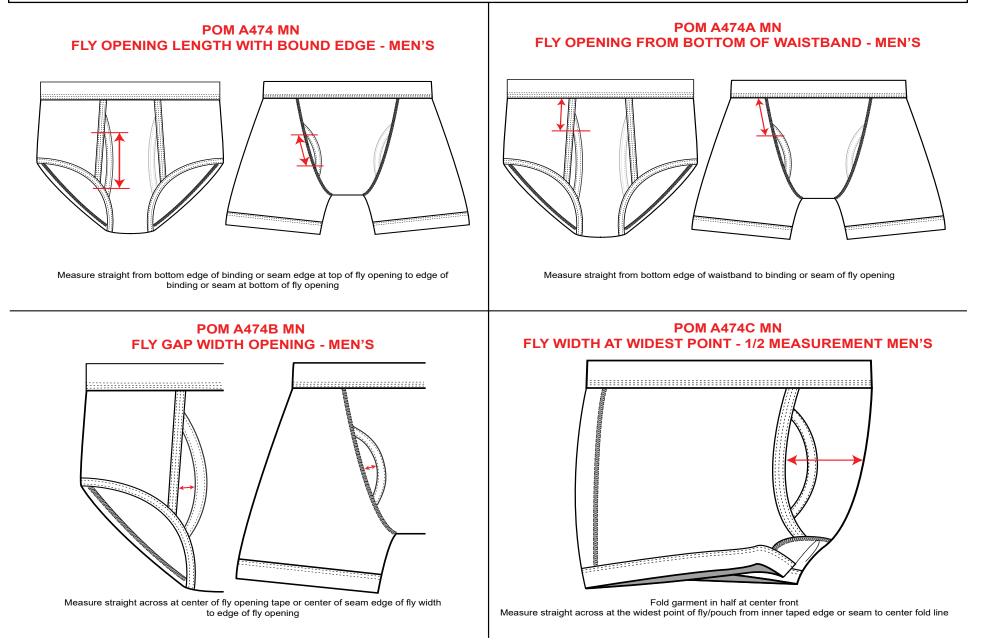




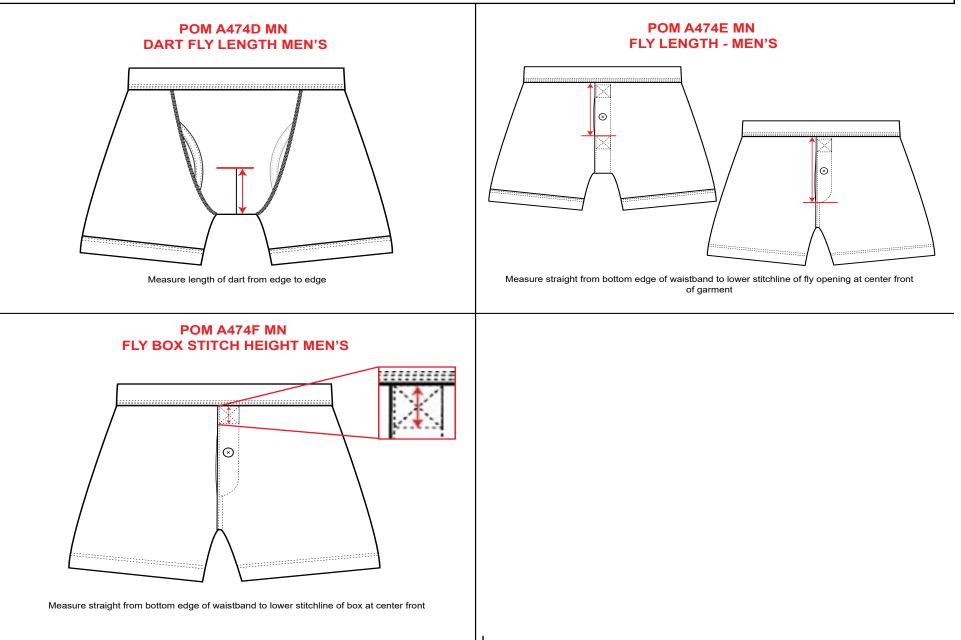



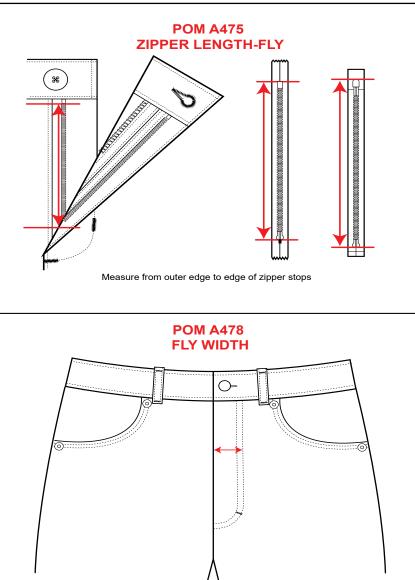


POM A476 FLY LENGTH BLW WB SEAM/TOP EDGE

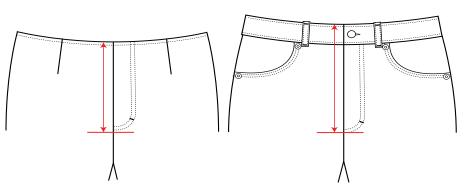

Straighten rise seam without stretching Measure straight along rise seam from stitchline at edge of fly to waistband seam or top edge

Measure straight from edge to outside stitchline at center on fly



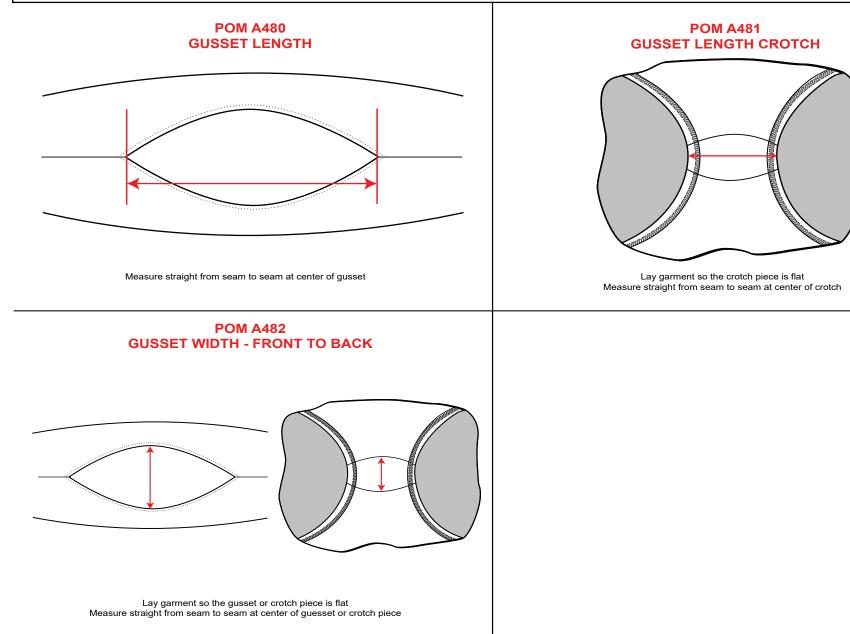




# POM A483 CROTCH LENGTH FRONT SEAM TO BACK SEAM

Lay garment so that crotch piece is flat


Lay garment so that crotch piece is flat Measure straight from center of seam to center of seam at center of crotch piece

#### POM A484 CROTCH WIDTH AT FRONT OR BACK SEAM

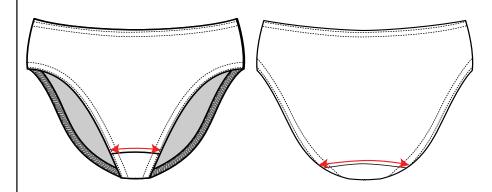


Measure from edge to edge along crotch seam or along edge of crotch liner piece

#### POM A485 TH CROTCH WIDTH AT BACK SEAM - THONG

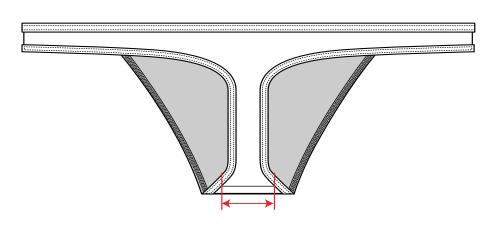


Measure from edge to edge along crotch seam or along edge of crotch liner

#### POM A486 CROTCH WIDTH AT NARROWEST POINT

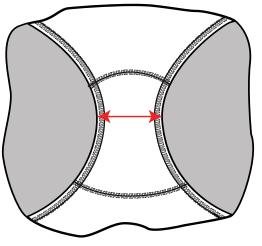


Lay garment so that crotch piece is flat Measure straight from edge to edge at narrowest point of crotch piece



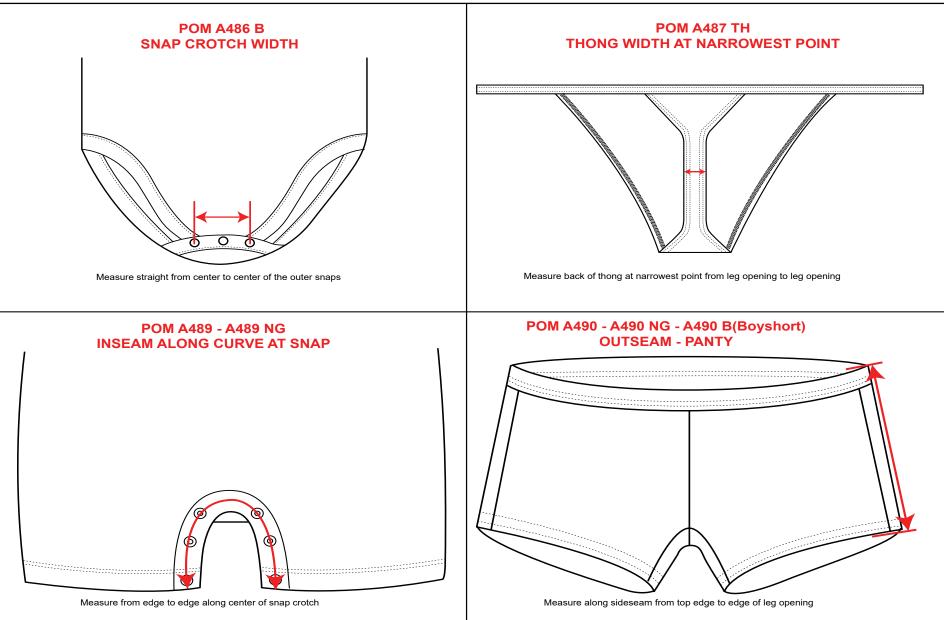




#### POM A495, POM 495-01TH (Short / Thigh) - 02MT (Mid Thigh) -03AK (Above Knee) -06BK (Below Knee) -07MC (Mid Calf) -08A (Ankle) - 09P (Full Length)

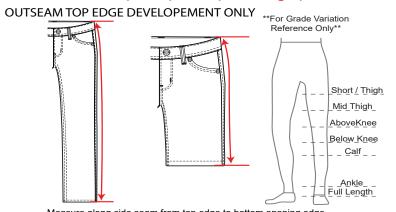

#### Measure along side seam from top edge to bottom opening edge


#### POM A500-01TH (Short / Thigh) - 02MT (Mid Thigh) -03AK (Above Knee) -06BK (Below Knee) -07MC (Mid Calf) -08A (Ankle) - 09P (Full Length)

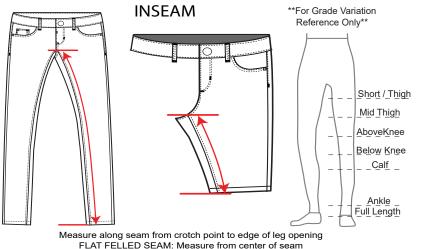

 Full Length)
 OUTSEA


 ONLY
 \*\*For Grade Variation



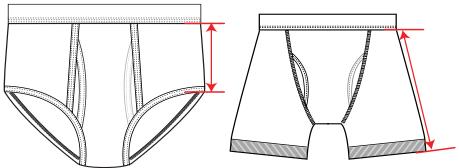


Measure along side seam from below waistband or bottom stitchline to edge of leg opening

#### POM A501 MN - A501 NG INSEAM - MN

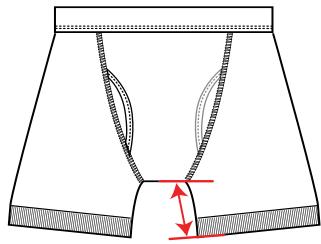


Measure along seam from crotch point to fly panel seam to edge of leg opening



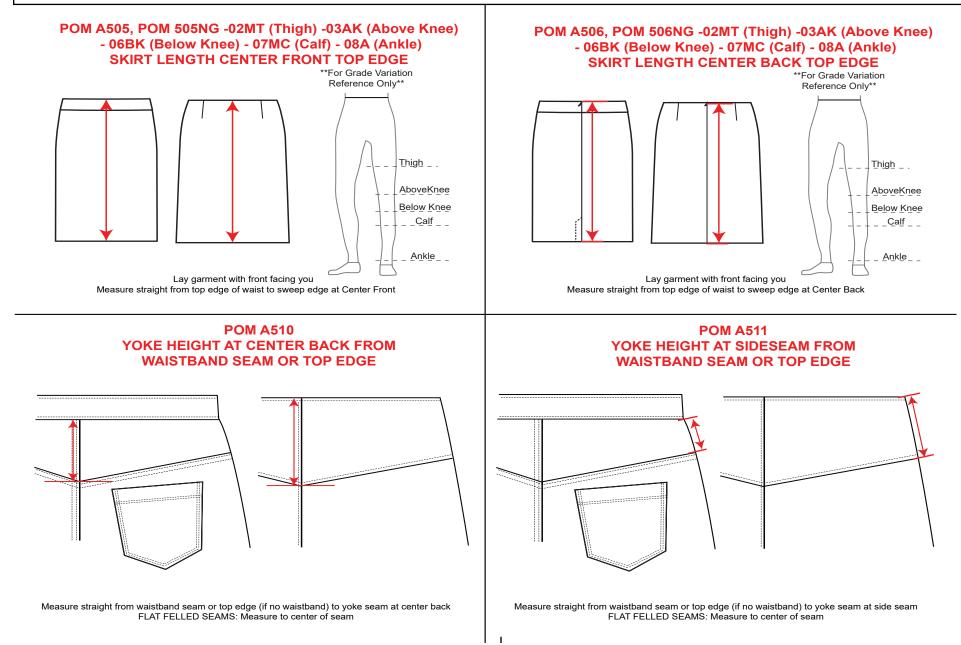


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



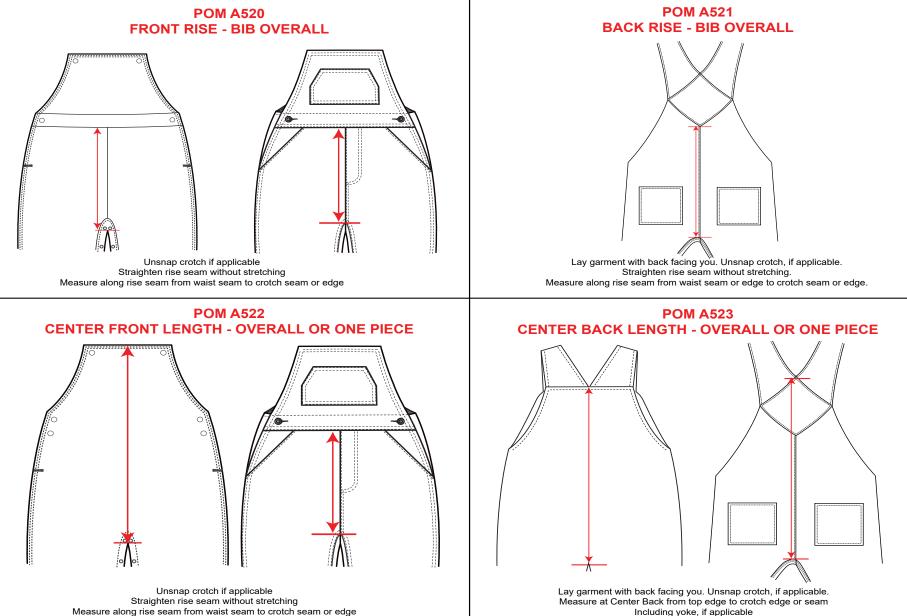

Measure along rise seam from waist seam to crotch seam or edge




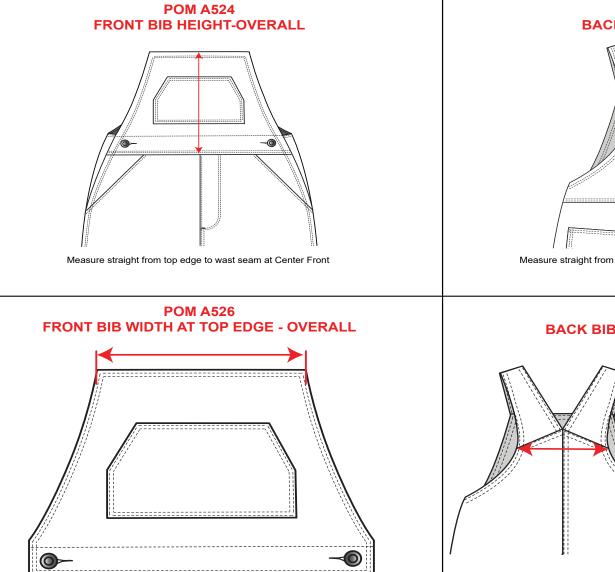



Measure straight from edge to bib seam or bottom stitchline at Center Back

POM A527 BACK BIB OR YOKE WIDTH - OVERALL

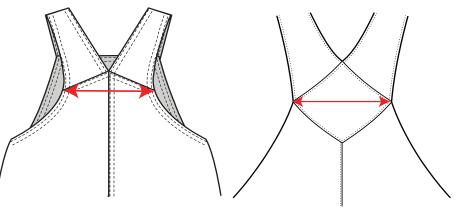


Measure straight from armhole edge to edge at back strap intersection

Revised: 7/7/25

Measure straight from edge to edge at top edge of bib




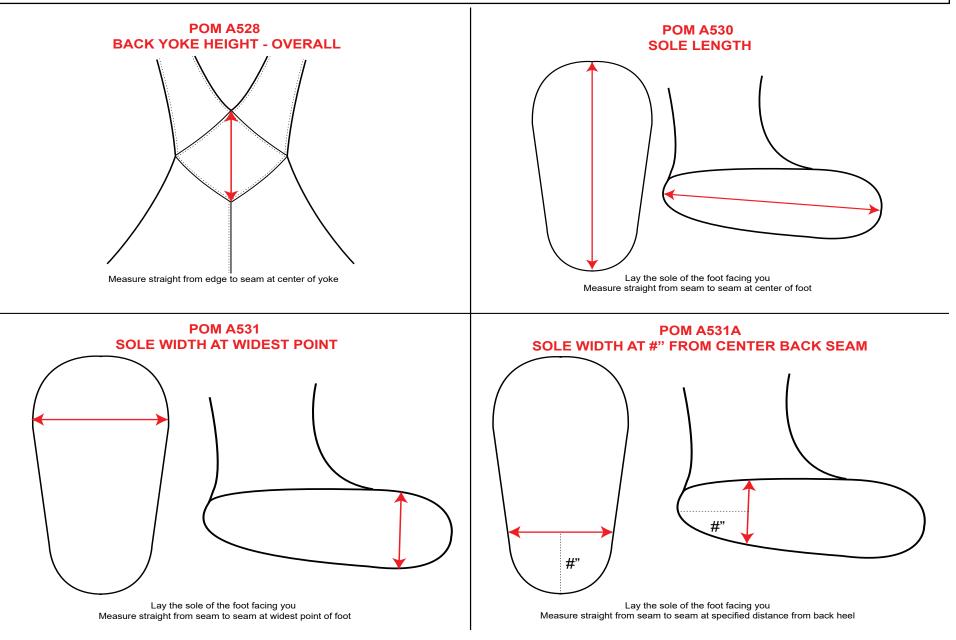



l i




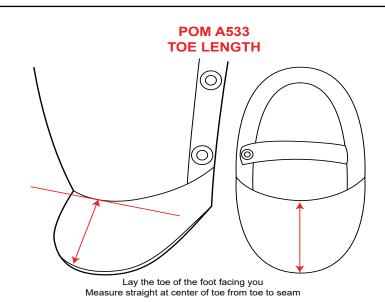


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.



POM A535 SHOE HEIGHT #" FROM CENTER BACK AT SIDE

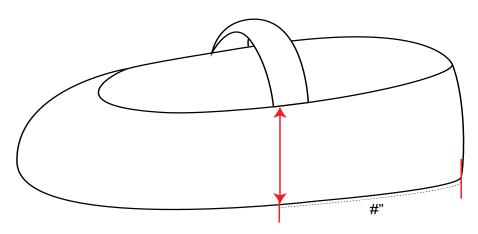


Lay the side of the shoe facing you Measure straight from sole seam to top edge at specified distance from Center Back heel along sole seam

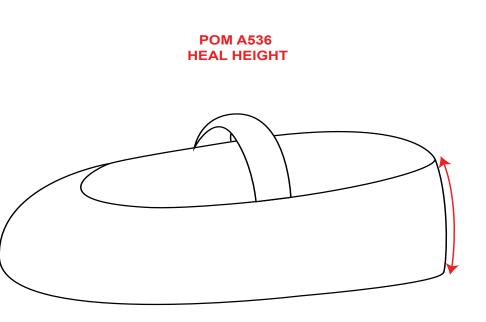

Measure straight from edge to seam at Center Back of heel




# POM A539 UNKNOTTED TIE LENGTHS

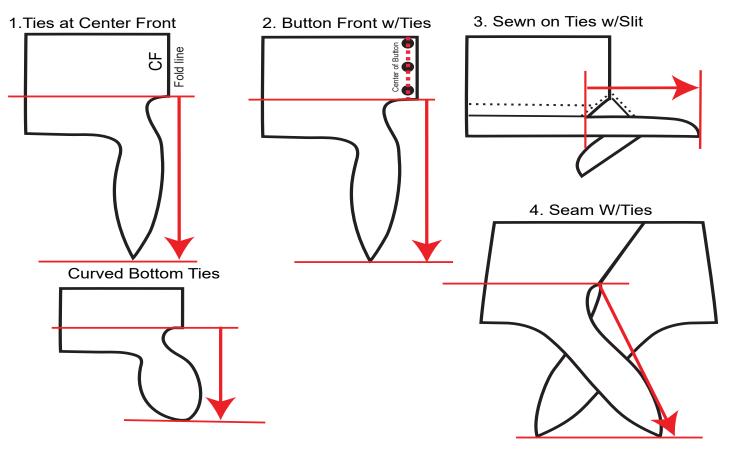


- 1. Ties at Center Front Fold garment in half aligning side seam and hem. Place ruler Perpendicular to Center front. Place ruler Perpendicular to Center front.
- 2. Button Front w/Ties Button and Buttonholes are the center front of garment. Place ruler Perpendicular to Center front. Place ruler Perpendicular to Center front.
- 3. Sewn on Ties w/Slits- Measure from slit and seam to end of tie
- 4. Seam w/Ties Measure from end of seam to end of tie
- NOTE: Measure to longest point of tie or lowest point of tie curve.




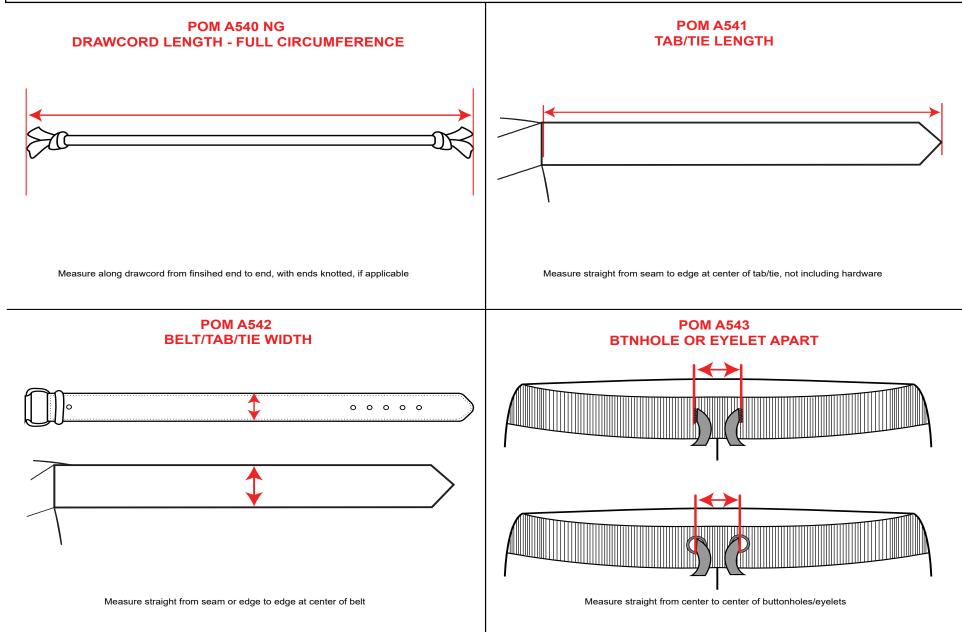




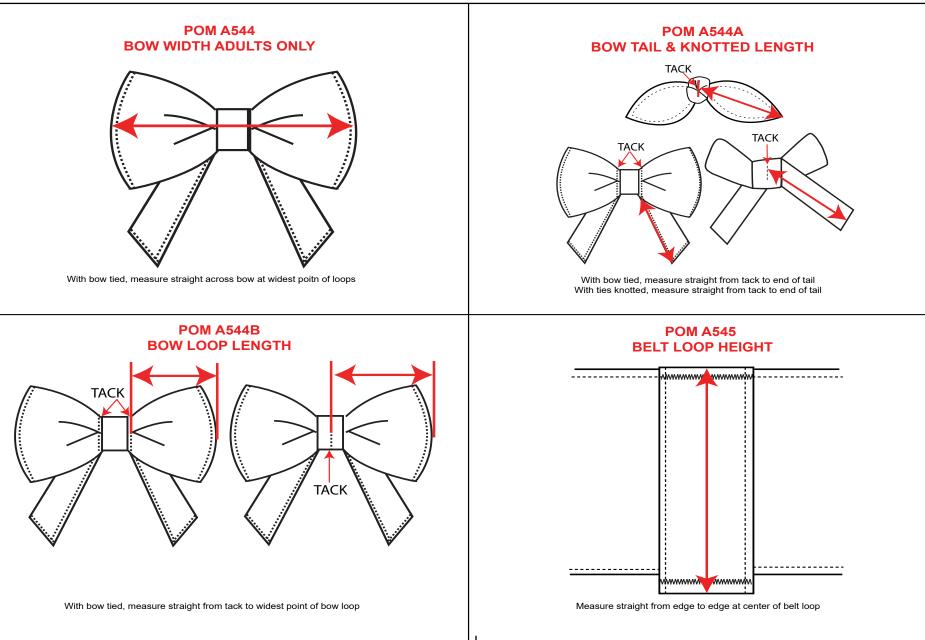




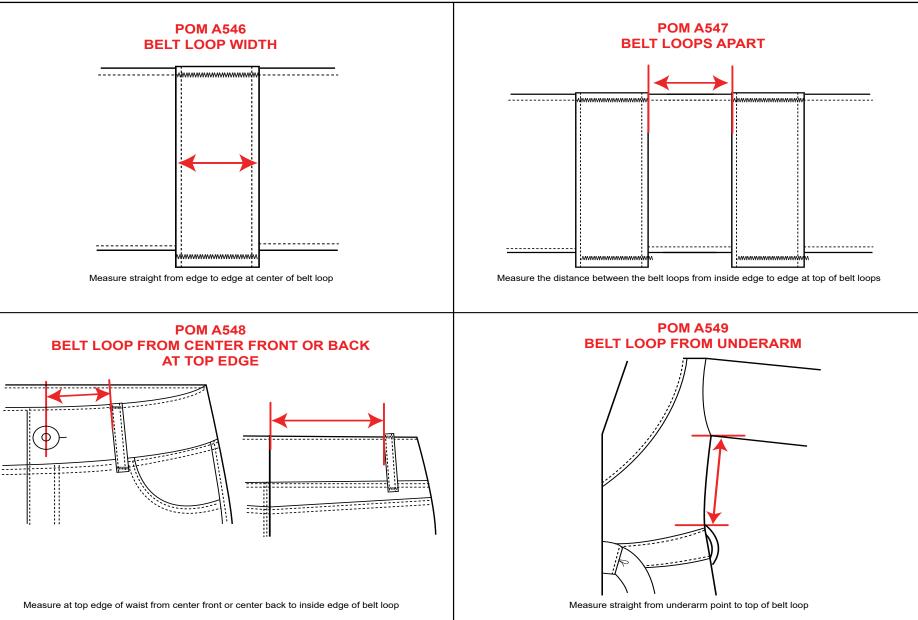




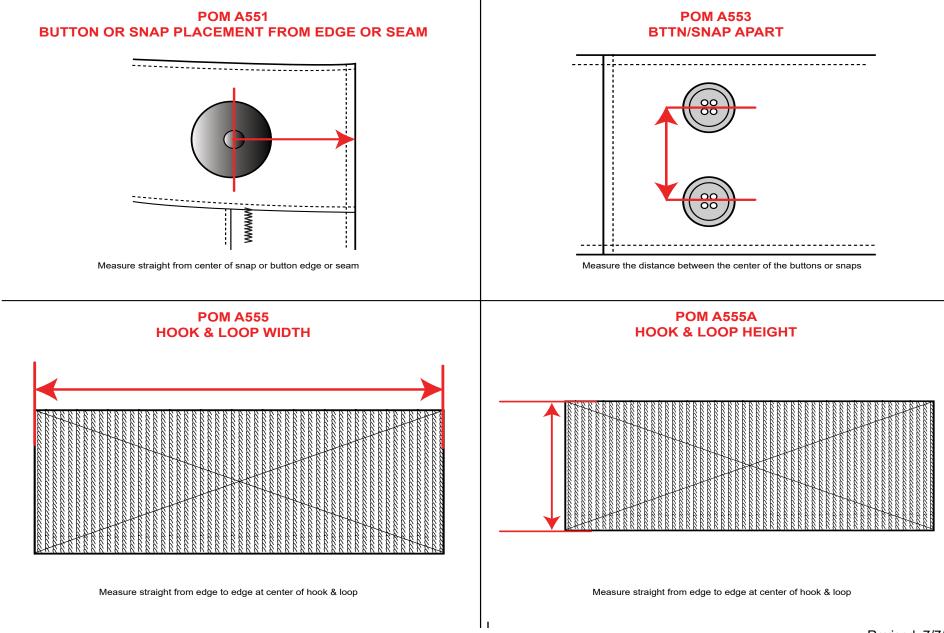



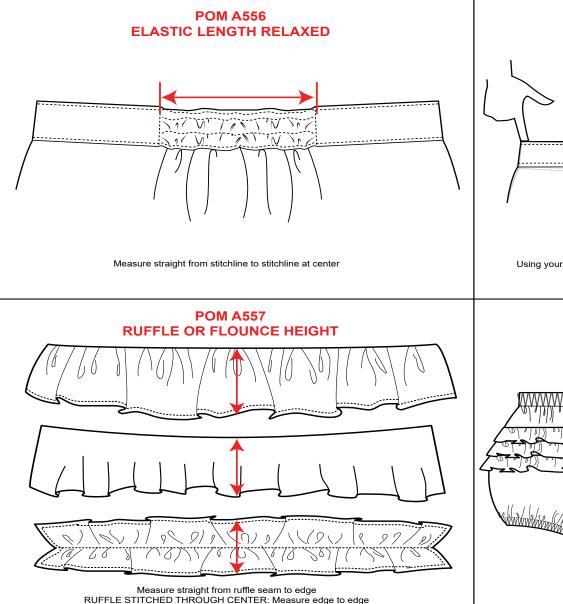


POM A556A ELASTIC LENGTH EXTENDED

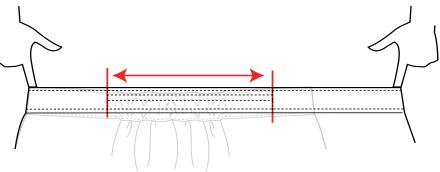


Using your index fingers, extend the elastic to maximum width without breaking stitches Measure straight from stitchline to stitchline at top edge

#### POM A558 RUFFLE OR FLOUNCE PLACEMENT

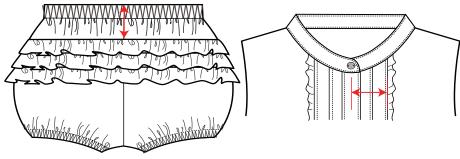


Measure straight from edge or seam to ruffle seam




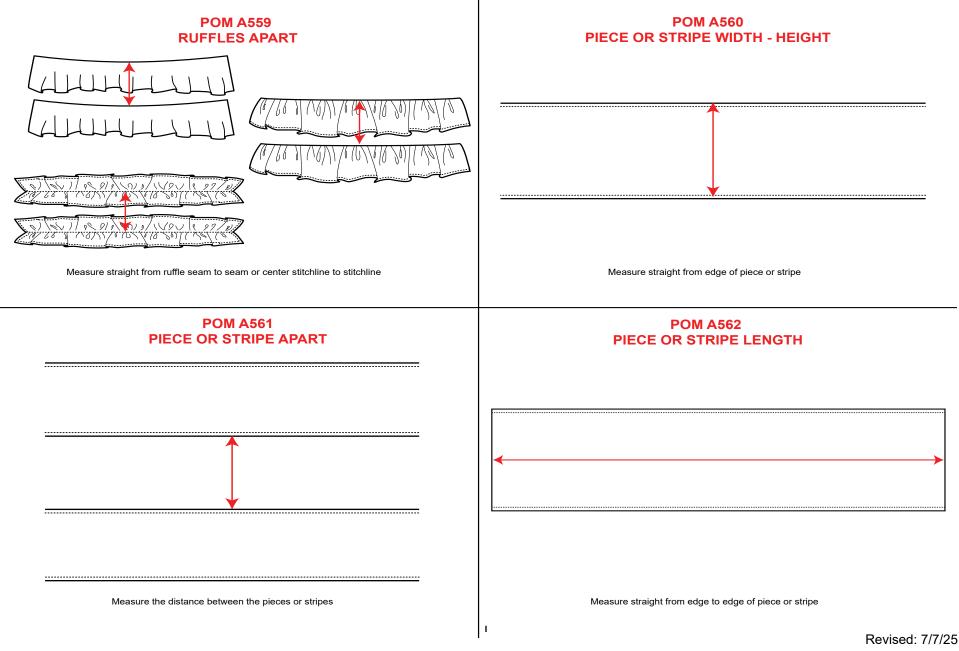



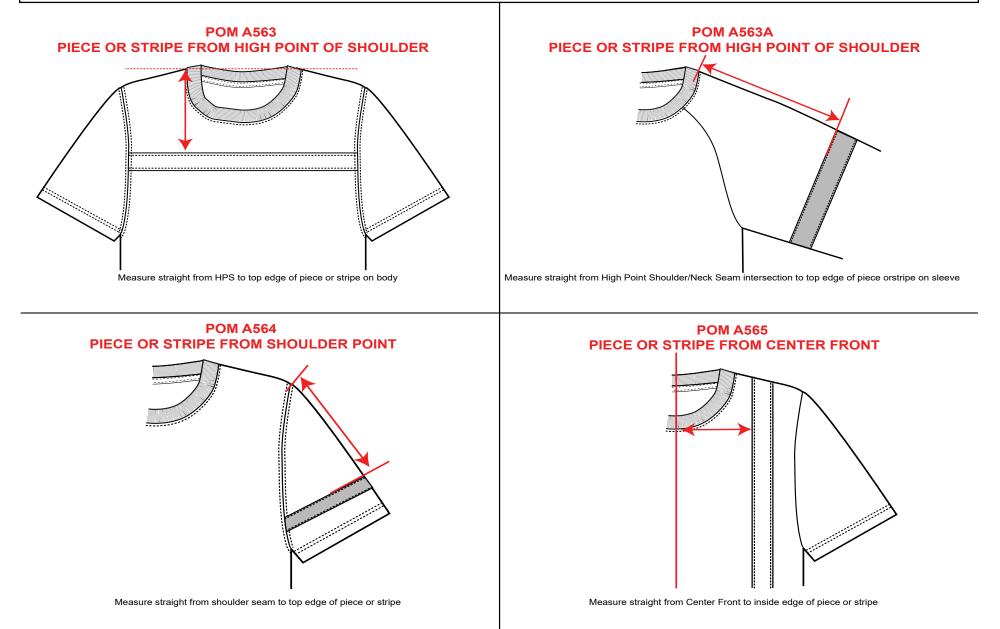



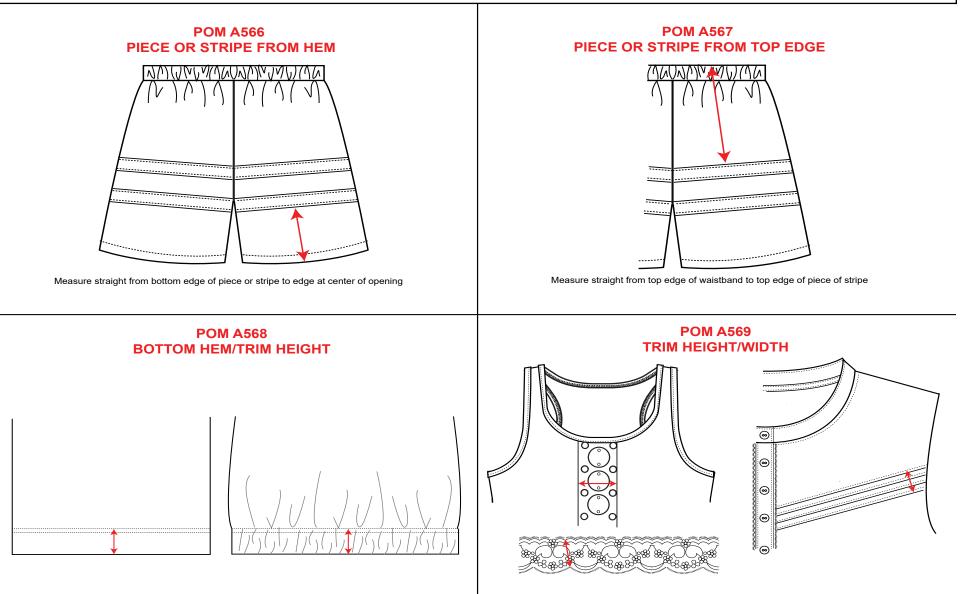


1

Measure straight from edge to edge Lace is measured from low point of scallop to low point scallop


GLOBAL PRODUCT SERVICES/APPAREL TECHNICAL DESIGN CONFIDENTIALITY NOTICE: This document is property of Kohl's Inc.

Measure straight from top stitchline/seam to bottom edge




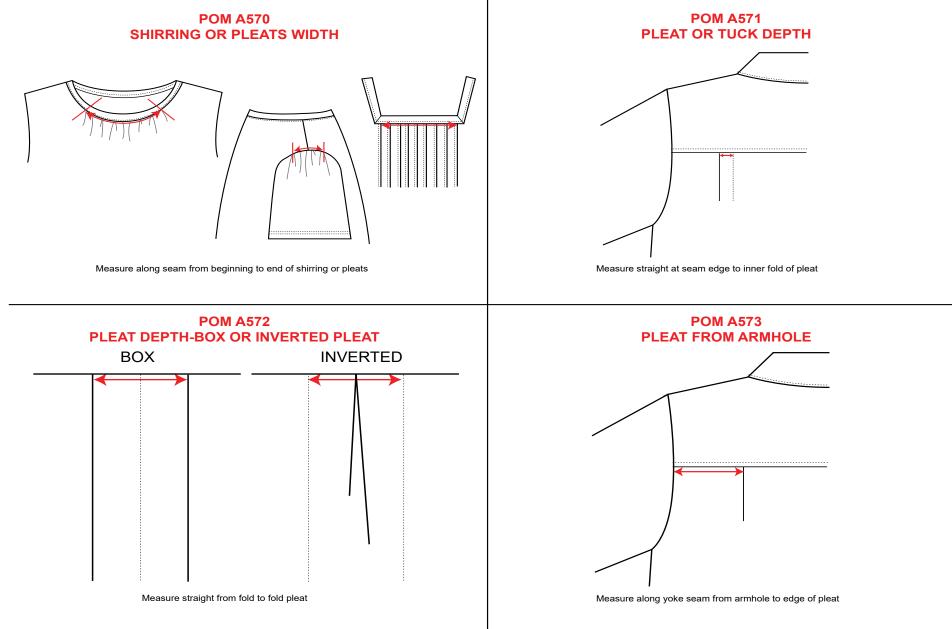



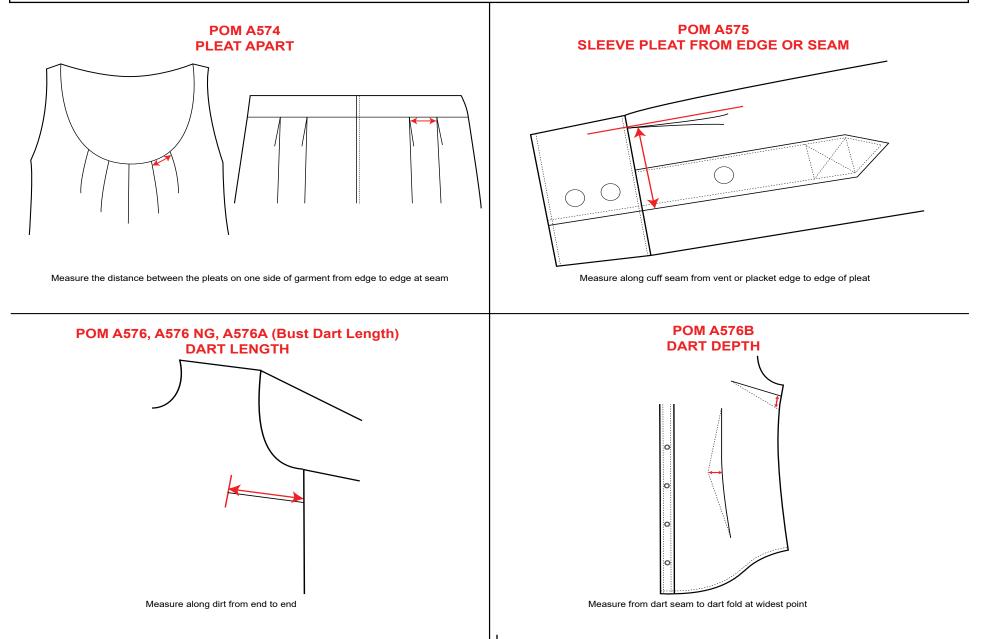




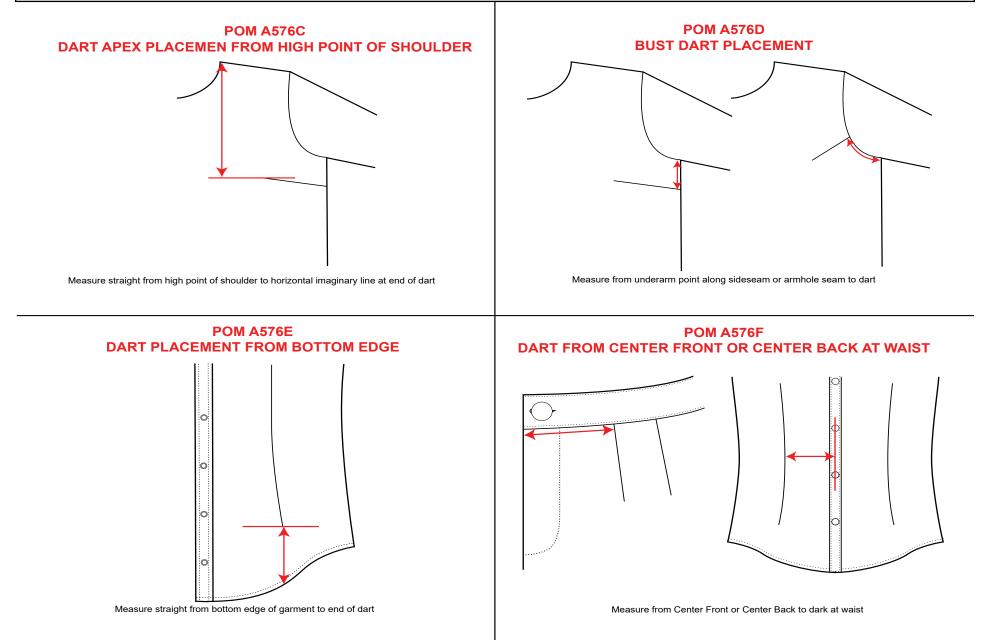


Revised: 7/7/25 111




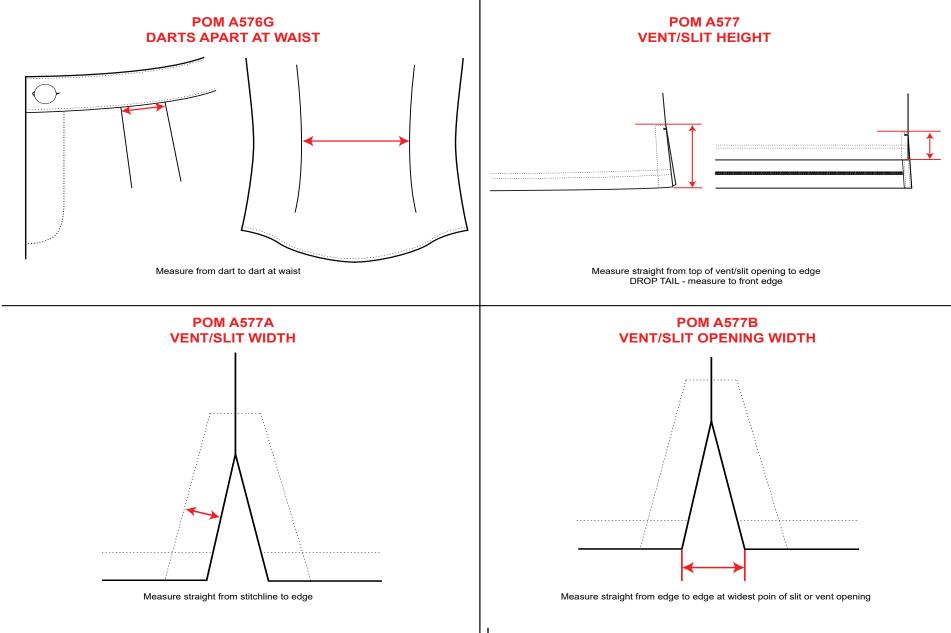




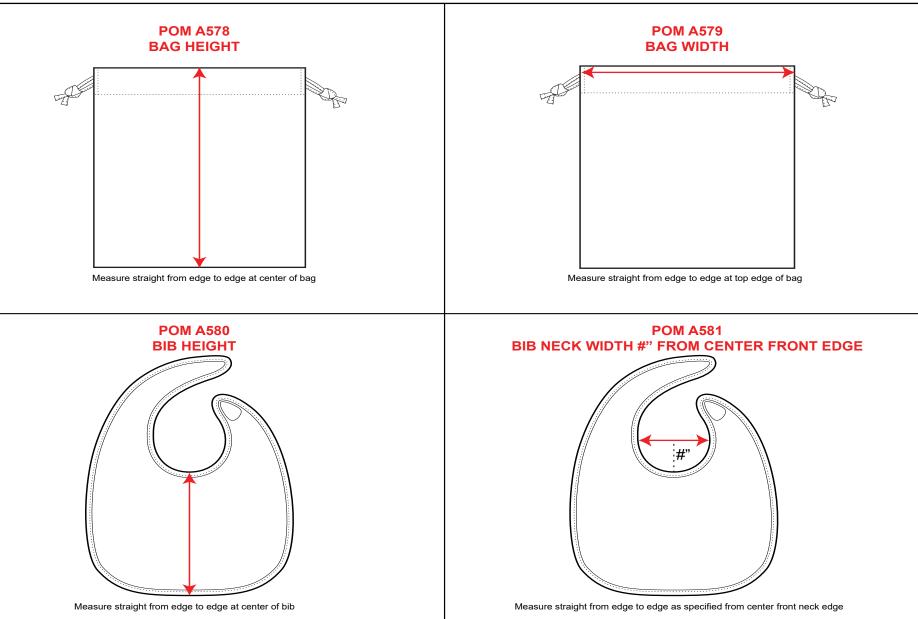




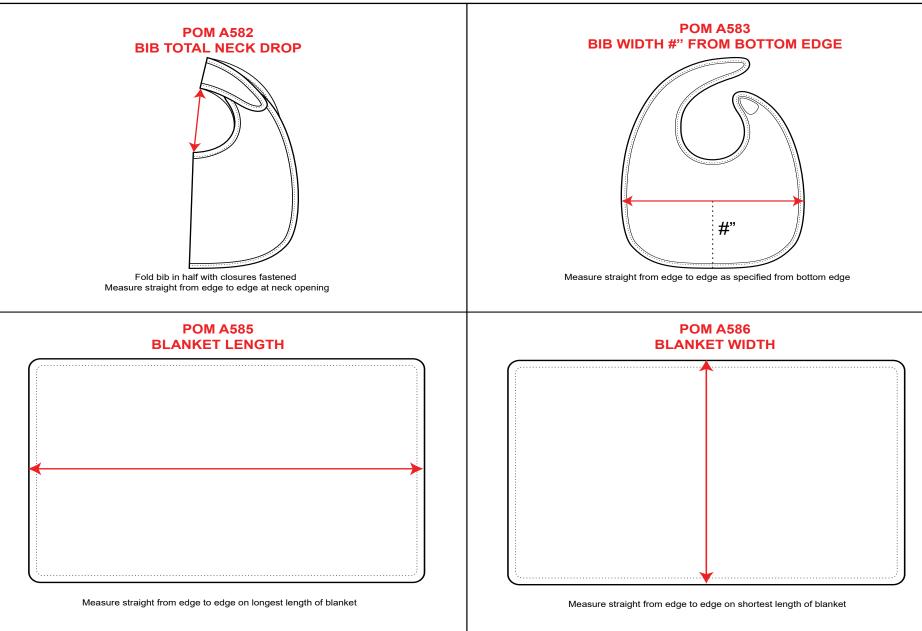




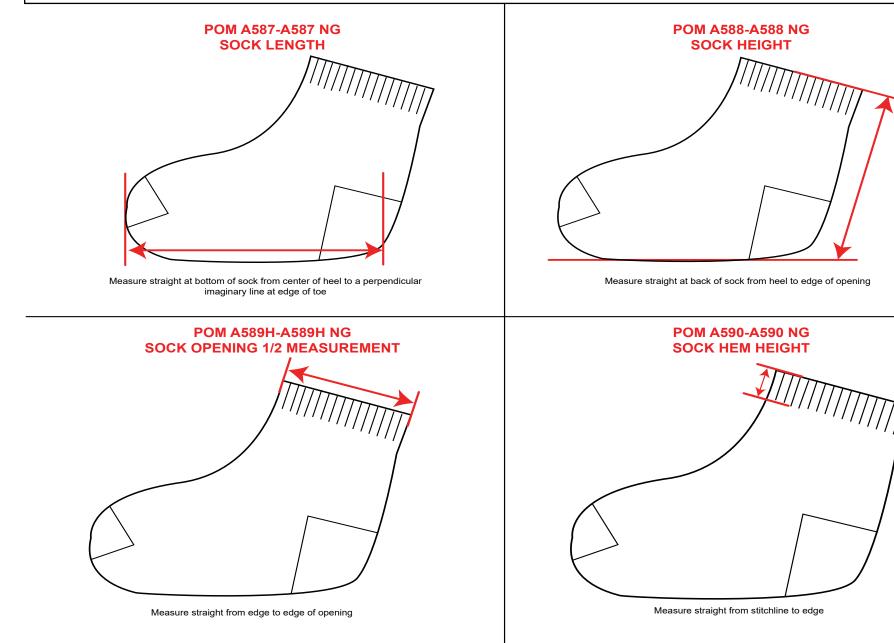




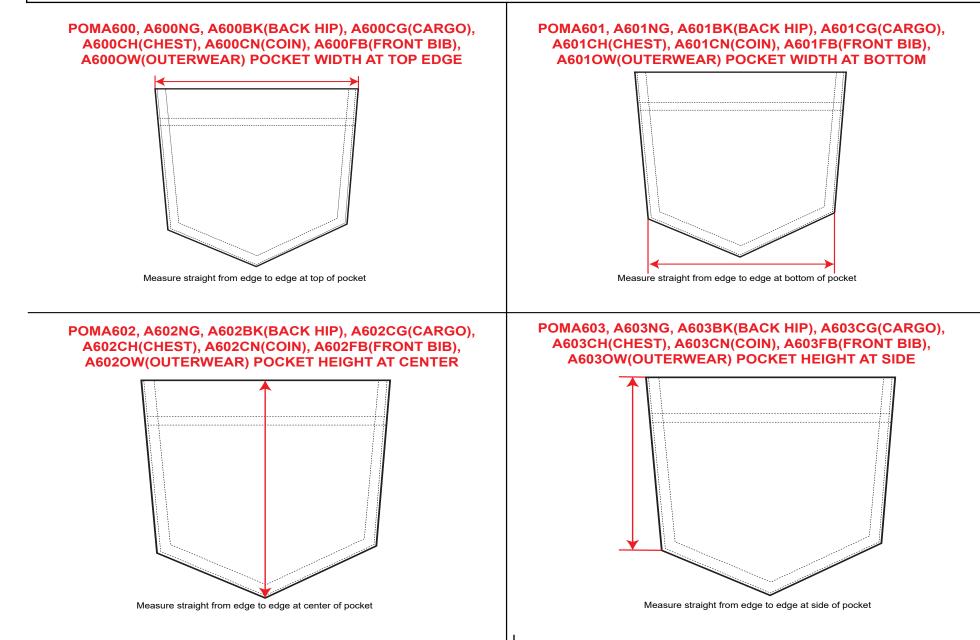



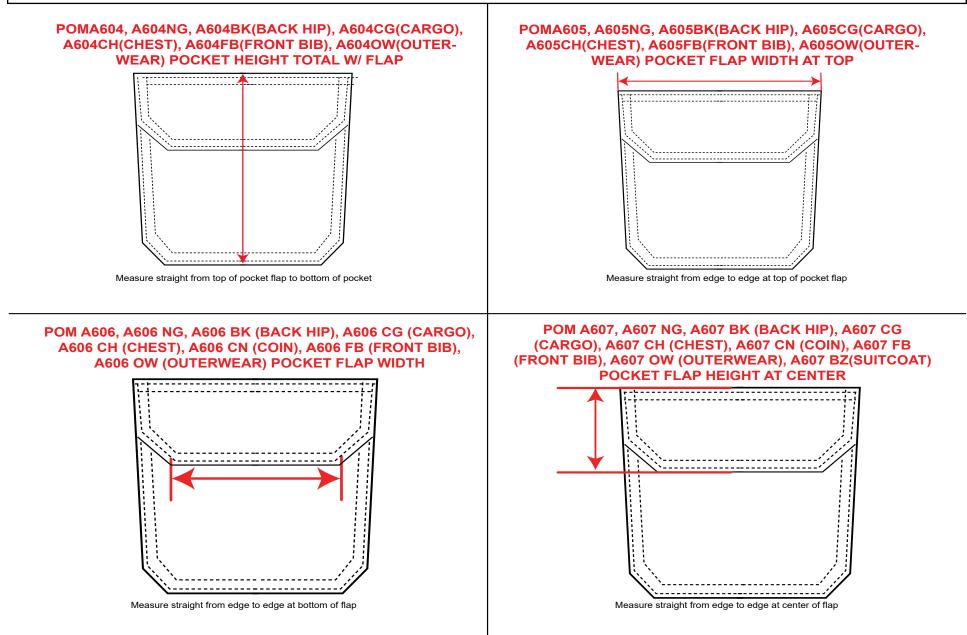




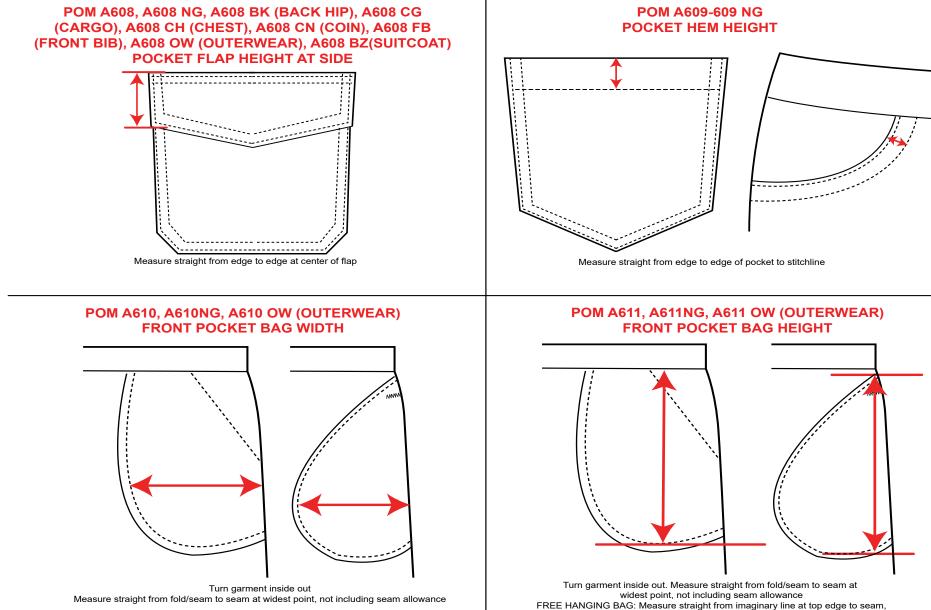


not including seam allowance

Revised: 7/7/25



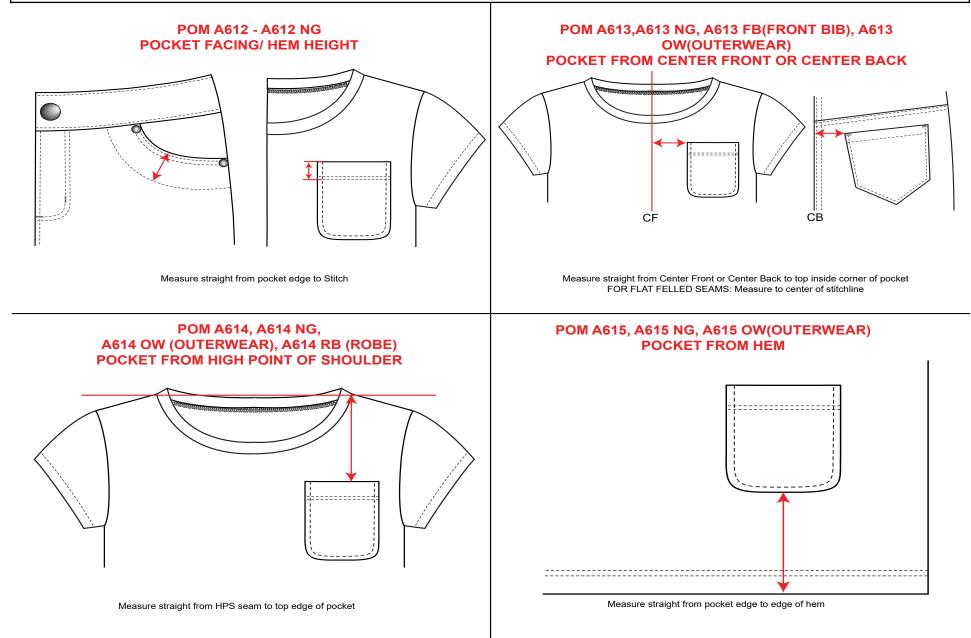



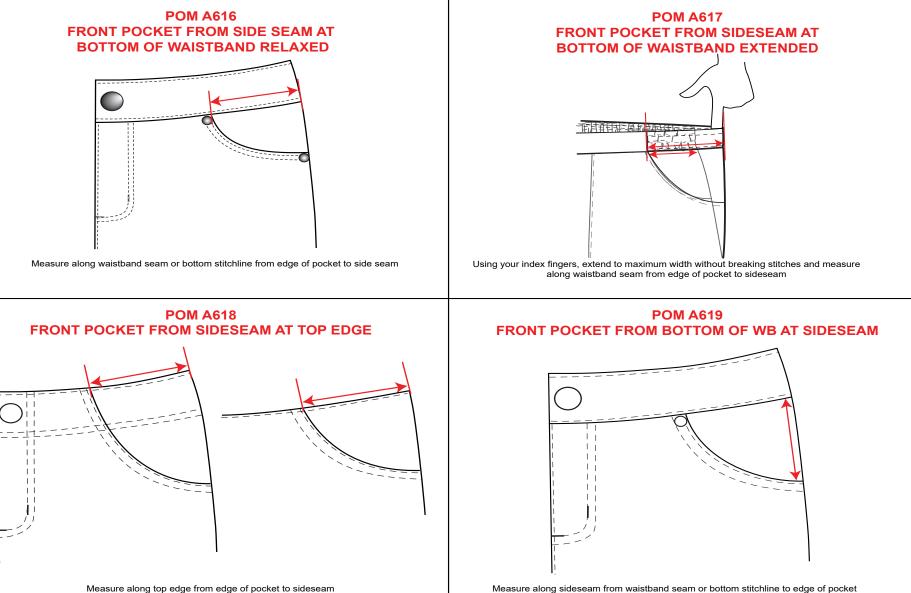


Measure along top edge from edge of pocket to sideseam

Revised: 7/7/25 120




# POM A620, A620 NG FRT PKT FROM TOP EDGE AT SS Ο \*\*\* - -Measure along side seam from top edge to top of pocket POM A622, A622 NG, A622 CN (COIN), A622 CG (CARGO) POCKET FROM BOTTOM OF WAISTBAND FRT PKT FROM TOP EDGE AT SS

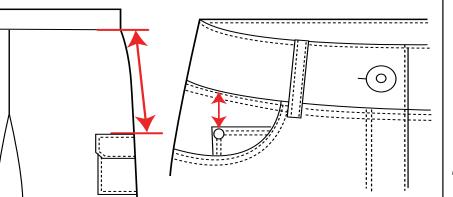


Measure straight from waistband seam or bottom stitchline to top inside corner of pocket


### POM A621, A621 NG, A621 CN (COIN), 621 CG (CARGO) POCKET FROM SIDE SEAM

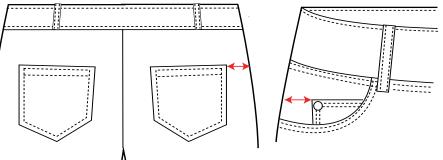

Measure straight from top outside corner of pocket to sideseam


### POM A623, A623 CG (CARGO), A623 FB (FRONT BIB) POCKET FROM TOP EDGE

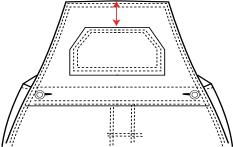

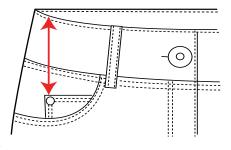


Measure straight from top edge to top inside corner of pocket



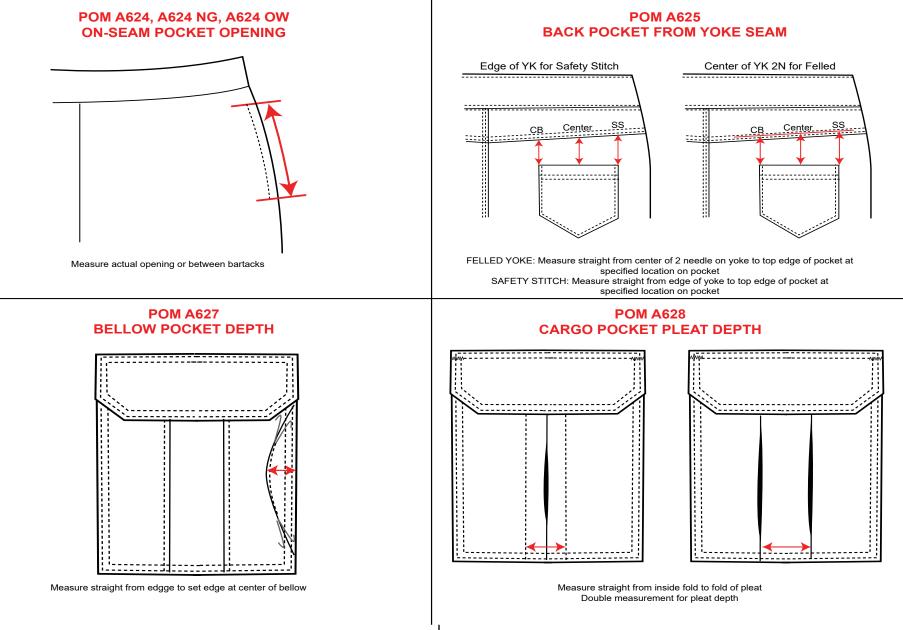




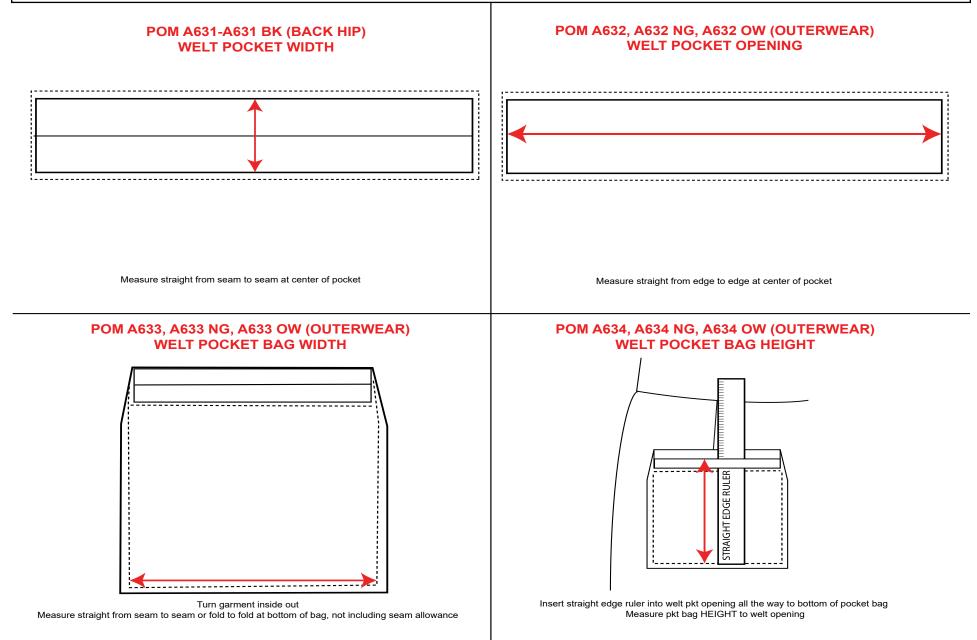





### POM A635, A635 NG, A635 OW (OUTERWEAR) **KANGAROO POCKET WIDTH AT TOP EDGE**

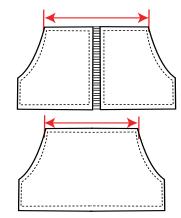

Measure straight from edge to edge at top of pocket


### POM A637, A637 NG, A637 OW (OUTERWEAR) **KANGAROO POCKET HEIGHT AT CENTER**

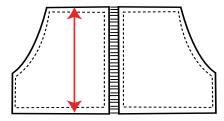

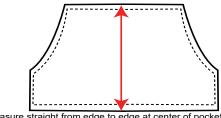


Measure straight from edge to edge at center of pocket


### POM A636, A636 NG, A636 OW (OUTERWEAR) **KANGAROO POCKET WIDTH AT BOTTOM EDGE**

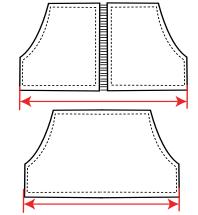

Measure straight from edge to edge at bottom of pocket

#### POM A638, A638 NG, A638 OW (OUTERWEAR) **KANGAROO POCKET HEIGHT AT SS**

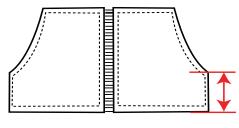


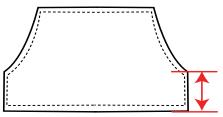


Measure straight from edge to edge at side of pocket



### POM A639, A639 NG, A639 OW (OUTERWEAR) KANGAROO POCKET WIDTH AT WIDEST POINT

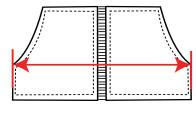

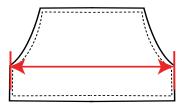

Measure straight from edge to edge at widest point of pocket