

Kohl's Home Textiles

Label Placement

600 - Bedding Products

KOHĽS


Table of Contents

Sheets	03
Bedskirt	09
Comforter	10
Comforter Cover	12
Blankets	13
Pillow Cover	19
Bedding – Mattress Pad	24
Bedding – Dec Pillow / Neckroll	25
Bedding – Pillow Form	28
Bedding – Pillow – Utility	30

Please visit K-Link for information regarding:

Law Label

Back View

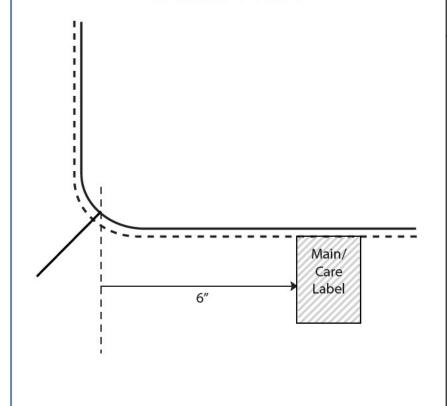


601 - Bedding Sheets - Fitted Hem Casing

Main/Care Label:


Back, inside, bottom, inserted in hem, 6" from left corner pocket with elastic fully extended.

Back View

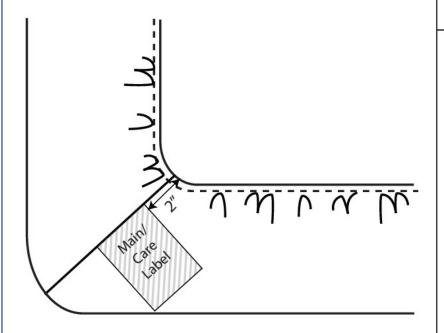

601 - Bedding Sheets - Fitted Pocket Seam


Main/Care Label Back, inside, bottom left corner, inserted in pocket seam, 2" from elastic hem.

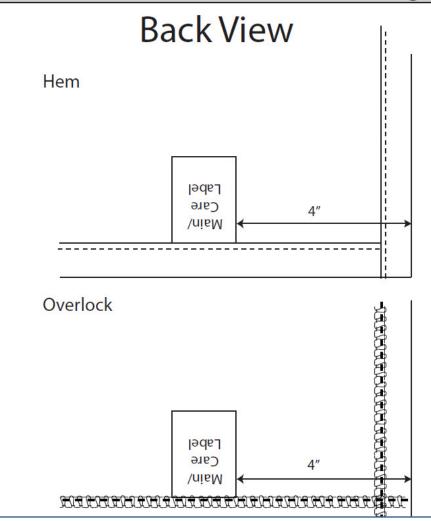

601 - Bedding Sheets - Flat Bottom Hem

Main/Care Label: Back, bottom, inserted in hem, 4" from right corner.

Back View

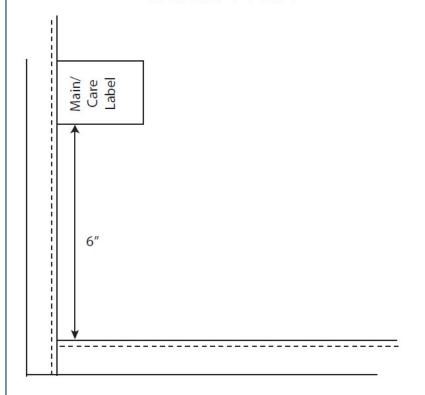


601 - Bedding Sheets - Flat Side Hem

Main/Care Label:

Back, inserted in side hem, 4" up from left bottom corner.

By approval only for this label placement due to equipment.


Inside View

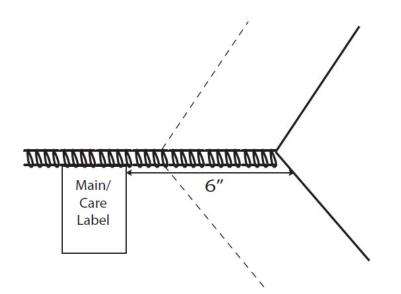

601 - Bedding Sheets - Pillowcase


Main/Care Label: Inside, inserted in side seam, 6" from top edge.

Inside View

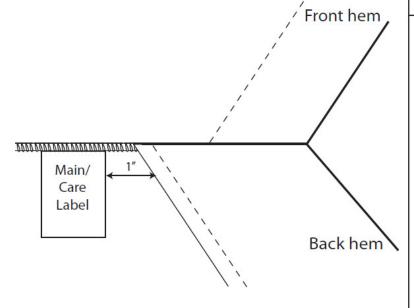

601 - Bedding Sheets - Pillowcase Envelope


Main/Care Label: Inside, inserted in side seam, approximately 1" below bottom hem of envelope enclosure.

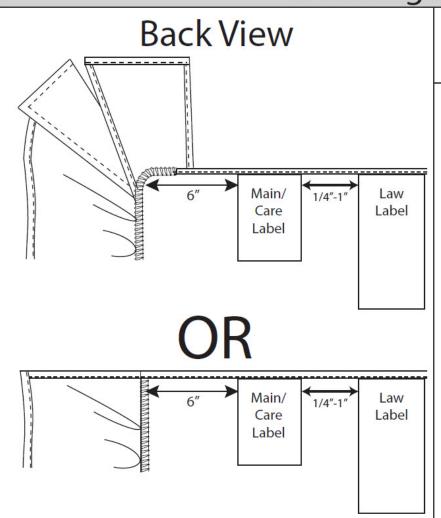

602 - Bedding Bedskirt

Main/Care Label: Back, top edge of platform, inserted in hem, 6" from left joining seam.

Law Label: 1/4"-1" from Main/Care label toward center.

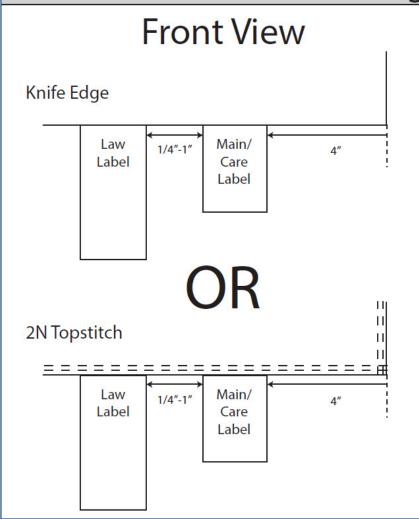

602 - Bedding Comforter - Knife Edge/2N TS

Main/Care Label: Front, bottom, inserted in seam, 4" from right corner.

Law Label: 1/4"-1" from Main/Care label toward center.

Front View **Piping** Main/ Law 1/4"-1" Label Care Label Flange Law Main/ 1/4"-1" Care Label Label

602 - Bedding Comforter - Piping/Flange

Main/Care Label:


Front, bottom, inserted in seam behind piping or flange,

4" from right corner, excluding piping or flange.

Law Label:

1/4"-1" from Main/Care label toward center.

Front View

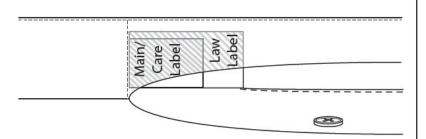

602 - Bedding Comforter Cover - Filled


Main/Care Label:


Front, bottom, inserted in left opening reinforcement.

Law Label:

Stacked under the Main/Care label.



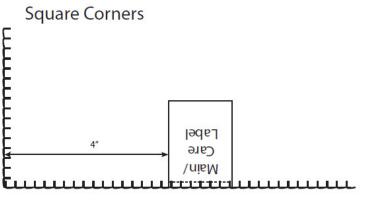

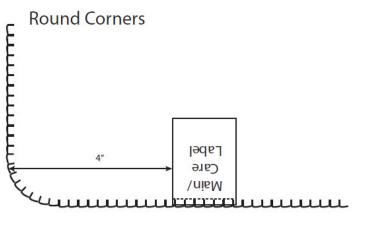

602 - Bedding Hem - Blanket Stitch

Main/Care Label:
Back, bottom, inserted in hem,
4" from left side.

(May be SN LS prior to hemstitch using a ground color thread)

Back View Main/ Care Label

602 - Bedding Hem - Fringe

Main/Care Label: Back, left side, topstitched near edge, 2" above top of fringe.

602 - Bedding


Hem - Knife edge w/ TS Nonfilled


Main/Care Label:

Front, bottom, inserted in seam, 4" from right corner.

Back View

Bottom Last

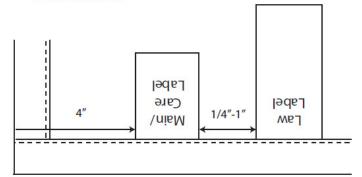


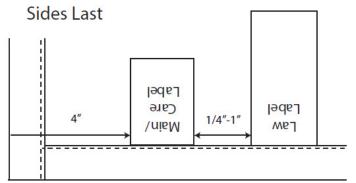

602 - Bedding Hem - Lapped Filled

Main/Care Label: Back, bottom, inserted in hem or binding, 4" from left side.


Law Label: 1/4"-1" from Main/Care label toward center.

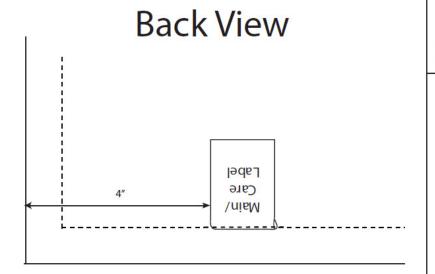


602 - Bedding Hem - Mitered to Face Nonfilled

Main/Care Label:
Back, bottom,
SN LS TS aligned directly over hem stitching,
4" from left side.

Back View

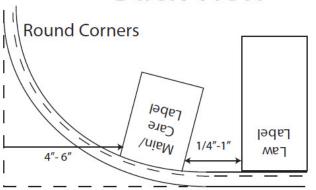

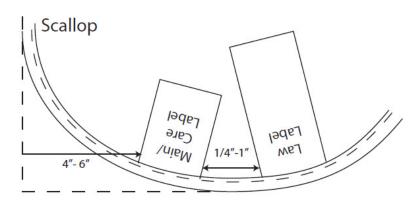

602 - Bedding

Hem - Round Corners/Scallop Filled


Main/Care Label:

Back, bottom, inserted in hem or binding, 4"- 6" from left side.

Law Label:


1/4"-1" from Main/Care label toward center.

Outside View

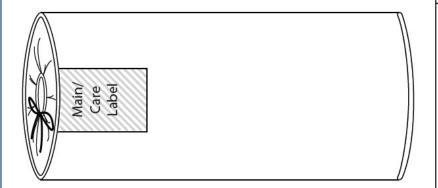

602 - Bedding Pillow Cover - Drawstring Neckroll

Main/Care Label: Inside, inserted in curved seam.

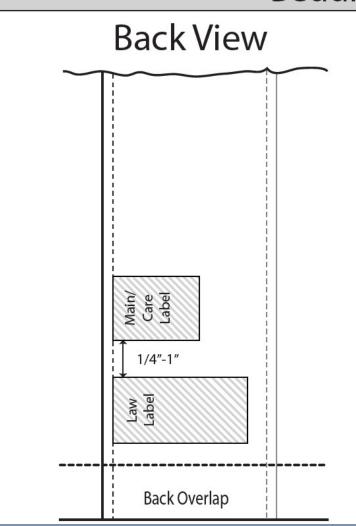

602 - Bedding Pillow Cover - Overlap Filled


Law Label:

Back, inside, bottom, outer overlap, inserted in hem or binding.

(Law label must be visible through packaging)

Main/Care Label: 1/4"-1" above Law label.

Back View

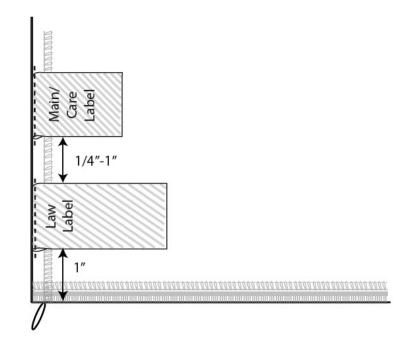

602 - Bedding Pillow Cover - Zipper Filled


Law Label:

Back, inside, inserted in left side seam, 1" up from start of zipper opening.

(Law label must be visible through packaging)

Main/Care Label: 1/4"-1" up from Law Label toward center.

Back View

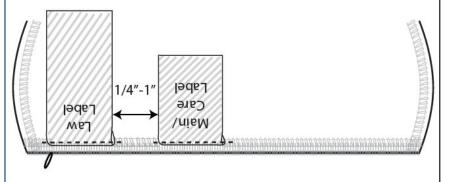

602 - Bedding

Pillow Cover - Zipper Filled Neckroll

Law Label:

Back, inside, left end at zipper opening, attached to seam allowance only.


Do no attach to zipper tape.

(Law Label must be visible through packaging)

Main/Care Label:

1/4"-1" from Law Label toward center attached to seam allowance only. Do no attach to zipper tape.

Back View

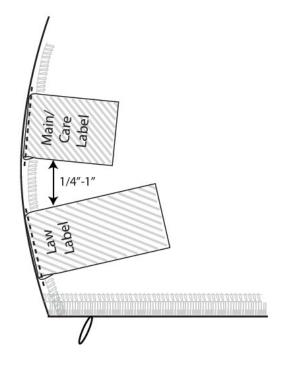

602 - Bedding

Pillow Cover - Zipper Filled Neckroll End

Law Label:


Back, inside, left end, inserted in curved seam, above start of zipper opening.

(Law Label must be visible through packaging)

Main/Care Label:

1/4"-1" up from Law Label toward center.


Back View

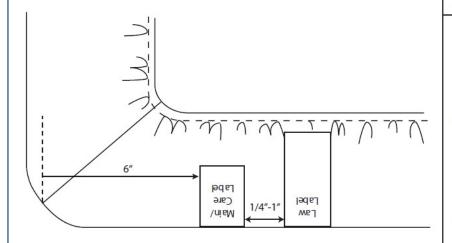

603 - Bedding Mattress Pad

Main/Care Label:
Back, outside, bottom, inserted in platform seam,
6" from left corner.

Law Label: 1/4"-1" from Main/Care label toward center.

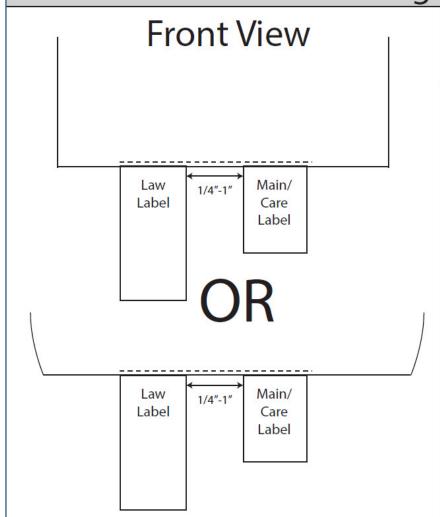

604 - Bedding
Dec Pillow/Neckroll

Main/Care Label:

Front, bottom, inserted in closure seam, centered.

Law Label:

1/4"-1" from Main/Care label OR Stacked.

Front View Care Label Law Label

604 - Bedding Pillow Form - Centered

Law Label:

Front, bottom, inserted in closure seam or opposite closure seam, aligned with pillow cover opening.

(Law label must be visible through packaging)

Care Label:

Front View

Care Label Law Label

604 - Bedding Pillow Form - Offset


Law Label:

Front, bottom, inserted in closure seam or opposite closure seam, near right side.

(Law label must be visible through packaging)

Care Label:

Outside View

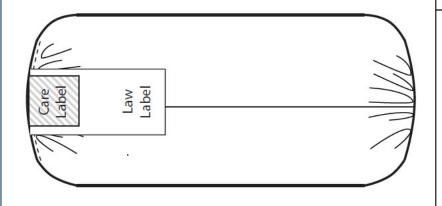


604 - Bedding Pillow Form - Neckroll End

Law Label: End, inserted in curved.

(Law label must be visible through packaging)

Care Label:

Front View

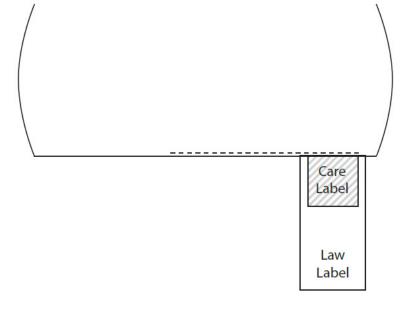

604 - Bedding Pillow Form - Neckroll Offset


Law Label:

Front, bottom, inserted in closure seam near right side.

(Law label must be visible through packaging)

Care Label:

Short Side View

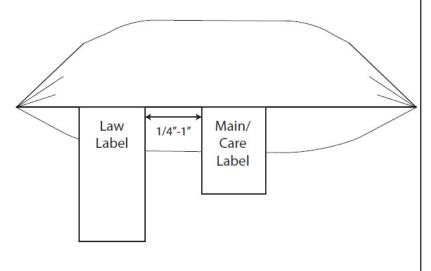

604 - Bedding Pillow - Utility

Main/Care Label:

Short side, outside, inserted in seam, centered.

(either closure or end opposite closure).

(Intergrated UPC/barcode label - layout to be provided w/ packaging info)

Law Label:

1/4"-1" from Main/Care label OR Stacked